

# Fisher-Price®



Keep this instruction sheet for future reference,  
as it contains important information.

Adult set up and battery replacement are required.

Tool required for battery replacement: Phillips screwdriver (not included).

Requires four AA batteries (included).

 
 
Batteries included are for demonstration purposes only.

For longer life, use **alkaline** batteries.

Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to  
a crib or playpen according to the instructions. Check frequently.


## GJD44

# REPLACE BATTERIES

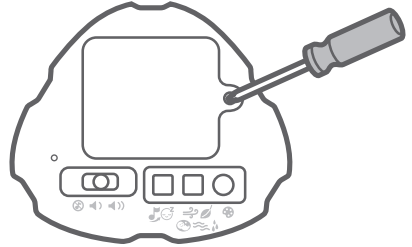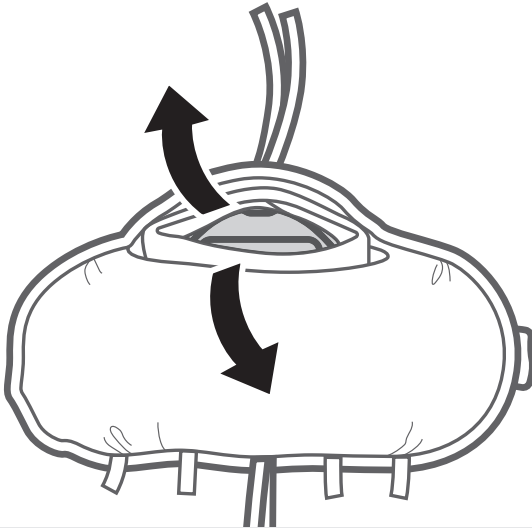


- Open the fasteners and pull to remove the electronic unit.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Remove the exhausted batteries and properly dispose.
- Insert four, new AA (LR6) **alkaline** batteries.

 - Replace the battery compartment door and tighten the screw. Do not over-tighten.
- When sound or light from this toy become faint or stop, it's time for an adult to change the batteries.
- You may need to reset the electronics if this toy begins to operate erratically. Remove the batteries and reinstall them.

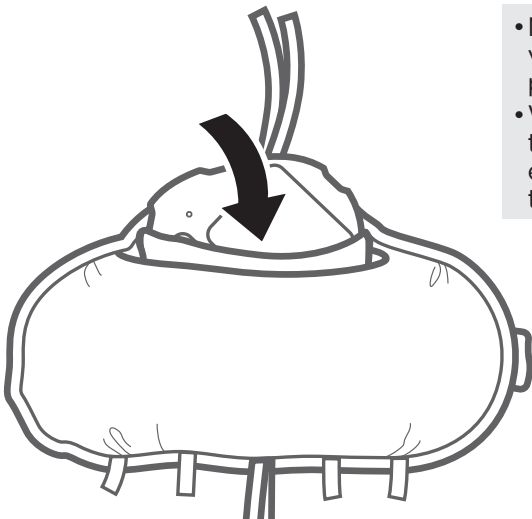

- Make your music/sounds/light and volume level selections. See next page for more information.
- With the speaker/button facing the front of the soother, fit the electronic unit inside and close the fasteners.

# CRIB ATTACHMENT

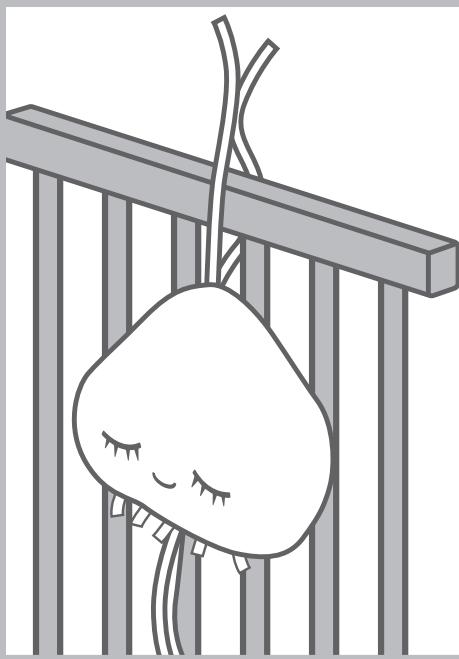 

## **⚠ WARNING**

### **Prevent Entanglement Injury**

This product may not attach to all crib designs. Do not add additional strings or straps to attach to a crib or playpen.

Place the strings at the top of the soother on either side of the crib top rail.

 
Tie the strings around the top rail and a crib spindle in a knot.



 
Do not tie the strings in a bow as they can be easily untied.



# READY, SETTLE, SLEEP™

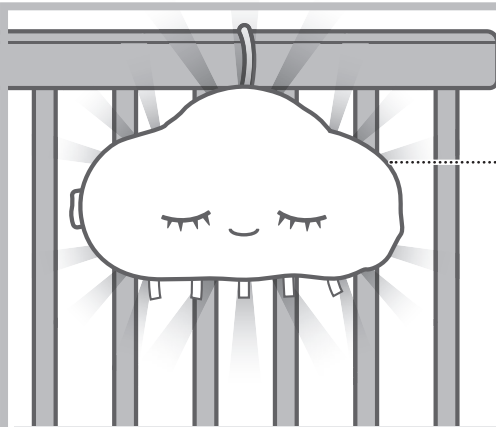

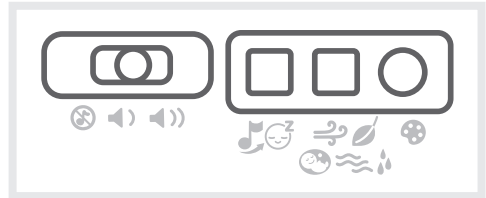


Press soother's nose to activate your selections!  
Press and hold for a few seconds to turn off.



Open the fasteners on the back of the soother to make volume, mode, sounds and light selections on the electronic unit.

## Volume

-  Mute (baby enjoys only a light show)
-  ON with low volume
-  ON with high volume

## Ready, Settle, Sleep™ Playlist

When you select this mode, music, lights, and sounds gradually fade, dim, and then turn off after 20 minutes. Music plays with lights for 5 minutes followed by sounds and lights for the next 5 minutes. The next 10 minutes is sounds only.



 
## Soothing Sounds

Press this button to cycle through five different sound choices: Gentle Wind, Night Forest, Hearbeat, Waves or Rain. Sounds play along with a light show for 10 minutes and then lights turn off. The next 10 minutes is sounds only.

## Lights

Choose a color for lights or select no lights. Press this button to cycle through eight different choices: red, orange, yellow, green, blue, purple, no lights or a preset light show.

# CARE

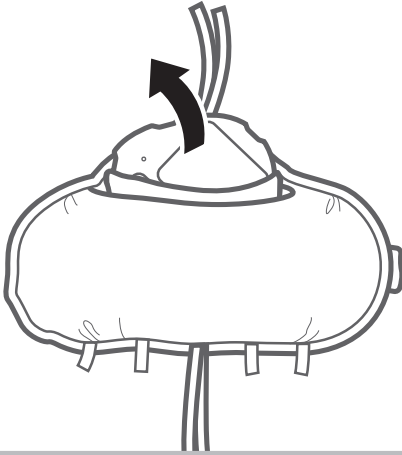

- The soother is machine washable without the electronic unit. Do not immerse the electronic unit.
- Open the fasteners on the back of the toy and remove the electronic unit.
- Machine wash in cold water on the gentle cycle. Do not use bleach. Tumble dry on low heat.
- When replacing the electronic unit, be sure the speaker/button faces the front of the soother.

## Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment (+ and -).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.



service.fisher-price.com

**UNITED STATES:** 1-800-432-5437.

Fisher-Price, Inc., 636 Girard Avenue,  
East Aurora, NY 14052.

**GREAT BRITAIN:** Mattel UK Ltd, Vanwall  
Business Park, Maidenhead SL6 4UB.

Helpline: 01628 500303;

www.service.mattel.com/uk.

Mattel Europa B.V., Gondel 1, 1186 MJ  
Amstelveen, Nederland.

**CANADA:** 1-800-432-5437.

Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2.

**AUSTRALIA:** Mattel Australia Pty. Ltd.,  
658 Church Street, Locked Bag #870,  
Richmond, Victoria 3121 Australia.

Consumer Advisory Service 1300 135 312.

**NEW ZEALAND:** 16-18 William Pickering  
Drive, Albany 1331, Auckland.

**ASIA:** Mattel East Asia Ltd., Room 503-09,  
North Tower, World Finance Centre,  
Harbour City, Tsimshatsui, HK, China.  
Tel.: (852) 3185-6500.

**MALAYSIA:** Diimport & Diedarkan Oleh:  
Mattel Southeast Asia Pte. Ltd., No 19-1,  
Tower 3 Avenue 7, Bangsar South City,  
No 8, Jalan Kerinchi, 59200 Kuala Lumpur,  
Malaysia. Tel: 03-33419052.

**SOUTH AFRICA:** Mattel South Africa  
(PTY) LTD, Office 102 I3, 30 Melrose  
Boulevard, Johannesburg 2196.

**FCC STATEMENT (UNITED STATES ONLY)**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAN ICES-3 (B)/NMB-3 (B)**

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes :

(1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.