 


fisher-price®



GJW33


Before You Begin

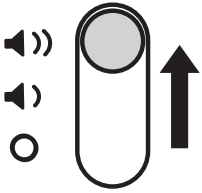

Slide the power-volume switch to: ON with low volume  or ON with high volume  to turn off demonstration mode.



Keep these instructions for future reference, as they contain important information.

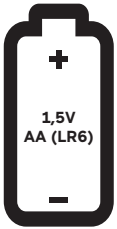

x 5

Requires five AA batteries (included). Batteries included are for demonstration purposes only. Battery replacement is required. Only adults should replace batteries. Required tool for battery replacement: Phillips screwdriver (not included).




To clean, wipe all parts of this toy with a damp cloth. Do not immerse.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.




Replace Batteries

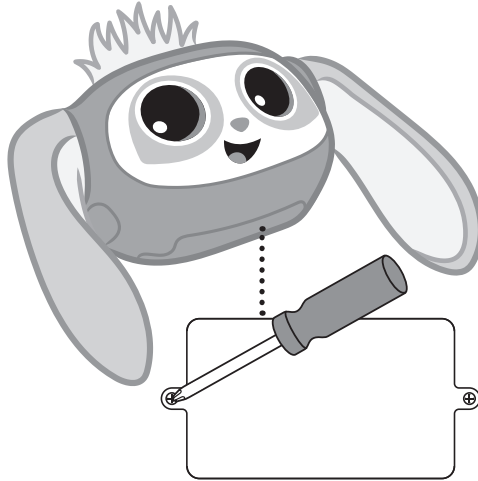

- Loosen the screws in the battery compartment door and remove the door.
- Remove the exhausted batteries and properly dispose.
- Insert five, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power-volume switch off and back on.
- When sounds/lights/movement become faint, slow or stop, its time for an adult to change the batteries.

Choose a Mode

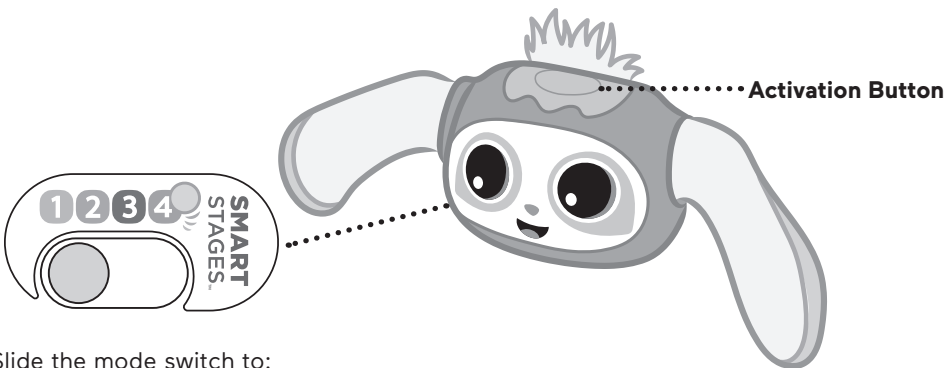

- Slide the mode switch to:
 - 1 **Sit & Play**
 - 2 **Crawl-After**
 - 3 **Dancing & Games**
 - 4 **Play Ball & More**
- After choosing a mode, press the activation button!

4 Levels of Learning Fun!



1 Sit & Play

- Press the activation button for playful activities like peek-a-boo, waving and blowing kisses. There's also fun phrases and songs about colors, numbers and the alphabet!



3 Dancing & Games

- Get ready to dance and groove to the Rovee™ Dance Show or play Freeze Dance to test your little one's listening skills.


2 Crawl-After

- A press of the activation button gets the fun rolling! Rovee™ rolls along, encouraging baby to follow after.
- Press the activation button again for phrases and songs about opposites and shapes.





4 Play Ball & More

- Play games like catch, hide and seek or race to the finish line.
- Rock out and move to the music as you and Rovee™ start your own band!

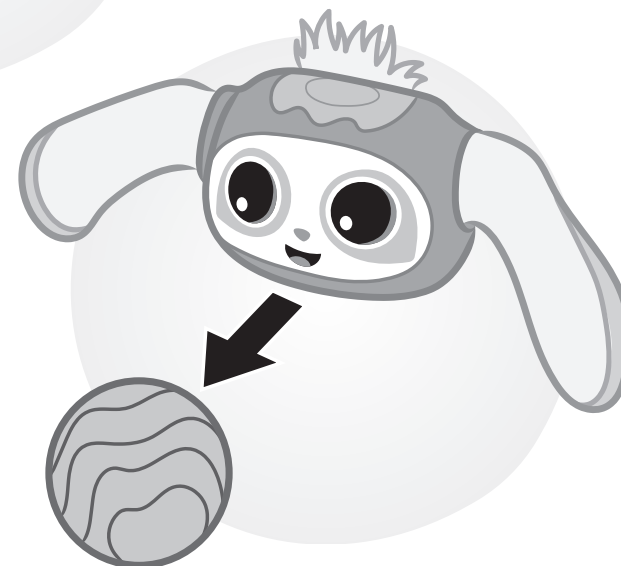

Tip: Rovee™ won't be able to pick up the ball to play catch if you roll the ball. Place the ball directly in front of Rovee™.

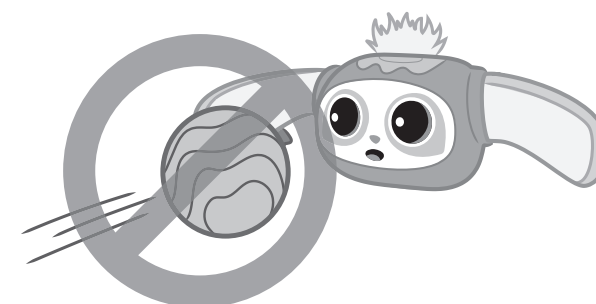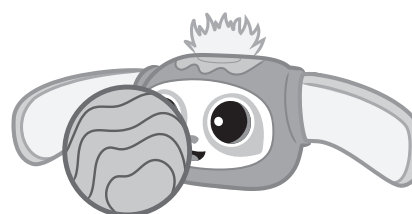

More Tips (You're welcome!)

- Rovee™ loves hugs, but gets a little nervous when lifted off the ground. When you see your little friend's arms rotate, put Rovee™ back on the ground and press the activation button.
- Rovee™ moves around a lot! Use in an open space to limit the things Rovee™ might bump into. Even if Rovee™ runs into something and tips over, Rovee™ is able to turn upright and keep rolling!
- Hmmm, does one of the arms look out of place? Try pressing the activation button to put it back into place.
- Rovee™ has two sensors and doesn't like bright sunlight or florescent lighting. If Rovee™ isn't working properly, try closing the curtains or dimming the lights in the room.
- Rovee™ goes to sleep after about 30 seconds of inactivity. Press the activation button to wake up Rovee™.
- The ball included with Rovee™ is very special, please don't substitute it with another. If the ball is lost, please contact **www.service.mattel.com**.

General Information

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment (+ and -).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

**UNITED STATES**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.

Consumer Services: 1-800-432-5437.

CANADA

Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2

Consumer Services/Service à la clientèle : 1-800-432-5437.

www.service.mattel.com.

GREAT BRITAIN

Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK.

www.service.mattel.com/uk.

NEDERLAND

Mattel Europa B.V., Godel 1, 1186 MJ Amstelveen, Nederland.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121

Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

SOUTH AFRICA

Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

©2020 Mattel.

PRINTED IN CHINA

GJW33-0970-1102322113-DOM

