

Fisher-Price®

wondermakers™
DESIGN SYSTEM

COLOR-FULLS



Maker's Guide GLY26


Ice Cream Cart

Make It Your Own!

1



2

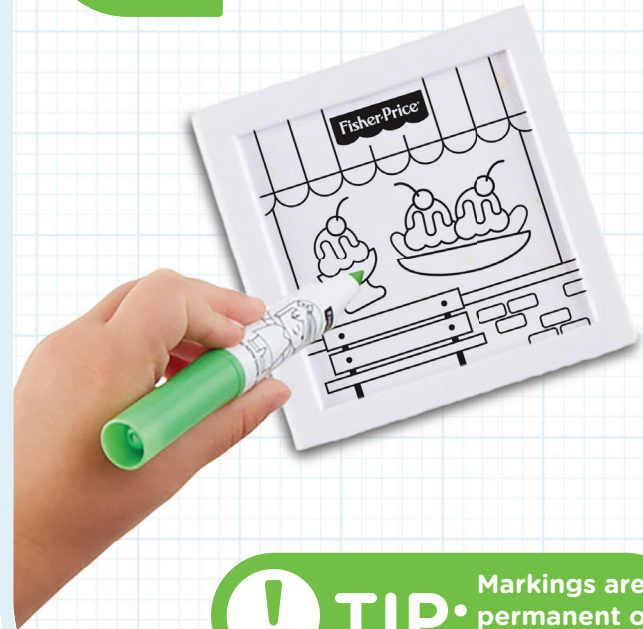

TIP:


Markings are permanent on story panels.

3



- Only fabric parts are washable. To remove markings, wash fabric parts within 48 hours of coloring.
- Markings may be removed by rinsing with water. If markings remain, place fabric parts in a pillow case and machine wash in cold water with a mild detergent on the gentle cycle. Do not use bleach. Do not tumble dry unless all markings are removed because tumble drying can cause markings to set. Tumble dry on low heat.
- Use only the markers included with this set.
- To prevent markers from drying out, be sure to replace the caps after each use.
- Since the markers may stain other fabrics and surfaces, we recommend placing newspaper or other protective covering over the play area before coloring. Avoid contact with carpet, clothing, walls and furniture.
- If you do notice staining on other surfaces, try using an alcohol-based hand sanitizer to remove. We recommend that an adult apply a small amount of hand sanitizer to a paper towel, tissue or cotton swab and then wipe the stain. Be sure to test the use of hand sanitizer in an inconspicuous area first.
- To remove markings from skin, use soap and water.

INCLUDES

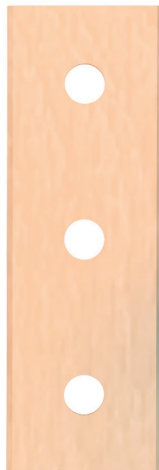


x3



x2



TIP: Sort the parts before building.

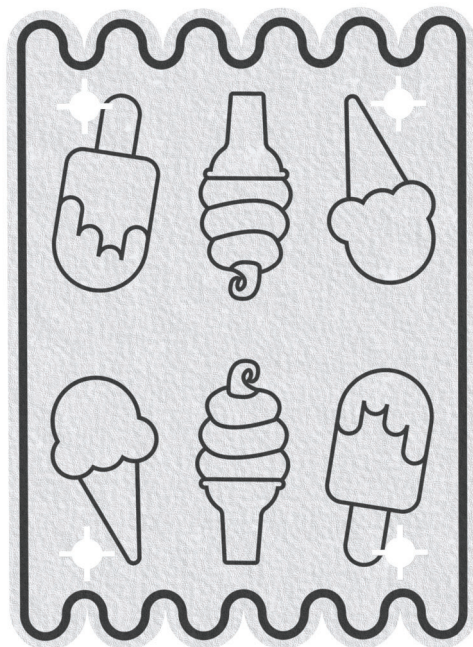




Plastic and wood parts are surface washable only with a damp cloth. While the story panels are intended to be colored, markings are not removable.



WARNING:

CHOKING HAZARD – Small parts.
Not for children under 3 years.

TIP: It's easier to build on hard surfaces.

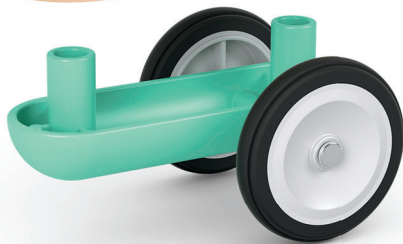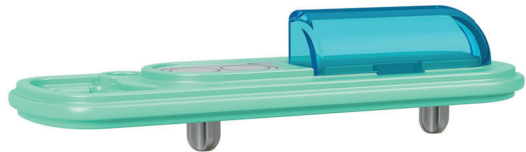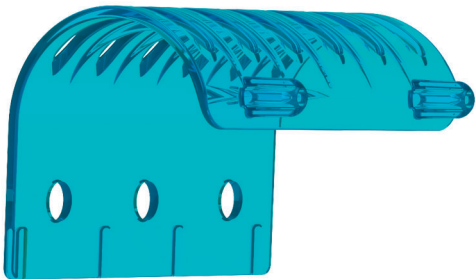

x2



INCLUDES 4 MARKERS





Store Front




! TIP: When you see two sided arrows $\longleftrightarrow$, you can assemble the parts from the top or the bottom!



1

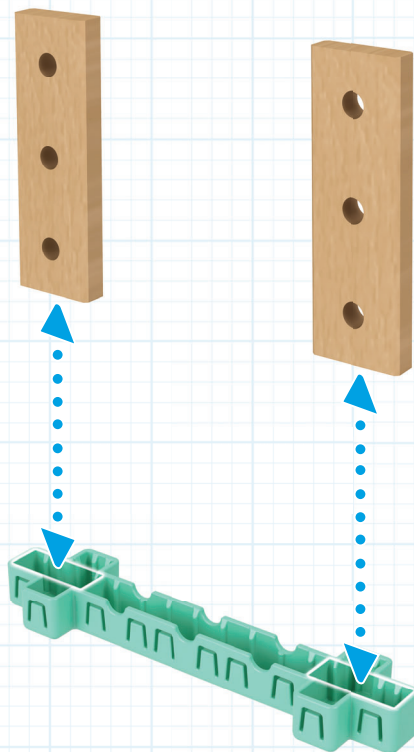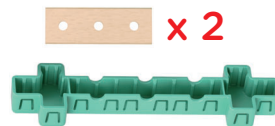


2

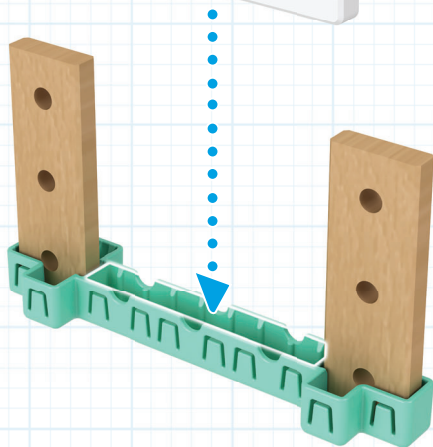

3

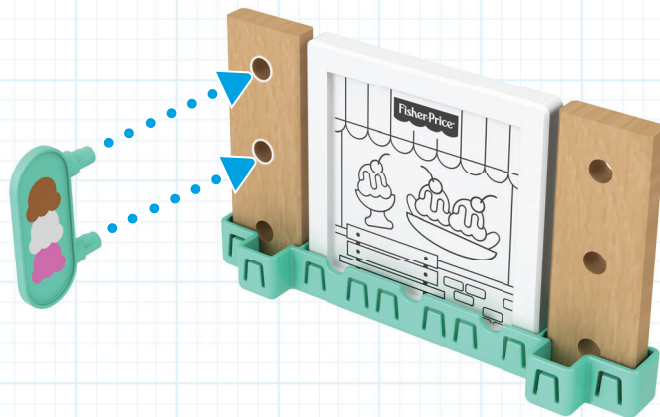 


4

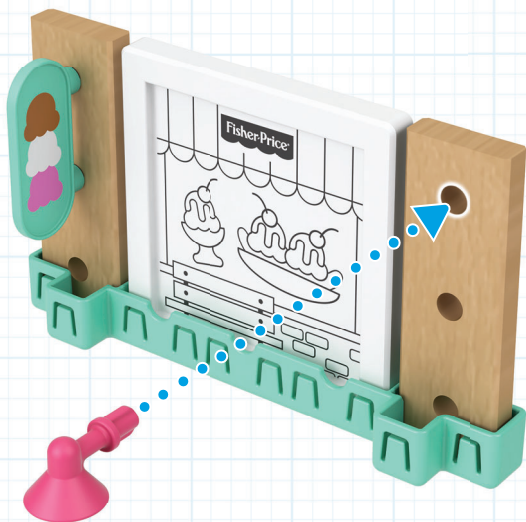


Ice Cream Cart




5

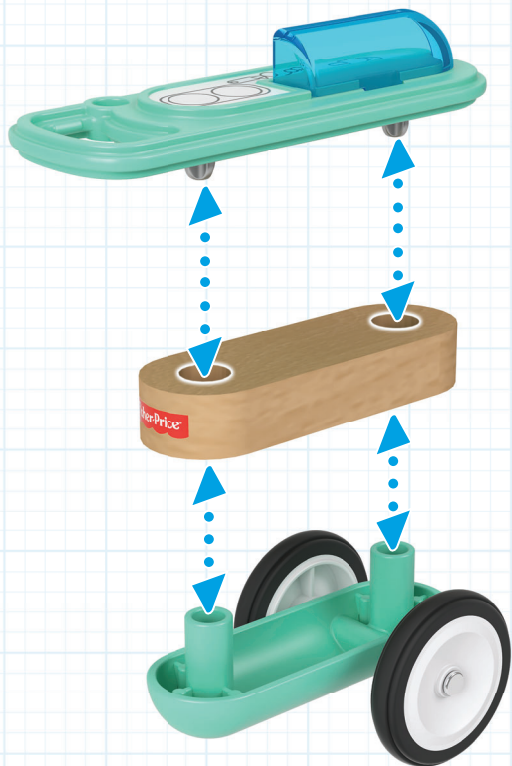


6

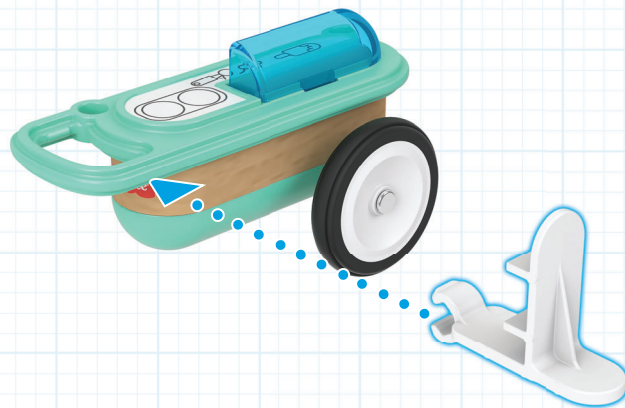


7

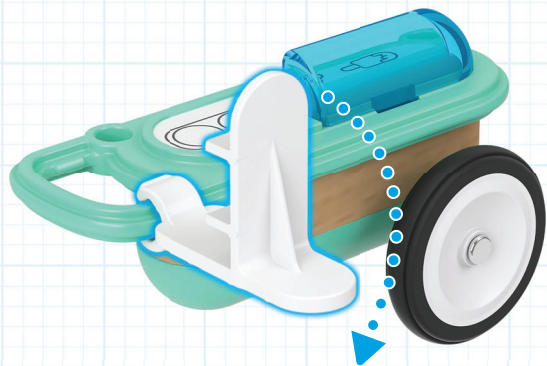


8

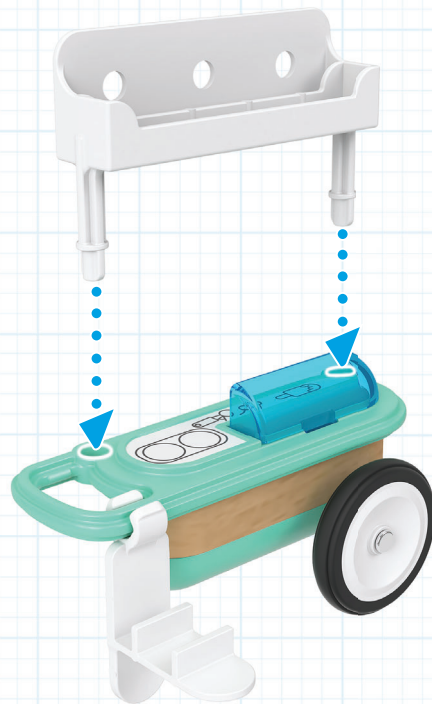



9

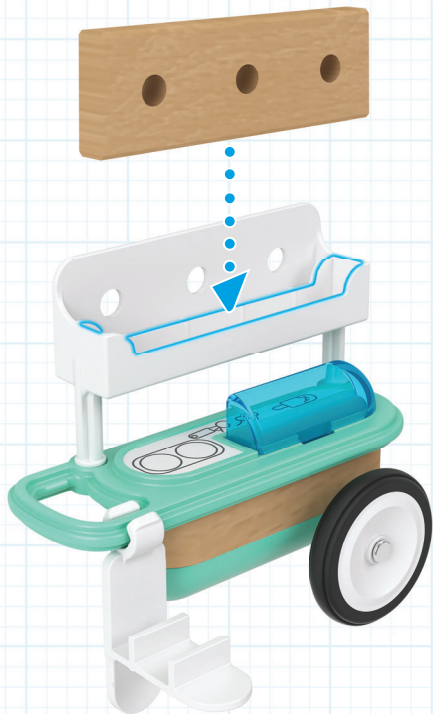


10

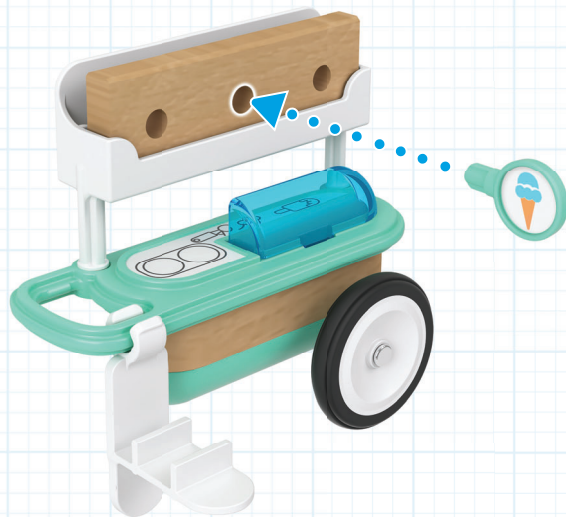


11

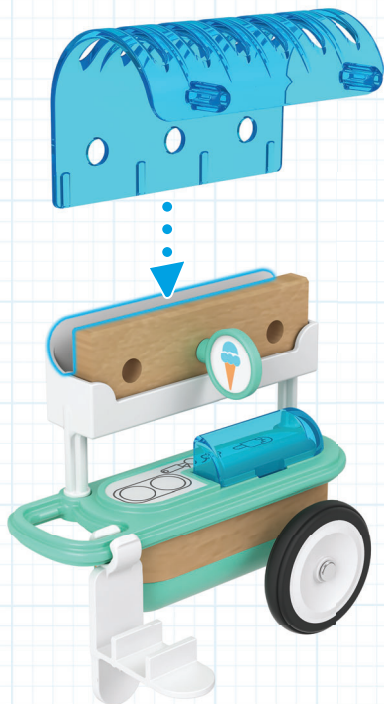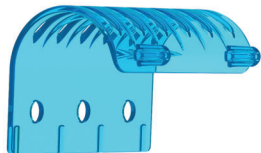


12

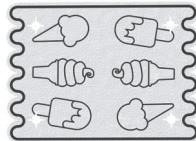

13

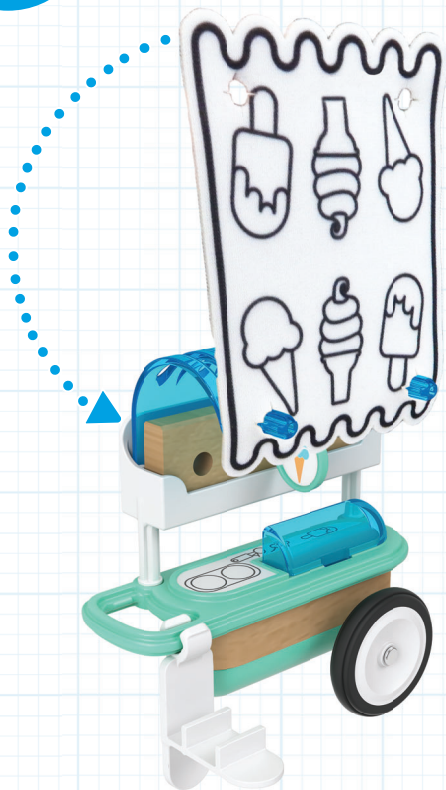

14

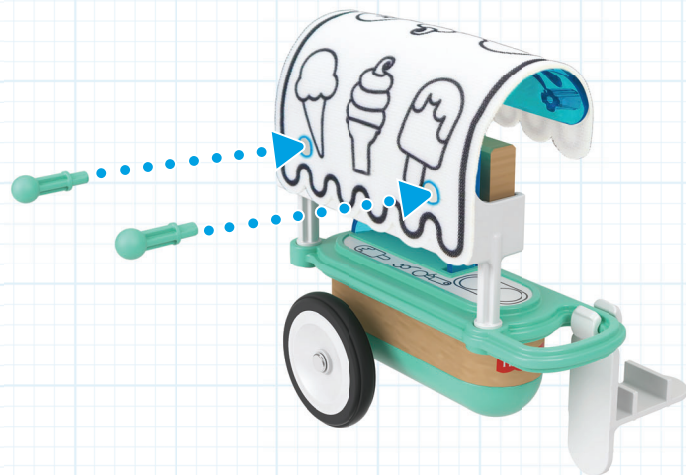



! TIP: Extra building parts are included to customize and create your own design.

You did it!



UNITED STATES: 1-800-432-5437. Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303; www.service.mattel.com/uk.

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

CANADA: 1-800-432-5437. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500.

MALAYSIA: Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-33419052.

SOUTH AFRICA: Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

DESIGN. EXPLORE. IMAGINE EVEN MORE!™



Subject to availability.





FXG14
Build Around Town™
Starter Kit



GGV82 Slide & Ride Schoolyard

**Get the creativity
rolling!**



GGL52
ATV



GFJ20
Airplane



GGL53
Sports Car



GGL51
Classic Car



GFP84
Off-Road 4x4



GFJ21
Camper

Subject to availability.



GFJ10 Soft Slumber Campground™



GFJ13 Beach Bungalow



GFJ14 Special Delivery™ Depot



GFP81
Build it Out! Track Pack™





WONDER WHAT YOU CAN MAKE NEXT



#ShareYourDesign

Thank you for choosing
Wonder Makers™ Design System!

fisher-price.com/wondermakers

©2019 Mattel. PRINTED IN CHINA.
GLY26-0970
1102251814-DOM

Fisher-Price®

