

fisher-price

Little  
People®



GMJ12

Launch & Loop Raceway!

# BEFORE YOU BEGIN



Keep these instructions for future reference as they contain important information.

 


Adult assembly is required (because we need to fit this toy in the box). You'll need a Phillips screwdriver (not included) for assembly and battery installation.



**45**

Set aside about 45 minutes for assembly.



**x2**

Two AA (R6) batteries are included. Batteries included are for demonstration purposes only. Battery replacement is required. For longer life, use **alkaline** batteries.



Clean with a damp cloth.

 
 
 
 
 
Do not immerse.

 


Track pieces are numbered! Look for the numbers on the underside of the track when assembling.

Some of the track piece are designed to easily break away, just in case your little one decides to climb on the product. You can easily reassemble these track pieces.

# PARTS

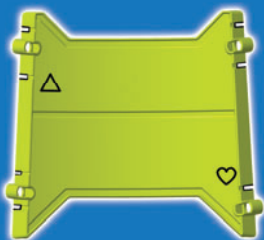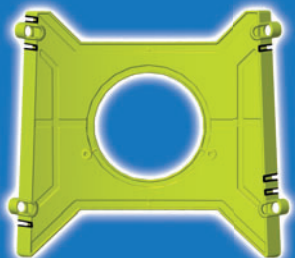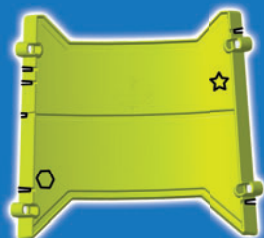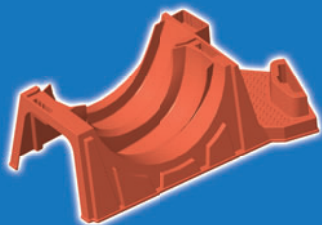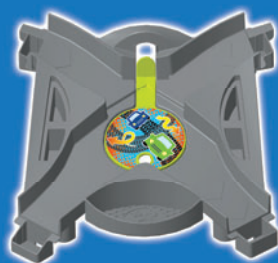

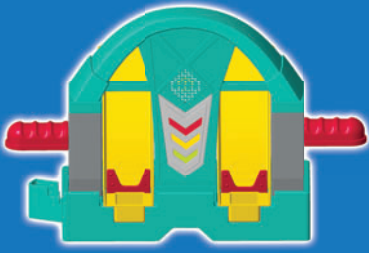



**⚠ CAUTION**

This package contains small parts.  
For adult assembly only.

Each track piece is numbered. Look for numbers on the underside of all of the tracks!



1



2



3



4



5



6



7



8



9



 
 
10

# ASSEMBLY




Use your smart device to scan the code. No app required! In camera mode, focus on the code. Then tap the pop-up to watch how to assemble the toy. Or visit: [fisher-price.com/assembly/GMJ12](https://fisher-price.com/assembly/GMJ12)

1.

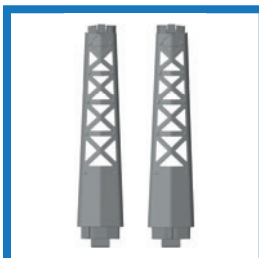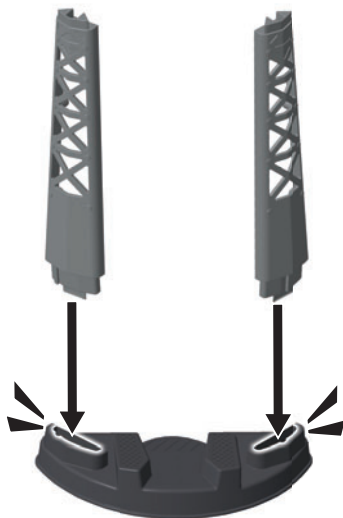


The taller risers are designed to fit the sockets in the base one way. If a riser doesn't seem to fit, turn it around or try assembling to the other socket.

# 2.

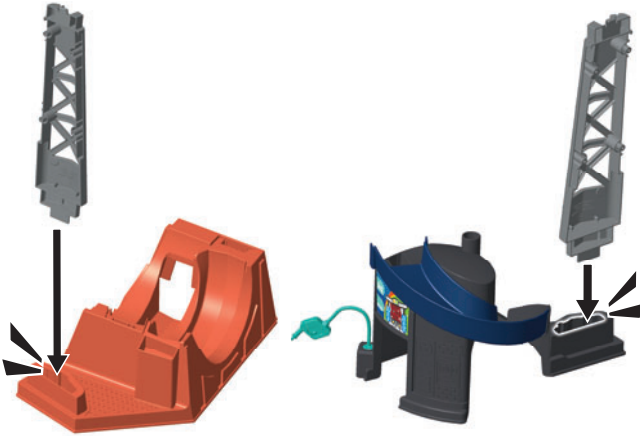 


The shorter risers are designed to fit the sockets in the bases one way. If a riser doesn't seem to fit, turn it around or try assembling to the other base.

# 3.

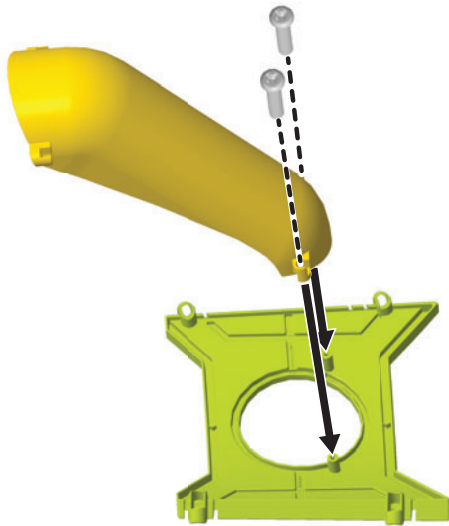 




 
4.

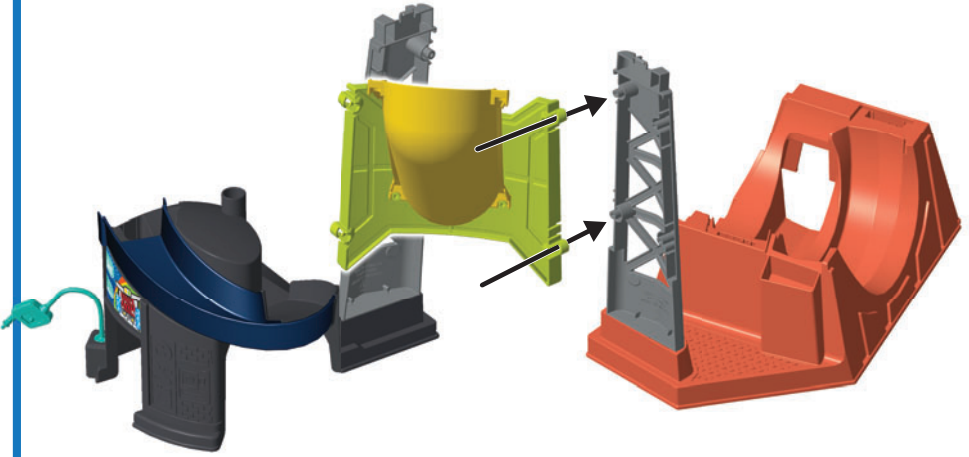

 
5.

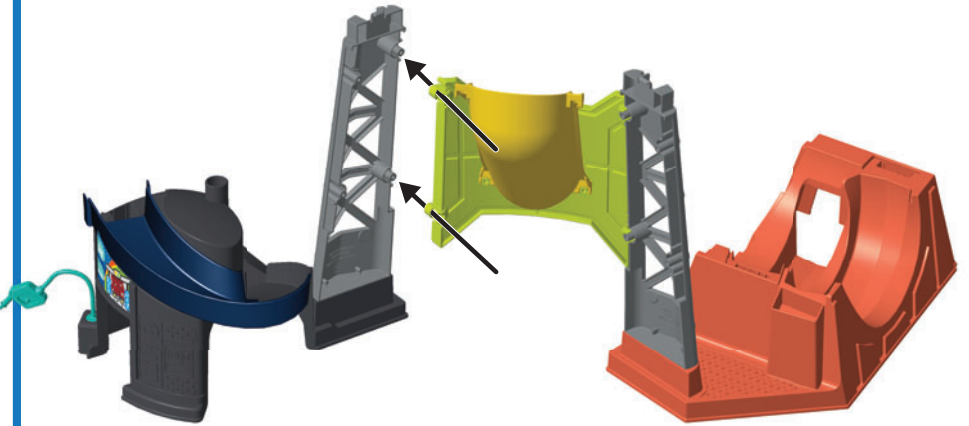

 6.

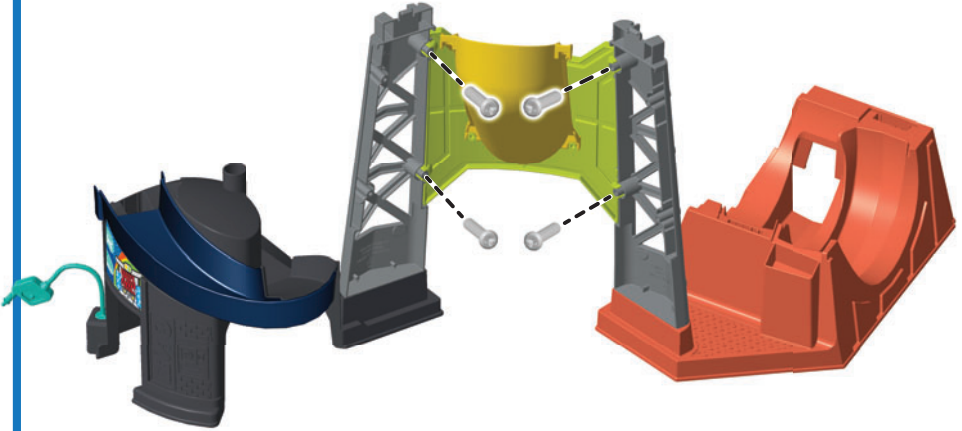

 7.

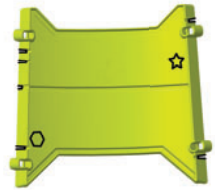

Choose the panel that has a hexagon and star shape on it. Match the hexagon on the panel to the hexagon on the riser.

8.

 


Match the star on the panel to the star on the riser.

9.



10.

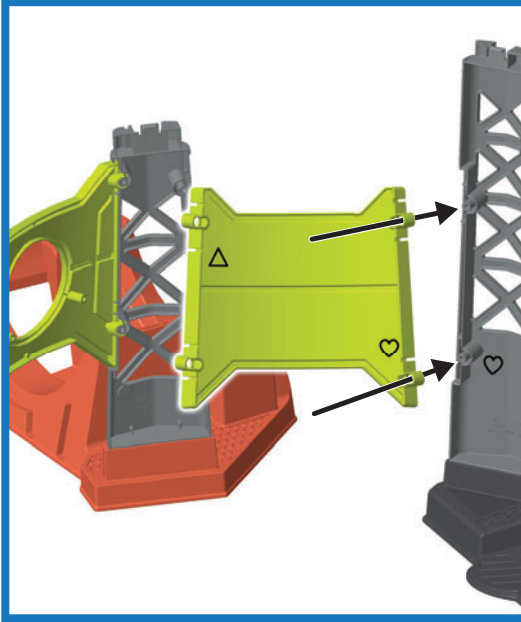


The remaining panel should have a heart and triangle shape on it. Match the heart on the panel to the heart on the riser.

11.



Match the triangle on the panel to the triangle on the riser.

 12.

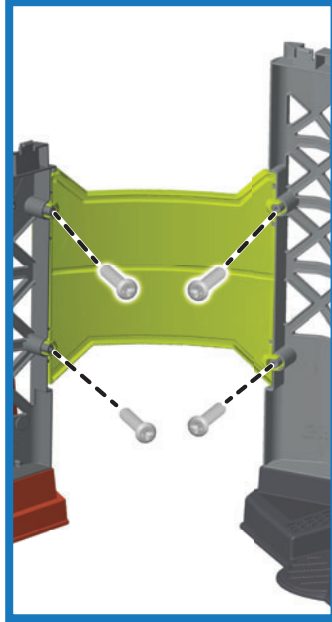

13.

 


Once assembled, the center tower assembly should look like this when looking at the top of it.

14.



15.

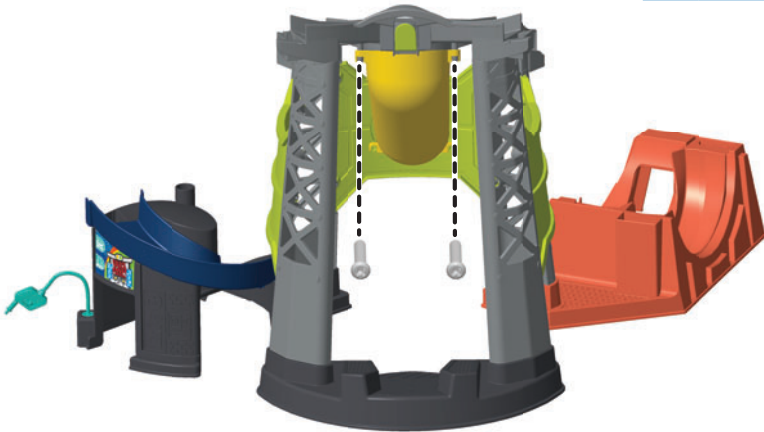

16.



17.




# 18.



 Track pieces are numbered! Look for the numbers on the underside of the track when assembling.

# 19.

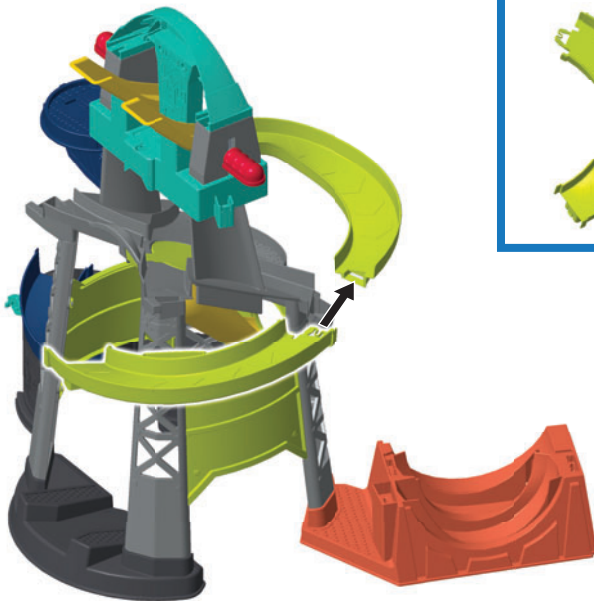



20.



21.



22.



 
23.



24.



25.

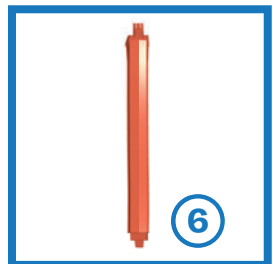


# 26.

**Hint:** Assembling the orange launcher may take a lot of force. To make it easier, support the green track and the turquoise launcher with your hand while you push down to assemble the launcher.

Support here .....

 .....Support here

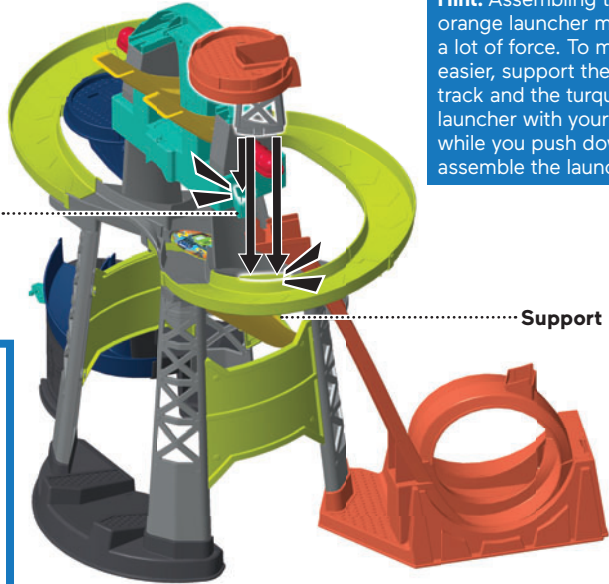

# 27.



# 28.



For this assembly step, use the shorter post.

# 29.



30.



31.



 
Turn blue track 9 to fit it to blue track 8.

# 32.



# 33.

Hint: After inserting the taller post into the shorter post, you may need to turn it to "snap" it to the track above.

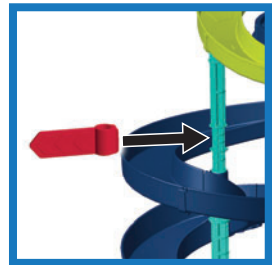

# INSTALL BATTERIES

Locate the battery door on the top of the upper launch pad.

 
 
 
Loosen the screw in the battery door and remove the door.

Insert two AA (LR6) **alkaline** batteries.

Replace the battery door and tighten the screw. Do not over-tighten.



If this toy begins to operate erratically, you may need to reset the electronics. Slide the power switch off and back on.

When sounds or lights become faint or stop, it's time for an adult to change the batteries.

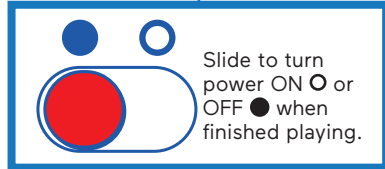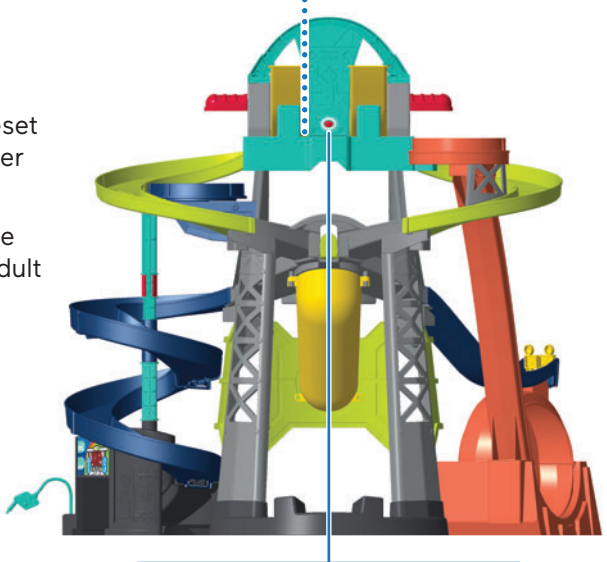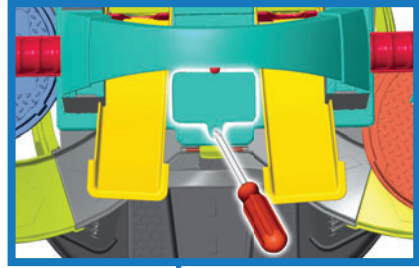



# CRAZY RACING ACTION!

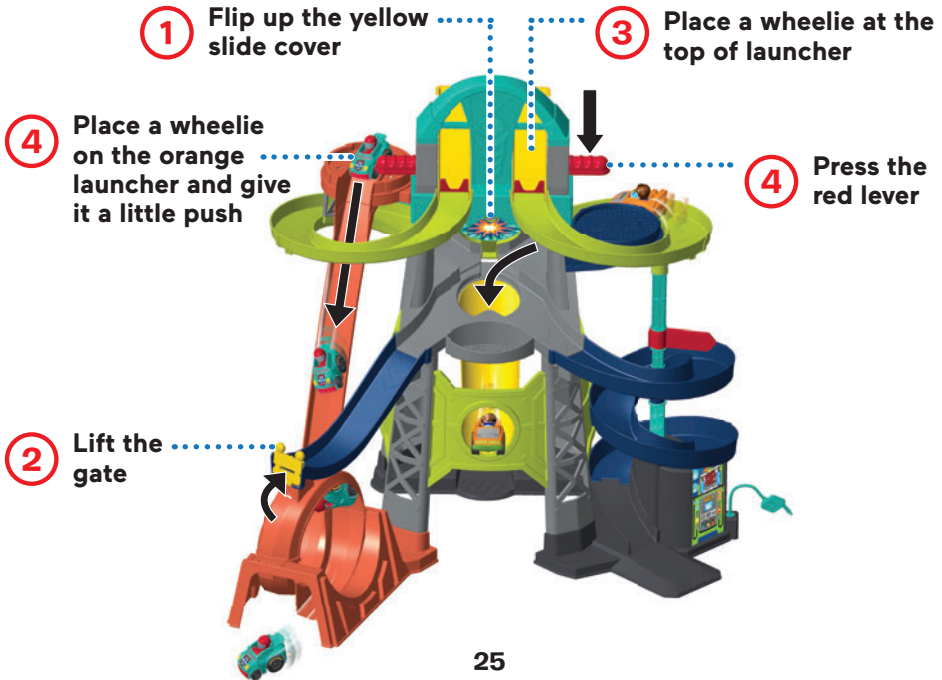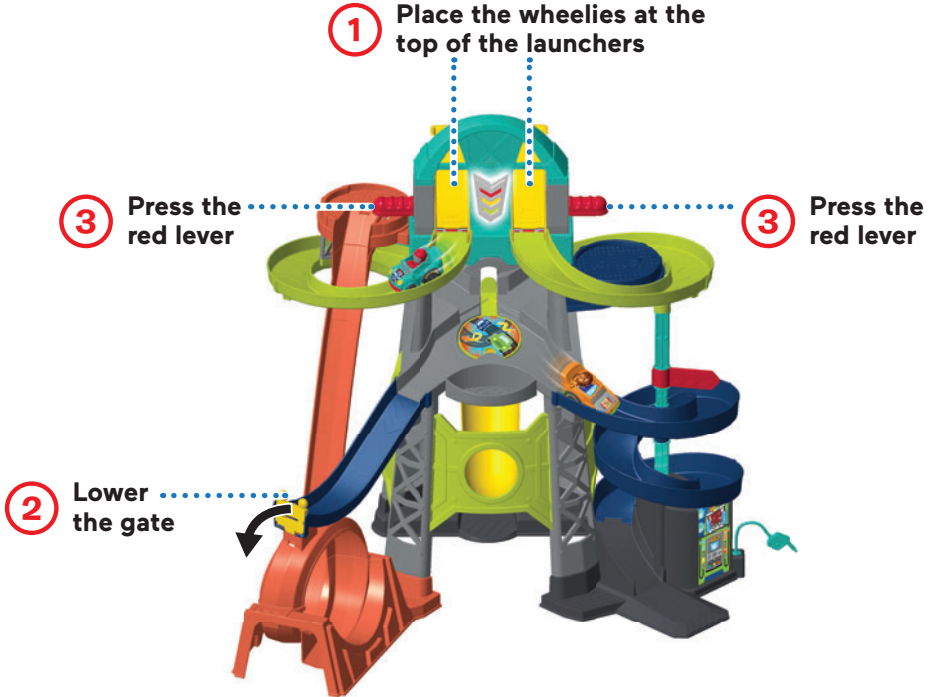  

## Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment (+/-).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

---

## FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

---

## CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

**UNITED STATES**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052. Consumer Services: 1-800-432-5437.

**CANADA**

Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2 Consumer Services/Service à la clientèle : 1-800-432-5437. [www.service.mattel.com](http://www.service.mattel.com).

**GREAT BRITAIN**

Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK. [www.service.mattel.com/uk](http://www.service.mattel.com/uk).

**NEDERLAND**

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

**AUSTRALIA**

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**NEW ZEALAND**

16-18 William Pickering Drive, Albany 1331, Auckland.

**SOUTH AFRICA**

Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.



fisher-price

LittlePeople