

fisher-price®



Keep this instruction sheet for future reference, as it contains important information.



Requires three AA batteries (included). Batteries included are for demonstration purposes only.

For longer life, use **alkaline** batteries.

Battery replacement is required. Only adults should replace batteries. Required tool: Phillips screwdriver (not included).



GRV08

  Replace Batteries

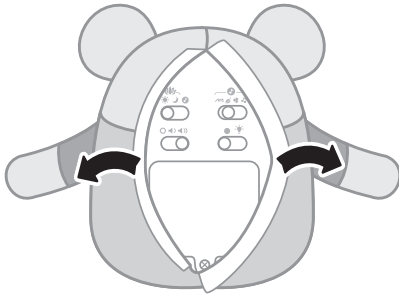

- Slide the power-volume switch to ON with low volume  or ON with high volume  to turn off demonstration mode.

  - Open the fasteners and pull to remove the electronic unit.

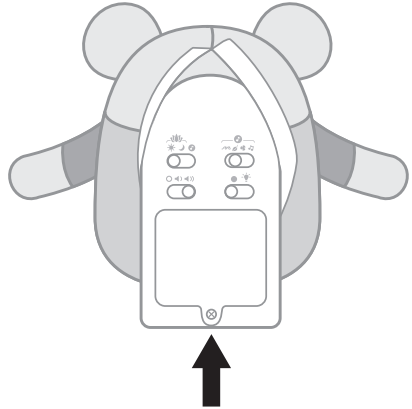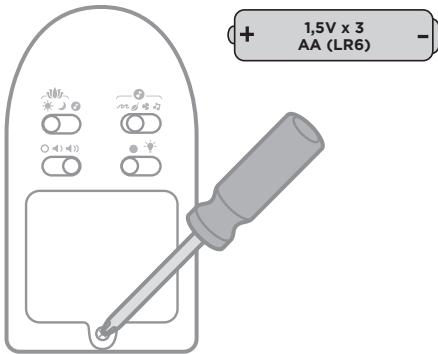

- With the speaker/button facing the front of the soother, fit the electronic unit inside and close the fasteners.

- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Remove the exhausted batteries and properly dispose.
- Insert three, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.
- When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power-volume switch off and back on.

Soothe and Meditate



Press Mouse's belly to start any mode. Press and hold for approx. three seconds to stop all functions. The next activation will restart the selected mode.



 **Daytime Meditation** - Enjoy approximately three minutes of guided meditation.

Nighttime Meditation

Stage 1 - Physical Prompts

Get ready for sleep by following the directions to relax the body for approx. three minutes.

Stage 2 - Breathing Prompts

Breathe deep with Mouse for approx. three minutes.

Stage 3 - Soothing Sounds

Listen to approx. 14 minutes of sounds or music to finally drift off to sleep.

 **Sounds Only** - Listen to approx. 20 minutes of sounds or music. Select a sound or music option using the  switch.



 Use this switch to choose from four sound options: Ocean Waves, Nature, White Noise, or Music.

Note: The sound option chosen will play at the end of Nighttime Meditation mode and during Sounds Only mode.



Slide the power-volume switch to ON with low volume , ON with high volume , or OFF .



Use this switch to choose between no lights  or lights .



Care

- The mouse is machine washable without the electronics unit. Do not immerse the electronics unit.
- Open the fasteners on the back of the toy and remove the electronics unit.
- Machine wash in cold water on the gentle cycle. Do not use bleach. Tumble dry on low heat.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment (+ and -).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



UNITED STATES

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Consumer Services: 1-800-432-5437.

CANADA

Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2
Consumer Services/Service à la clientèle : 1-800-432-5437.
www.service.mattel.com.

GREAT BRITAIN

Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK.
www.service.mattel.com/uk.

NEDERLAND

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121
Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

SOUTH AFRICA

Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

©2021 Mattel.
PRINTED IN CHINA
GRV08-0970-1102661521-DOM



Remark:

Revision	Date	ID#	Changes
Primary - pr	05/27/2021	GRV08-0970-1102661521-DOM	NA