

# SANTIAGO

OF THE SEAS

GXT77



Keep these instructions for future reference  
as they contain important information.




**LIGHTS & SOUNDS EL BRAVO PIRATE SHIP**

## WHAT'S INCLUDED



## HOW TO PLAY



- Slide the power-volume switch to ON with low volume  , ON with high volume  or OFF  .
- The power-volume switch is located on back end of the pirate ship.

1



Connect Santiago's feet into his lookout spot!

2



Store the surfboard.

## HOW TO PLAY

3



To activate lights, sounds and fun phrases, turn the dial to select a character or press the button.

4



Press to hear Santiago talk to other characters, and to activate lights and sounds.

5



Santiago can "swing" on the rope!

6



Slide the tab to reveal the plank.

7



Moveable pieces let you set up and play your own way!

8



Store the sword.

9



Store the treasure in the chest!

10




Push along on a hard surface to "sail" with Santiago.

## HOW TO PLAY

### HIDE TREASURE IN THE “MAGICAL” HIDDEN CHAMBER

11

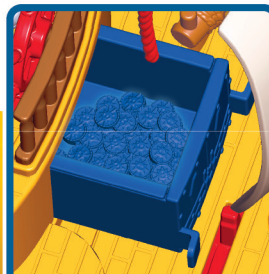

Tip: You can only place an item in the chamber and close it if the pile of coins is visible. If the coins are not visible, the chamber will not close.

Place an item in the chamber, then push it in to close it.



Pull to open the chamber and the treasure has “disappeared”!  
To make the treasure “reappear”, close and open the chamber again.




# BATTERY INFORMATION

## BATTERY REPLACEMENT

- Locate the battery compartment door on the bottom of the ship.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Remove the exhausted batteries and properly dispose.
- Insert three, new AA/LR6 **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not overtighten.
- If this toy begins to malfunction, first check battery installation. You may need to reset the electronics by removing the batteries and reinstalling them. If the toy continues to malfunction or no longer operates, it's time to replace the batteries with fresh batteries. For longer life, use **alkaline** batteries.
- When lights or sounds from this toy become faint or stop, it's time for an adult to change the batteries.



## REQUIRED TOOL: PHILLIPS SCREWDRIVER (NOT INCLUDED)

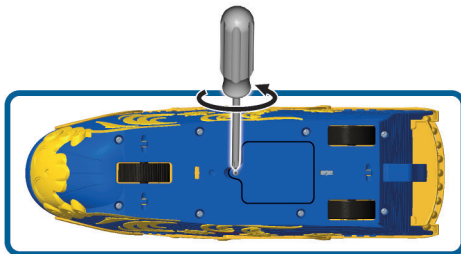

## BATTERY SAFETY INFORMATION

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment (+ and -).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

## FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

## HELPFUL HINT

### **Battery "sleep" mode:**

After 20 seconds on inactivity, the toy will play a sound. After an additional 20 seconds of inactivity, the toy will automatically go to "sleep" and shut off to preserve the life of the batteries. To begin play again, press any button to "wake" it up.

## CONSUMER INFORMATION

©2022 Mattel. ® and ™ designate U.S. trademarks of Mattel, except as noted.  
**PRINTED IN CHINA.**

©2022 Viacom International Inc. All Rights Reserved. Nickelodeon, Santiago of the Seas and all related titles, logos and characters are trademarks of Viacom International Inc.



### **UNITED STATES**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.  
Consumer Services: 1-800-432-5437.

### **CANADA**

Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.  
Consumer Services/Service à la clientèle : 1-800-432-5437. [www.service.mattel.com](http://www.service.mattel.com).

### **GREAT BRITAIN**

Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk).

### **NETHERLAND**

Mattel Europa B.V., Gonder 1, 1186 MJ Amstelveen, Nederland.

### **AUSTRALIA**

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

### **NEW ZEALAND**

16-18 William Pickering Drive, Albany 1331, Auckland.

### **ASIA**

Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500.

### **MALAYSIA**

Diimport & Diedarkan Oleh: Mattel Continental Asia Sdn Bhd. Level 19, Tower 3, Avenue 7, No. 8 Jalan Kerinci, Bangsar South, 59200 Kuala Lumpur, Malaysia.

### **SOUTH AFRICA**

Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

GXT77-0970  
1102781368-DOM

