

# Stroller Activity Book



Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AA" batteries (included).

Adult assembly is required for battery replacement.

Tool required for battery replacement:  
Phillips screwdriver (not included).



## ⚠ WARNING

 
Possible entanglement or strangulation injury when attached to a crib or playpen.  
Do not attach to a crib or playpen.



- Wrap the straps around the stroller tray.  
Attach the fasteners together.


## Battery Replacement

For best performance, we recommend replacing the batteries that came with this toy with three, new alkaline "AA" (LR6) batteries.

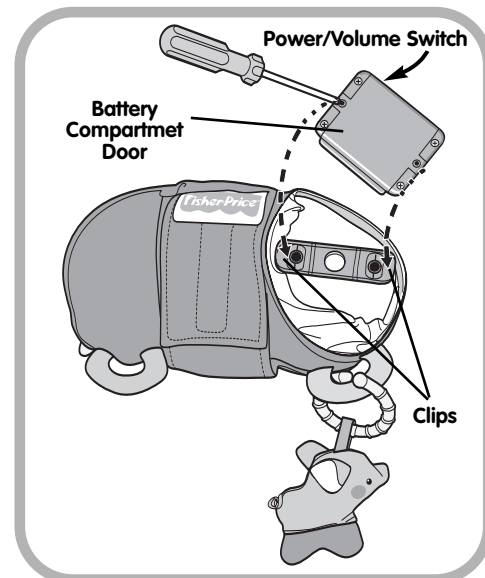

- Open the fasteners on the back of the toy.
  - Remove the sound and light box from the clips inside the toy.
  - Loosen the screws in the battery compartment door with a Phillips screwdriver.  
Remove the battery compartment door.
  - Insert three "AA" (LR6) **alkaline** batteries.
- Hint:** We recommend using **alkaline** batteries for longer life.
- Close the battery compartment door and tighten the screws with a Phillips screwdriver.  
Do not over-tighten.
  - Fit the sound box back between the clips.
  - Close the fasteners on the toy.


## Battery Safety Information

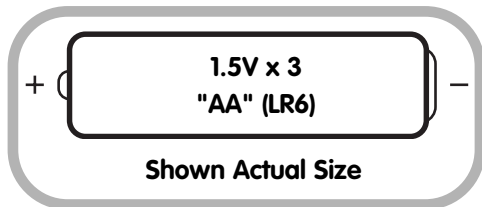 

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

## Fun Music, Lights and Sound Effects

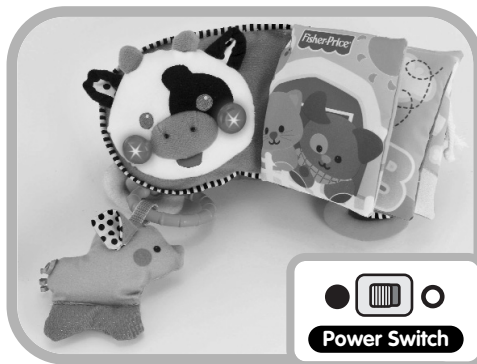 

- Open the fasteners on the back of the toy. Locate the power switch on the sound and light box. Slide the switch to the on ● position. Close the fasteners on the back of the toy.
- Press the cow's nose to hear fun tunes and sounds as his cheeks light up!
- Slide the power switch to the off ○ position when not in use.

## Care

- Open the fasteners on the back of the toy and remove the sound and light box from the clips inside the toy.
- Place the toy in a pillowcase and machine wash cold on a gentle cycle. Do not use bleach. Line dry the toy.
- Fit the sound box back between the clips.
- Do not immerse the sound and light box.

## FCC Note (United States Only)

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

## Consumer Information

### Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS (5437)**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Or, write to:

Fisher-Price® Consumer Relations,  
636 Girard Avenue,  
East Aurora, New York 14052.

### For countries outside the United States:

**CANADA Questions? 1-800-567-7724.** Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**GREAT BRITAIN** Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

**AUSTRALIA** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**NEW ZEALAND** 16-18 William Pickering Drive, Albany 1331, Auckland.

**ASIA** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.