




INSTRUCTIONS

Keep these instructions for future reference as they contain important information.

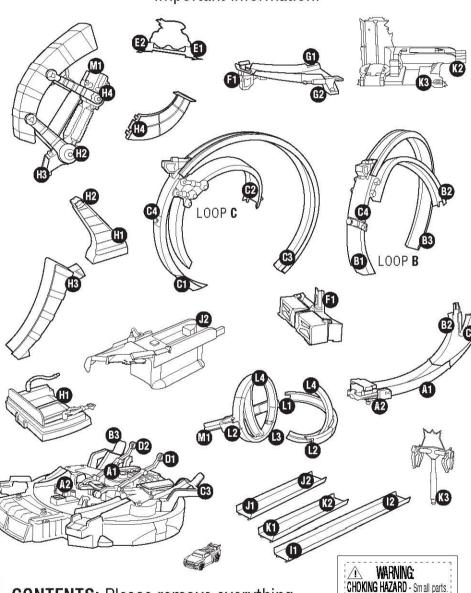


CONTENTS: Please remove everything from the package and compare to the contents shown here.

Refer to numbers on parts and contents page to help with assembly.



Requires 4 "D" and 3 "C" alkaline batteries (not included). Adult assembly required.


BATTERY INSTALLATION / REPLACEMENT

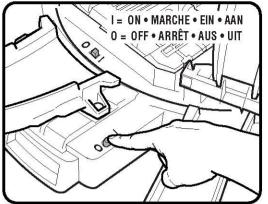


Move switches to OFF position before installing batteries.

BATTERY INSTALLATION BOOSTER

- Open battery cover. Install 4 "D" batteries into booster in the orientation shown. Close cover.
- Replace batteries when booster can no longer propel cars through the track set. For longer life, use only alkaline batteries.

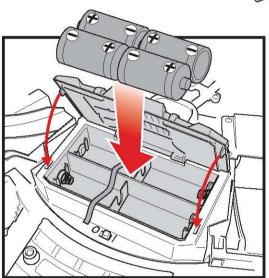

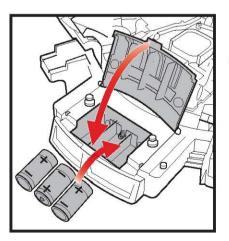

BATTERY INSTALLATION TURNTABLE

• Open battery cover. Install 3 "C" batteries into turntable in the orientation shown. Close cover.



Refer to numbers on parts and contents page to help with assembly.

Battery Safety Information

In exceptional circumstances b

- Non-rechargeable batteries a
- Rechargeable batteries are to
- · Rechargeable batteries are or
- Do not mix alkaline, standard
 Do not mix old and new batter
- . Only batteries of the same or
- · Batteries are to be inserted w
- · Exhausted batteries are to be
- The supply terminals are not
- Dispose of battery(ies) safely
- Do not dispose of this production

