


# IMPORTANT!

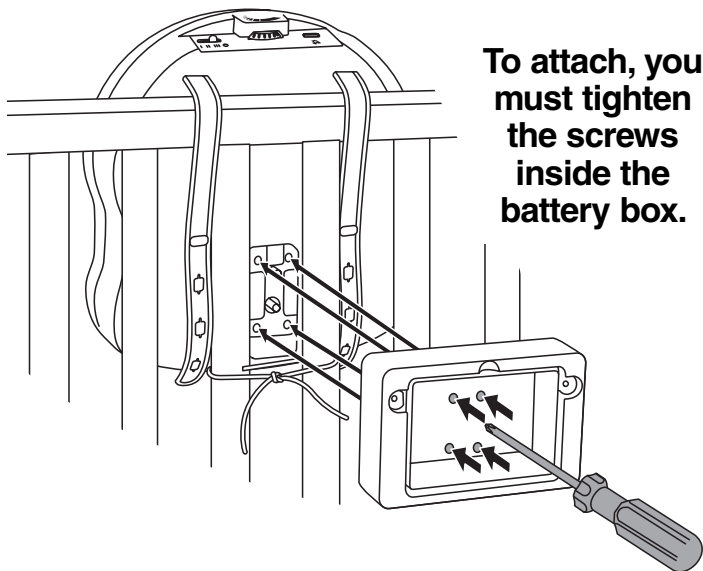

- Remove battery compartment door.
- Fit battery box to socket on the back of toy.
- Tighten four screws inside battery compartment to secure battery box.
- Refer back to original instructions that came with this product.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.  
©2005 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.