



INSTRUCTIONS

4+

H6449-0920G1



Please keep these instructions for future reference as they contain important information.

TO PLAY

1 Switch vehicle to OFF position after each use.

Before play, move switch to OFF position for 10 seconds.

Move switch to "I" (ON) position.



The power switch has three positions: on, off and try-me mode.

Please note, the try-me mode is for in-store demo only.

I = ON

O = OFF

X = TRY-ME

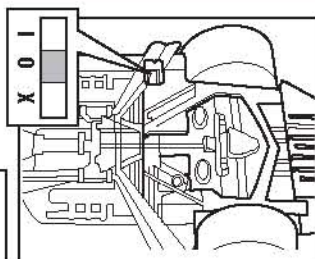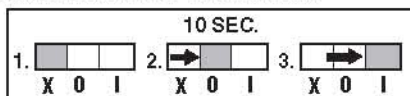


2 PRESS...

A MOVEMENT BUTTONS

When you press a movement button McQueen will tell you what that button does. McQueen will remember and do that step when you press "GO!".

- ① Forward
- ② Forward left
- ③ Reverse left
- ④ Reverse
- ⑤ Reverse right
- ⑥ Forward right
- ⑦ Circle

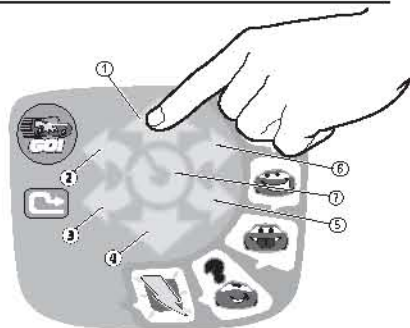


B TALK BUTTONS

- Each "talk" button plays several phrases.
- Each time you press a button, you will hear a new phrase.
- McQueen remembers and plays the phrase after you press "GO!", if it plays completely or is the last phrase played for that button. So you can listen to all the phrases for each button without programming them if you press the button quickly before the entire phrase plays.
- Sometimes McQueen has a mind of his own and will react and talk all by himself!

- If you press , McQueen will perform his own routine for you.


- McQueen's mouth will move only after the go button is pressed, not during programming.

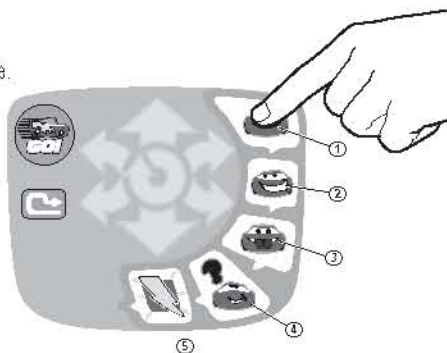

- ① Miscellaneous
- ② Bragging
- ③ Trash Talking
- ④ Questions
- ⑤ Lights and phrases


3 PRESS GO BUTTON


Program McQueen to do and say what you want then press the "GO!" button and watch McQueen do what you have programmed, up to 15 commands.

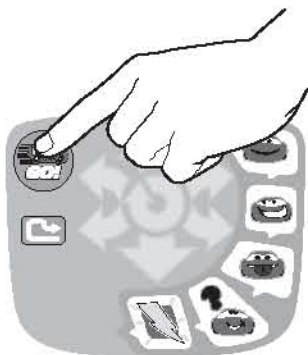

SAMPLE ROUTINES

McQueen's travel distance and travel direction varies with battery condition, play surface condition, and the total number of programmed commands. Therefore, it may not follow the exact programmed path as illustrated in the following drawings.

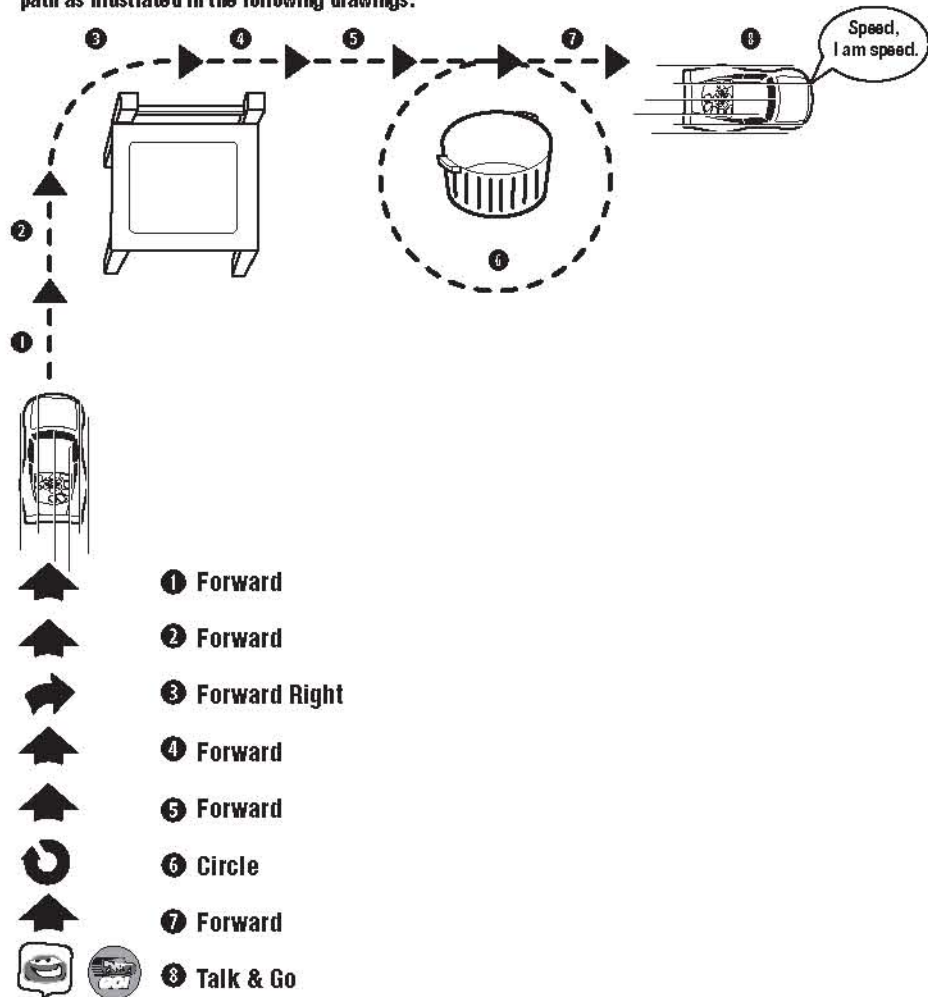

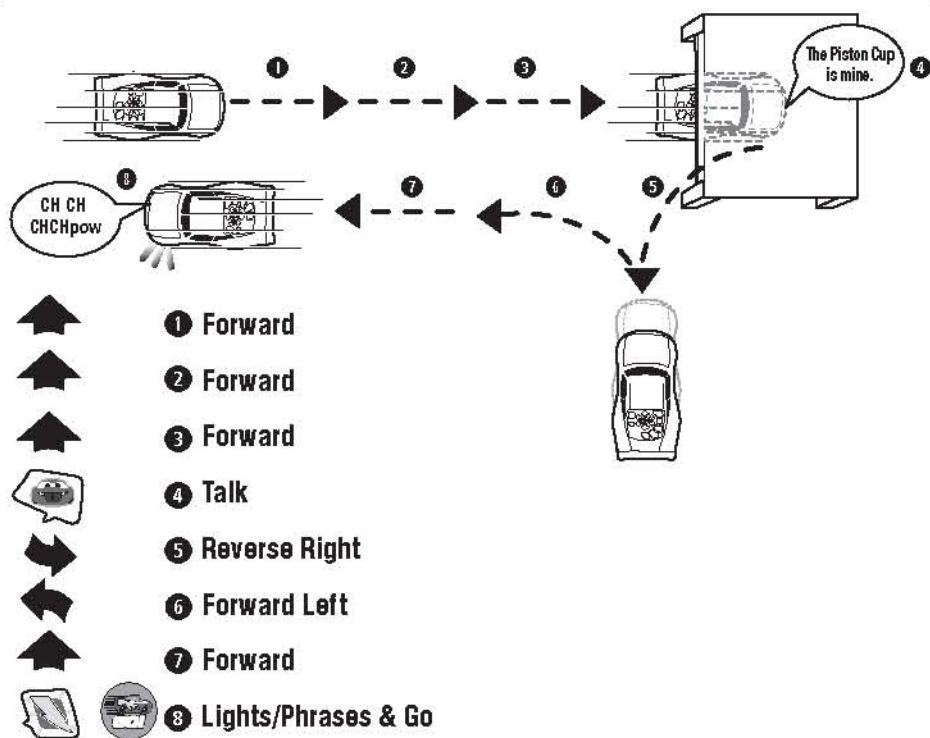

4 PRESS DEMO BUTTON

Press this button



and McQueen will perform his own routine for you.





All buttons are available while the demo is playing, i.e. you can press any other button during the demo to stop the demo and start a new programming sequence.



SECRET PROGRAMMING CODES


McQueen sometimes has a mind of his own. Try pressing these buttons during programming to hear a fun phrase after you have pressed the go button.

- Press the forward button 3 times in a row.
- Press the reverse button 3 times in a row.
- Press the circle button 2 times in a row.
- Press forward left button/forward right button/forward left button/forward right button.

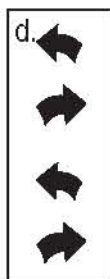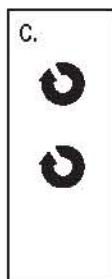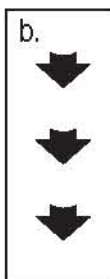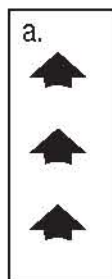

Programming a sequence:

1. You can enter up to 15 commands. Once you have entered your commands, press the go button.
2. If you do not press go, or if another button is not pressed, the car will go into sleep mode.
3. If McQueen's front bumper runs into something, he will say one of several fun phrases and move into reverse.

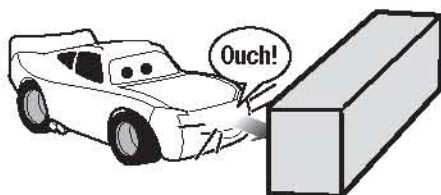

TIPS

Each talk button plays several phrases. Each time you press a button, it plays a new phrase.


For example the question button plays these phrases:

- 
1. "Have you seen... my best friend?"
 2. "Where's the nearest gas station?"
 3. "Where's Radiator Springs?"
 4. "Where's the highway?"
 5. "Did I take the wrong turn?"
 6. "Whoa... where am I?"

McQueen remembers the phrase if it plays completely, or if it is the last phrase played for that button.


To keep vehicle running straight, use steering adjuster on bottom of car as shown. Adjust as needed.

If vehicle responds erratically, switch OFF for 10 seconds, then switch back ON.

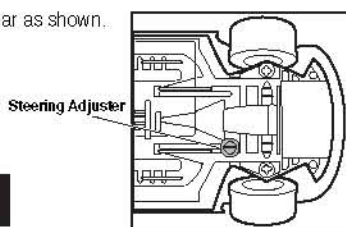

BATTERY INSTALLATION/REPLACEMENT

- Move switch to OFF position before replacing batteries.
- Use Phillips-head screwdriver (not included) to open the battery door.
- Remove batteries included for "try-me" purposes only and discard of them safely.
- Insert 4 new "AA" (LR6) alkaline batteries (not included), as indicated inside the battery compartment. For longer life, use only alkaline batteries.
- When vehicle motor slows down or if lights dim or sounds play slowly or distort, replace the batteries.

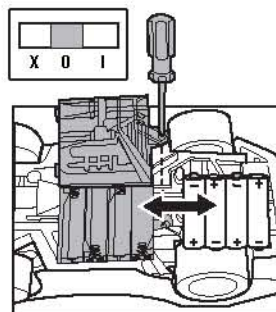

Battery Safety Information

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery/leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

© Disney/Pixar

Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Relations 1-800-524-8697 service.mattel.com. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel: 03-78803817, Fax: 03-78803867.