

H6723
J5971
K1633

Fisher-Price®

STAR STATION™

ENTERTAINMENT SYSTEM

Please keep this instruction sheet for future reference, as it contains important information.

Requires six "C" (LR14) and three "AAA" (LR03) alkaline batteries (not included) for operation.

An adult must install batteries and set-up this system for use.

Tool required for battery installation: Phillips screwdriver (not included).



TV not included.
TV image quality may vary.



Featuring hit music from

**KIDZ
BOP**

sung by kids for ki

 
Battery Installation

Base Unit

- Locate the battery compartment on the bottom of the base unit.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert six "C" (LR14) **alkaline** batteries, as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When images on your TV screen appear grainy or lose color, it's time for an adult to change the batteries!



*Hint: We recommend using **alkaline** batteries for longer battery life.*

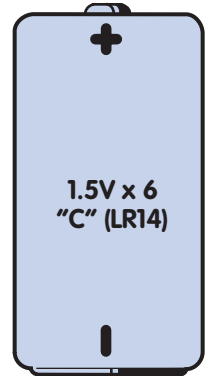


Shown Actual Size

Microphone

- Locate the battery compartment on the microphone.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "AAA" (LR03) **alkaline** batteries, as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- It's time for an adult to change the batteries in the microphone when:
 - Power light on microphone becomes dim.
 - Sounds from the microphone become faint or stop.
 - Lenses stop rotating.



 - Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).



Shown Actual Size



Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of the product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

 
Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

StarStation™ Entertainment System
Model Number: H6723, J5971


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Consumer Relations Department, 636 Girard Avenue, East Aurora, New York 14052

Connecting Your Star Station™ to Your TV or VCR

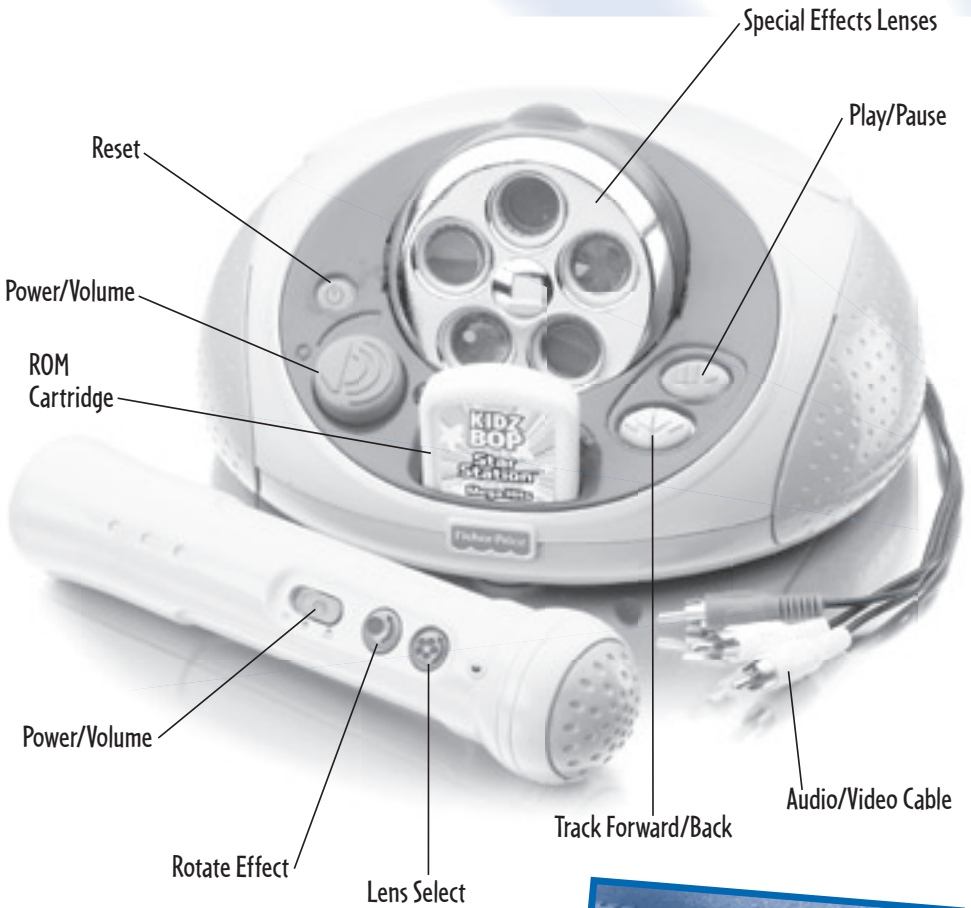

 
Important! Your TV or VCR must have audio and video input jacks.

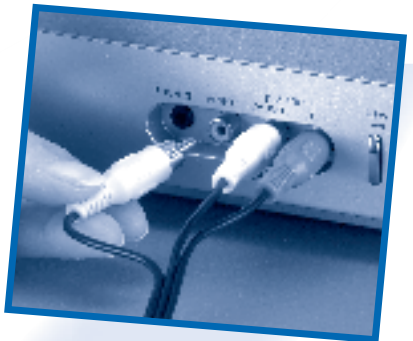

- Position Star Station™ near your TV (or VCR) or on the floor in front of your TV.


Important! Do not place Star Station™ on top of your TV. Keep excess cable off the floor and out of the way.

 1

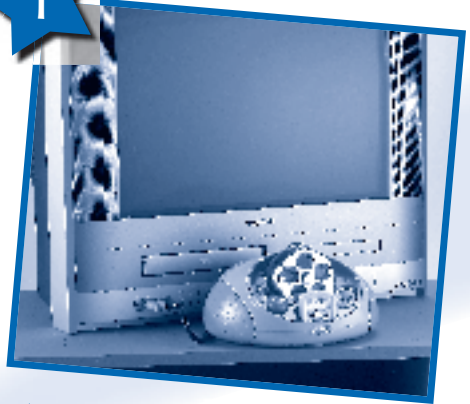

- Make sure the power/volume dial on Star Station™ is off. The power light should be **off**.
- Turn your TV or VCR **off**.

 2

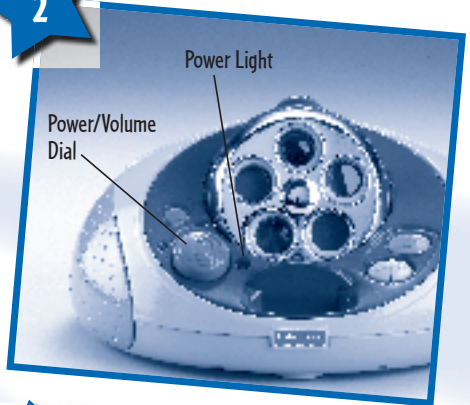

- Locate the audio/video cable on the back of Star Station™.
- Plug the audio/video pins into the matching colored input jacks on your TV or VCR (Yellow for VIDEO IN, White for LEFT AUDIO IN and Red for RIGHT AUDIO IN).

Note: We've included a detailed illustration to show how to connect Star Station™ to a TV or TV and VCR. Please refer to page 11.

3



Note: The photo above shows a combination TV/VCR/DVD with input jacks on the front. Your TV or VCR may have input jacks on the back.

5

- Insert the ROM cartridge into the slot in Star Station™.

Note: For proper function, turn the Star Station™ off before inserting ROM cartridges.

4



5

- Rotate the power/volume dial to turn power on. The power light turns on.
- Turn your TV or VCR **on**.



6

- To find the picture transmitted on your TV screen, set your TV's or VCR's mode selector to INPUT or VIDEO IN.
- Have your child stand about 4 or 5 feet (1,2m - 1,5 m) from Star Station™.
- Move the lens up or down until your child is visible on the TV screen.



6





No Image?

If you do not see an image on your TV screen transmitted from Star Station™, try the following:

1. Verify that your audio and video cable is fully inserted into your TV or VCR.
2. Press the channel down button on the VCR or TV and check for an INPUT channel below channel 2.
3. Use the menu system on your TV or VCR to find INPUT or SOURCE. Change to INPUT or SOURCE.
4. If you are still unable to see an image, refer to your TV or VCR's instruction manual.

Hints About Lighting...

Images on the TV screen look best when there is good lighting in the room where you use Star Station™.



Front Lighting





Overhead Lighting

Make sure the light source in the room is in front or above your child.


The light source should NOT be behind your child!



 
Back Lighting ❌

- Slide the power/volume switch on the microphone to either low  or high  volume. The power light turns on.

Hints:

- *The microphone power/volume switch controls the volume of your voice. The volume dial on Star Station™ controls the overall volume of the music. Adjust the overall volume on your TV.*
- *Be sure to slide the power/volume switch off  when you are finished.*

7

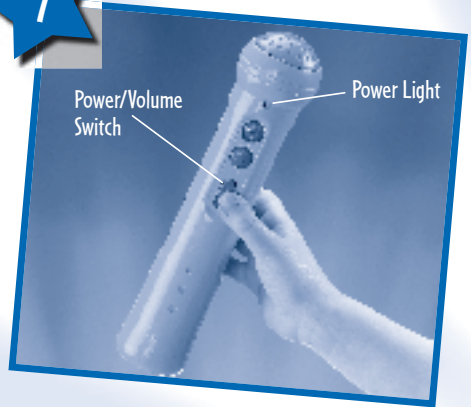



8

- Press the play/pause button to start the music. Press again to pause.
- Use the track forward and back buttons to move ahead or back through the songs on the ROM Cartridge.
- Start singing!



8



- Star Station™ features five special effects lenses.
- Press the lens button  on the microphone to select from the five lenses.
- Press the rotate effect button  to rotate the lens for different cool looks!



Star



Clear



Color Warp





Double Vision



Kaleidoscope

Notes:

- To prevent battery drain, turn the power/volume dial off when the toy is not in use .
- If the power light is on and there is no sound or picture, press the reset button to reactivate the toy .
- When you are finished with Star Station™, turn the power off on the main unit and microphone.

Recording Your Performances

If Star Station™ is connected to your VCR, you can record performances. Simply insert a blank tape and press record on your VCR.



Connection to an External Music Source

You can connect Star Station™ to an external music source such as a portable CD player or stereo so you can sing along to other music!

1. Turn the power/volume dial on the Star Station™ off.
2. Remove the ROM Cartridge from Star Station™.
3. Connect an audio cord (not included) to the LINE OUT jack on your external music source. The audio cord should have a $\frac{1}{8}$ " (3,2 mm) stereo (mini) plug.

Note: You can purchase audio cords in an electronics or some department stores.


4. Insert the $\frac{1}{8}$ " (3,2 mm) stereo plug into the INPUT socket on the back of Star Station™.
5. Press play on your external music source.
6. Turn Star Station™ power on.
7. Adjust volume on your external music source.




Care

1. Wipe this product with a clean cloth dampened with a mild soap and water solution. Do not immerse this product.
2. This product has no consumer serviceable parts. Do not take this product apart.

Troubleshooting Guide

PROBLEM	CAUSE	SOLUTION
No image on the TV	TV or VCR is not set to proper input	Press the channel down button on the VCR or TV and check for an INPUT channel below channel 2.
		Use the menu system on your TV or VCR to find INPUT or SOURCE. Change to INPUT or SOURCE.
	Batteries in Star Station™ are weak or dead	Consult your TV's or VCR's instruction manual.
Feedback noise	Microphone is too close to speakers	Stand further away from your TV speakers.
		Turn the volume down on your TV or stereo system.
Music does not play	ROM inserted with main unit "ON"	Turn the Star Station™ off then on again.
	ROM not fully inserted	Make sure ROM is fully inserted into the Star Station™.
Images on TV look grainy or lose color	Batteries in Star Station™ are weak	Replace the batteries in Star Station™ with six, new "C" (LR14) alkaline batteries.
Images on TV look dark	Improper room lighting	Make sure the light source in the room is in front of or above your child. See page 7 for important hints about room lighting
The lenses do not rotate	Batteries in microphone are weak or dead	Replace the batteries in the microphone with three, new "AAA" (LR03) alkaline batteries. Make sure the power/volume switch on the microphone is set to off  when not in use.
Muted voice sound	Batteries in microphone are weak or dead	Replace the batteries in the microphone with three, new "AAA" (LR03) alkaline batteries.
	A 900 MHz cordless telephone is off its base.	Replace the telephone handset on its base.
Sound is distorted from external music source	Volume is set too loud on external music source	Turn the volume down on your external music source. Adjust the volume on your TV or stereo system.

 Connecting to a TV or VCR and TV

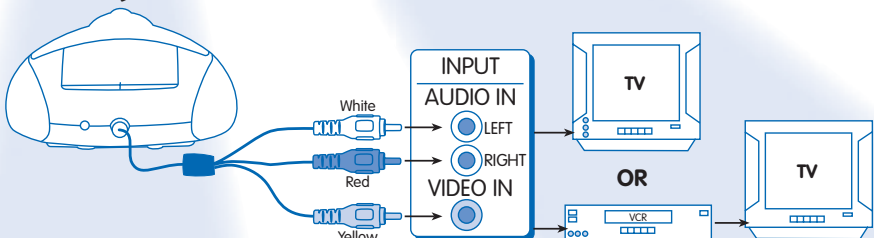

Note: Input jacks may be on the back of your TV or VCR.



ONE (1) YEAR LIMITED WARRANTY

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052; Mattel Australia Pty., Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia warrants to the original owner that Star Station™ is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Relations at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

In Australia and New Zealand, Consumer Advisory Service phone numbers are as follows: Australia 1300 135 312, New Zealand 0800 174 063.

Consumer Information

Visit us on-line at www.service.fisher-price.com.

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 9 AM - 7 PM EST Monday through Friday and 11 AM - 7 PM EST Saturday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Write to us at:

Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

For countries outside the United States:

CANADA: Questions? **1-800-432-5437**. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.fisher-price.com.

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303; www.service.mattel.com/UK.

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

© & © 2005 Razor & Tie Direct, L.L.C. "Kidz Bop," "Razor & Tie" and the Razor & Tie Logo are registered trademarks of Razor & Tie Direct, L.L.C. and "Kid Friendly," "Kidz Bop Kids" and "Sung By Kids For Kids" are trademarks of Razor & Tie Direct, L.L.C.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2006 Mattel, Inc. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, Inc.