

IMPORTANT!



To prevent battery drain, turn power/volume dial off when toy is not in use.



If power light is on and there is no sound or picture, press reset button to reactivate toy.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2005 Mattel, Inc. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, Inc.

PRINTED IN CHINA

H6723pr-0921