

- Please keep this instruction sheet for future reference, as it contains important information.
- Adult assembly is required.
- No tools needed for assembly.
- Use only bubble solution in this toy.
- Push the bubble mower so that all four wheels contact the ground.
- Bubbles begin flowing after the mower has been pushed about 15-20 walking steps. As long as the mower is being pushed, bubbles continue to flow.
- When bubbles stop, press down on the bubble bottle again for 15 seconds to refill.
- Make sure your child understands that bubble solution is not for drinking and that it should be kept away from the eyes.
- While filling or cleaning this toy, try to avoid spilling bubble solution on the floor. It may create slippery floor conditions.



IMPORTANT! Please make sure your child does not follow you using this toy while you are operating a real lawn mower. Your child should play in a separate area away from the area where you mow.

Bubblin' Fun



1

- Insert and **"snap"** the handle into the mower, as shown.



2

- Remove and discard the cap and seal from the bubble solution bottle.
- Carefully fit the bottle to the bottom of the filler cap attached to the front of the mower. Twist the bottle to attach.



3


- Insert the bottle, cap side down, into the opening near the front of the mower.



4

- Press down on the bottle for about 15 seconds to fill the mower.


Let's Clean Up

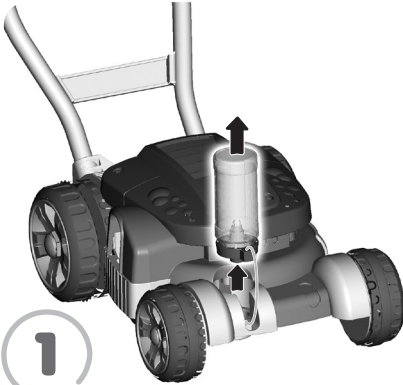


- Lift to remove the bubble solution bottle from the mower. Twist to remove the filler cap. Set the bottle aside.



- Tip the mower forward to empty all the water.

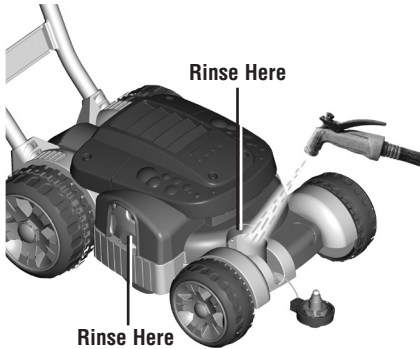

 - Thoroughly rinse the bubble chamber on the side of the mower and filler opening near the front of the mower with clean water from a garden hose or faucet.

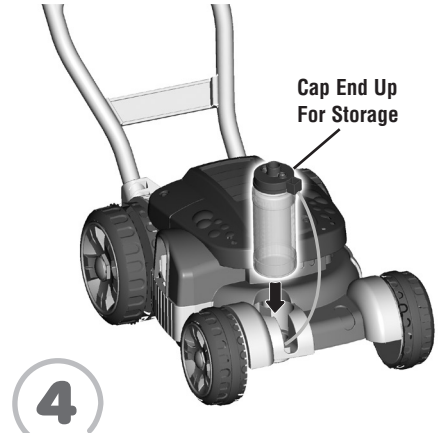

- Replace the filler cap on the bubble solution bottle and place the bottle in the filler opening cap end up.

Hint: Please keep the bubble solution bottle with your toy and refill as necessary.



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.



Problem	Solution
No bubbles	<p>There is not enough bubble solution in the bubble chamber. Press down on bubble solution bottle for 15 seconds to refill.</p> <p>The bubble chamber is clogged. Follow instructions in "Let's Clean Up" section to clean bubble chamber thoroughly.</p> <p>The bubble mower needs to be pushed a minimum of 15-20 walking steps before bubbles begin to flow.</p> <p>You may be walking too quickly. Walk at a slow, steady pace.</p> <p>The rear wheels aren't on the ground. Push the mower so that the rear wheels always contact the ground.</p> <p>Silicone or oily lubricants may have gotten in the bubble chamber. Never use silicone or oily lubricants on this product (the wheels). Bubbles will not form if even a very small amount of these substances get into the bubble chamber.</p>
Bubble solution is leaking from the mower	<p>Bubble chamber is overfilled. Fill only by using filler cap. The filler cap dispenses the correct amount of solution.</p> <p>Use the mower only on flat, level ground.</p>
Bubble solution is foaming	<p>The bubble chamber is clogged. Follow instructions in "Let's Clean Up" section to clean bubble chamber thoroughly.</p>