 


fisher-price®



HGB82

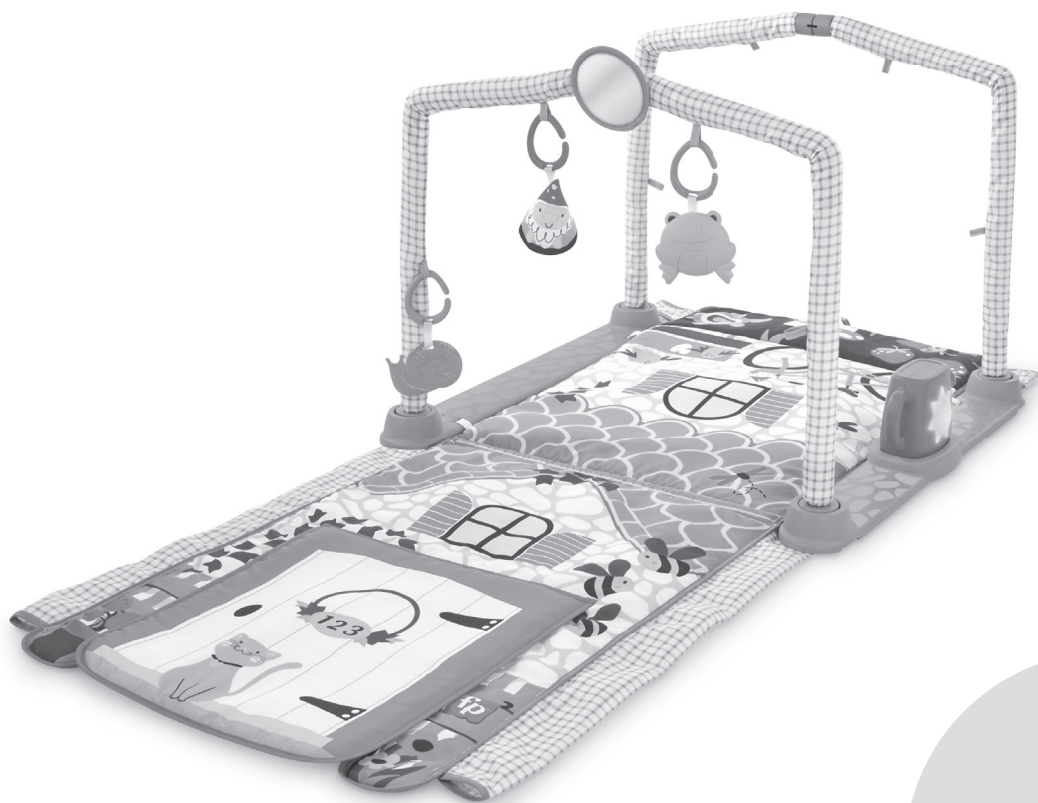

Where great minds think like kids™

Since 1961, early childhood development experts at the Fisher-Price™ Play Lab have watched and learned from real-life fun experts (aka babies & big kids) to help us design toys and nursery gear that help babies learn and grow in the most natural way. From bright colors that delight their eyes and textures made for squishing, to friends that keep tummy time exciting, Fisher-Price® toys are made just right for your newborn.


Consumer Information

Keep this instruction sheet for future reference, as it contains important information.
Adult assembly is required.
Requires three AA batteries (not included).
Tool required for battery installation: Phillips screwdriver (not included).

Battery Installation



For longer life, use **alkaline** batteries.

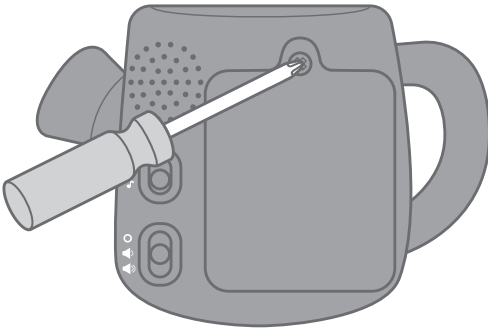

Locate the battery compartment door on the back of the electronic toy.

Loosen the screw in the battery compartment door and remove the door.

Insert three, new AA (LR6) **alkaline** batteries.

Replace the battery compartment door and tighten the screw.

Do not over-tighten.

If this product begins to operate erratically, you may need to reset the electronics. Slide the power-volume switch off and then back on.


When sounds or lights become faint or stop, it's time for an adult to change the batteries.

Use



Slide the power-volume switch to ON with low volume , ON with high volume  or OFF .







Slide the mode switch on the electronic toy to  short play mode or  long play mode.

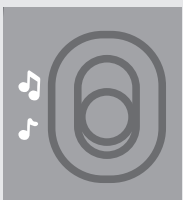


In short play mode , press the button or rock the electronic toy for lights, sounds, and songs. Press the button again to advance to the next song.

In long play mode , press the button on the electronic toy to start approx. 20 minutes of lights and music. Press and hold the button for two seconds to stop all functions.

Parts

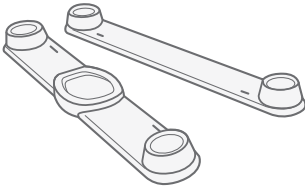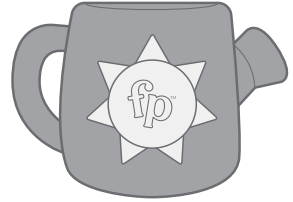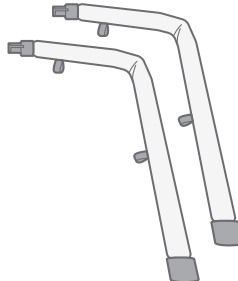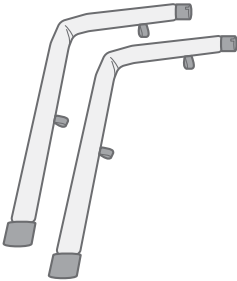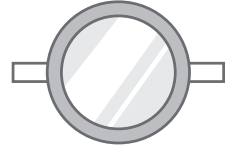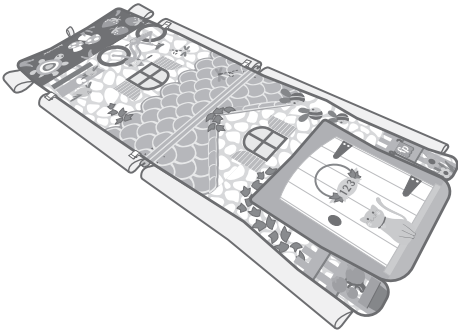

Bases

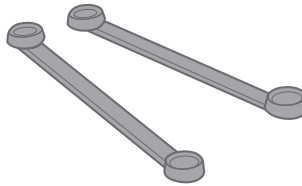

Supports



The supports are packaged inside of the bases for storage purposes. The supports are only used with Crawl-Through Cottage.

Care

The mat and soft toy are machine washable. Wash separately in cold water on the gentle cycle. Do not use bleach. Tumble dry on low heat.


The arches, teether, rattle, mirror, bases, supports and electronic toy can be wiped with a clean, damp cloth. Do not immerse the electronic toy.

Lay & Play Setup

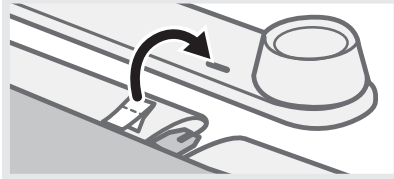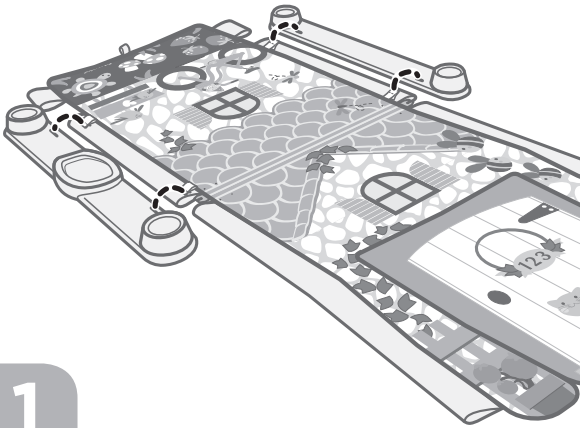

Fit the straps on the mat into the slots in the bases. Make sure the tab on the end of each strap forms a "T" on the other side of the slot. Pull up on the mat to be sure it is assembled to the bases.

1

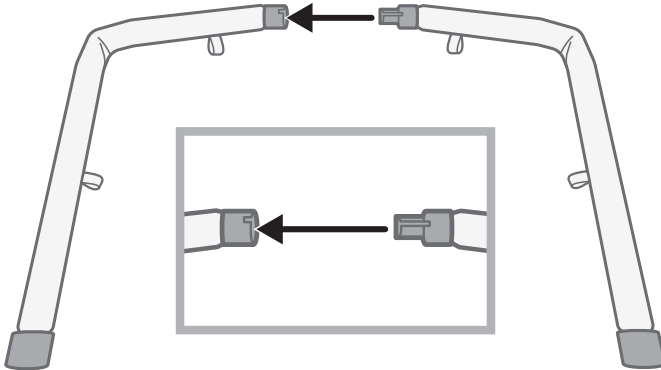

Connect the upper ends of the arches together. Repeat for the other set of arches. If arches do not seem to fit together, pick up another arch and try again.


2

Lay & Play Setup



WARNING

To prevent entanglement injury, never place the gym in a crib or playpen. Never add strings, ties or other products to the gym.


3

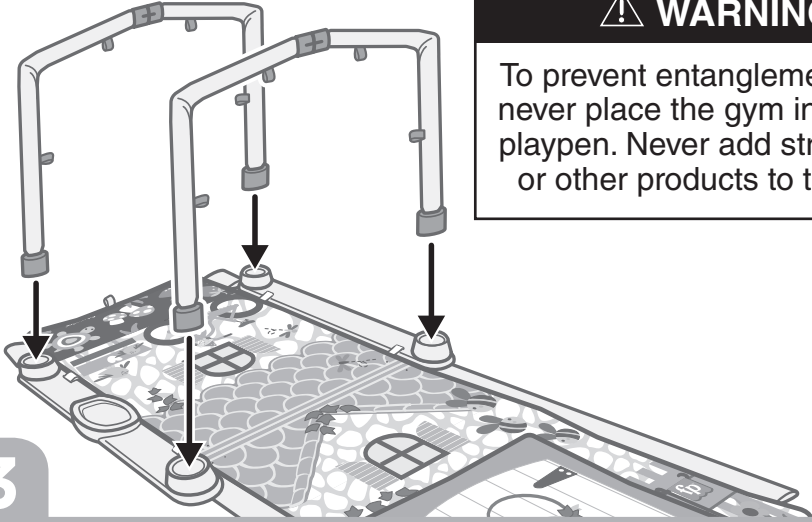


4

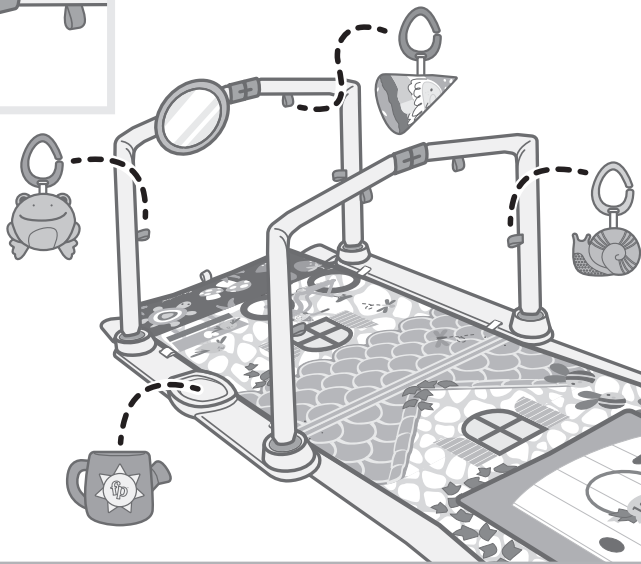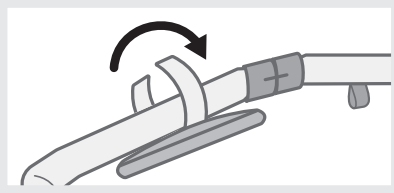

Tummy Time Setup

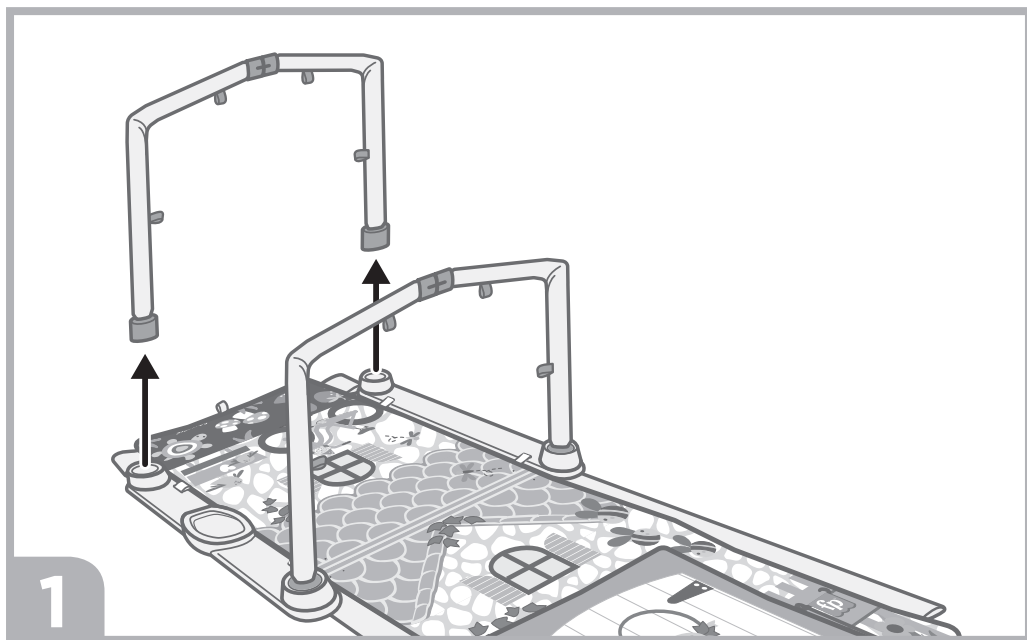



Thread the arch through the shorter sleeves on the mat.

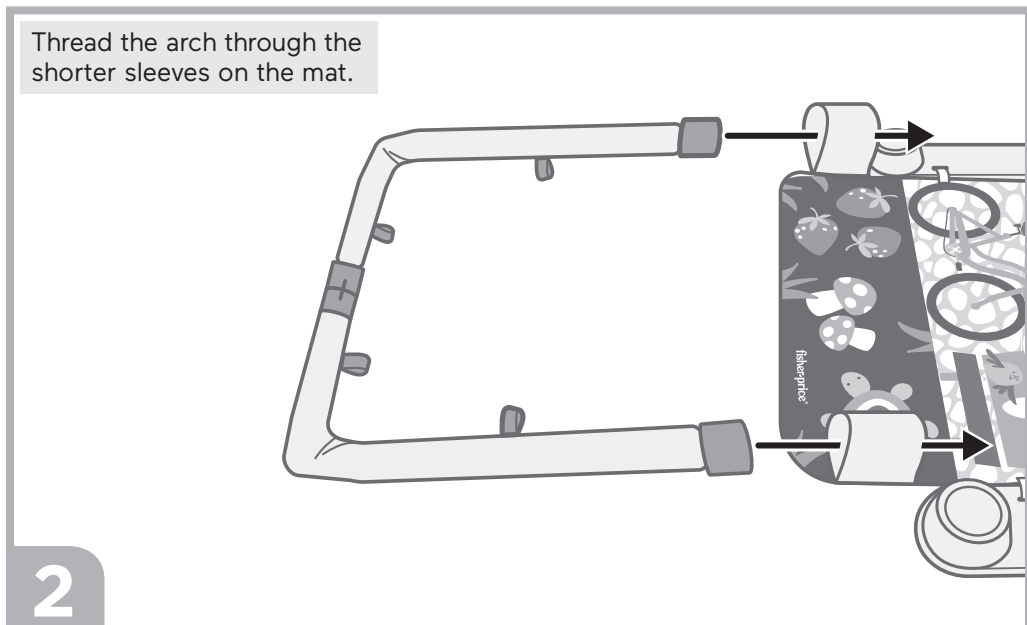



Tummy Time Setup



Fit the ends of the arch into the socket of each base.

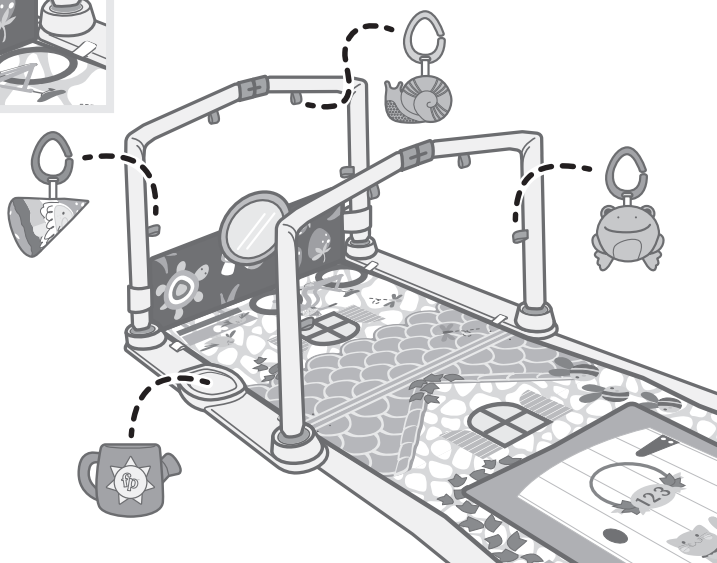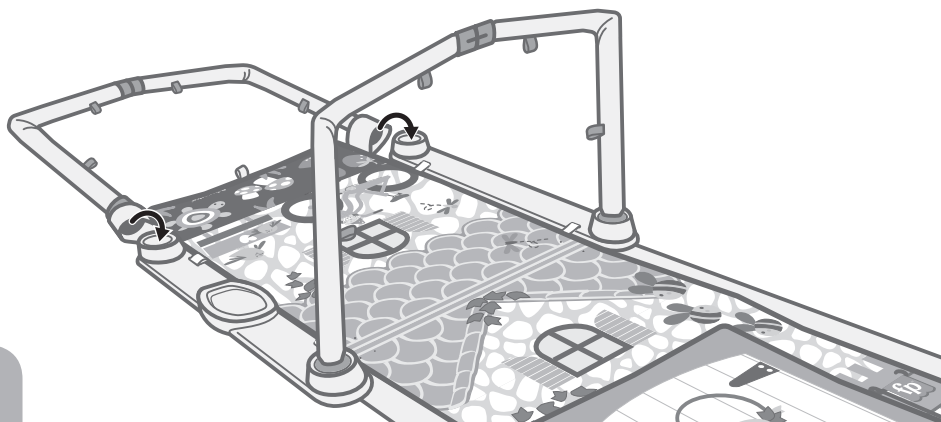


Crawl-Through Cottage Setup

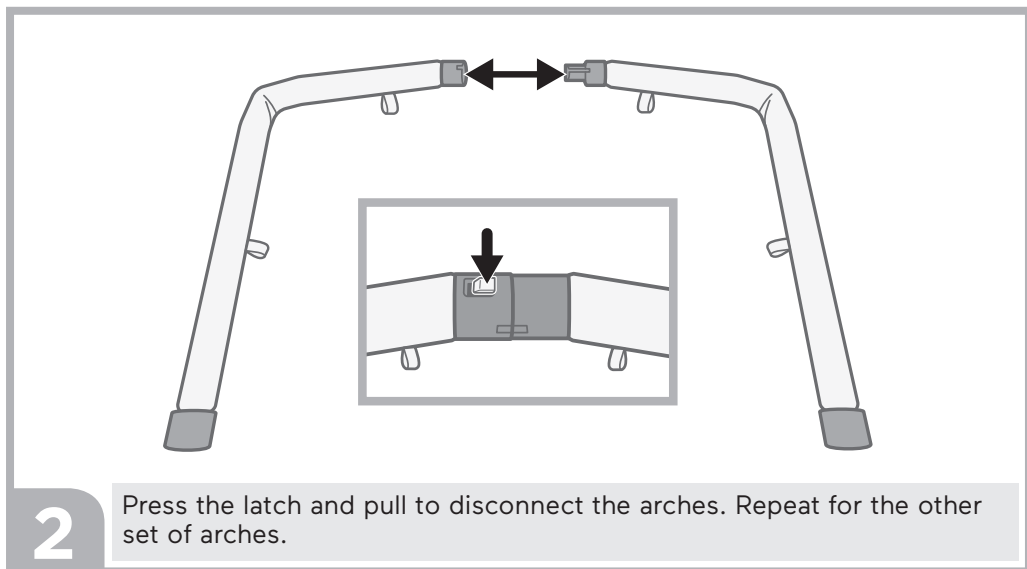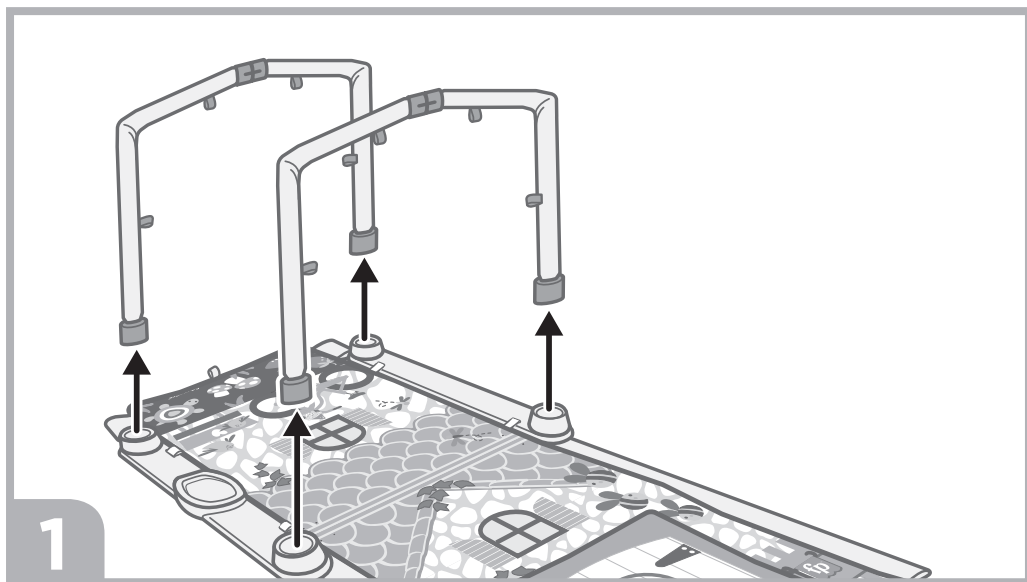


Crawl-Through Cottage Setup



Remove the supports from underneath the bases.

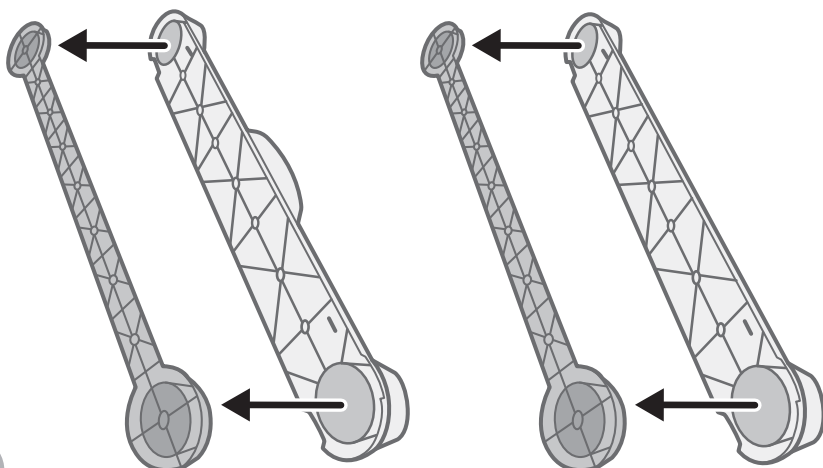

Fit the bases onto the supports.


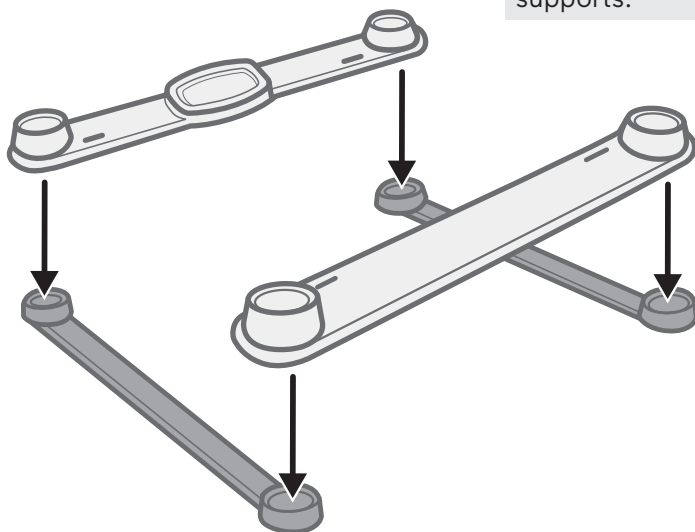


Crawl-Through Cottage Setup

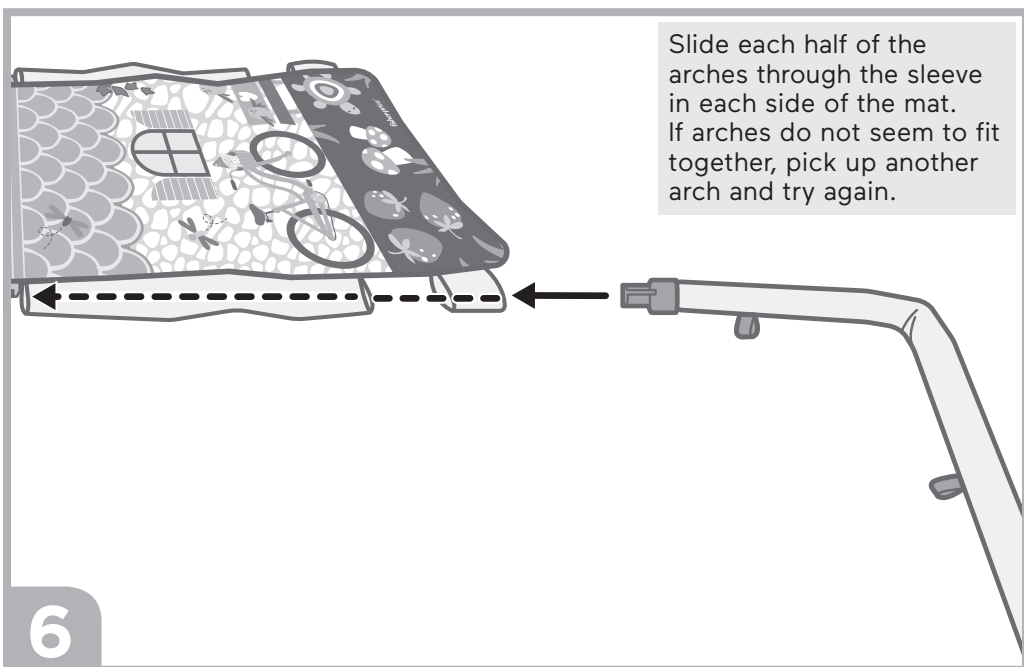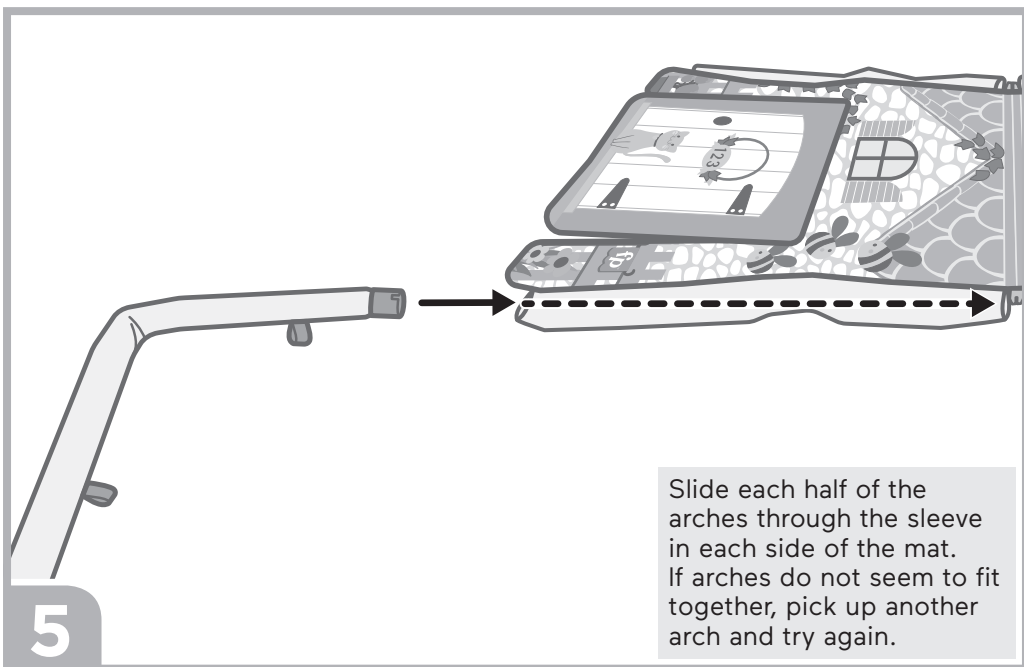


Crawl-Through Cottage Setup

Fit the two plastic tabs on the mat into the openings in the arches.

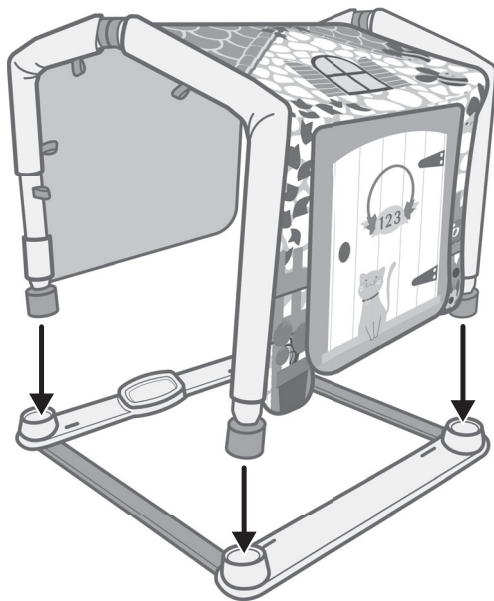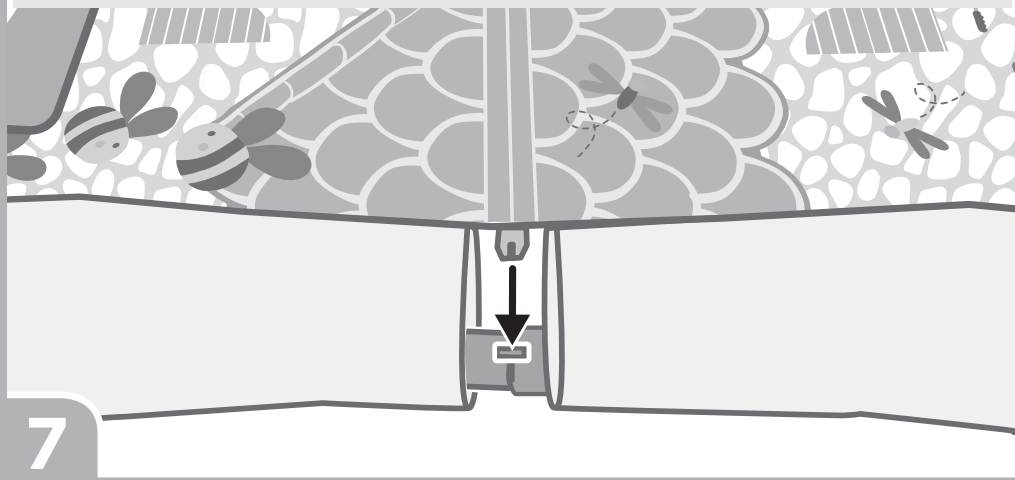

Crawl-Through Cottage Setup

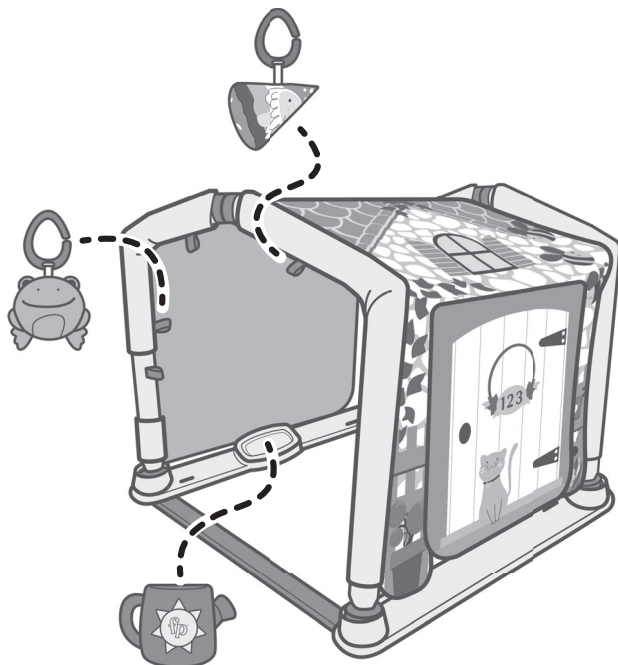

9

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment (+ and -).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

**UNITED STATES**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Consumer Services: 1-800-432-5437.

CANADA

Mattel Canada Inc., 6155 Freemont Blvd., Mississauga,
Ontario L5R 3W2 Consumer Services/Service à la clientèle :
1-800-432-5437. www.service.mattel.com.

GREAT BRITAIN

Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK.
www.service.mattel.com/uk.

NEDERLAND

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond,
Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

SOUTH AFRICA

Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard,
Johannesburg 2196.

©2022 Mattel.

PRINTED IN CHINA

HGB82-0970-G1-1102315417-DOM

