


fisher-price®

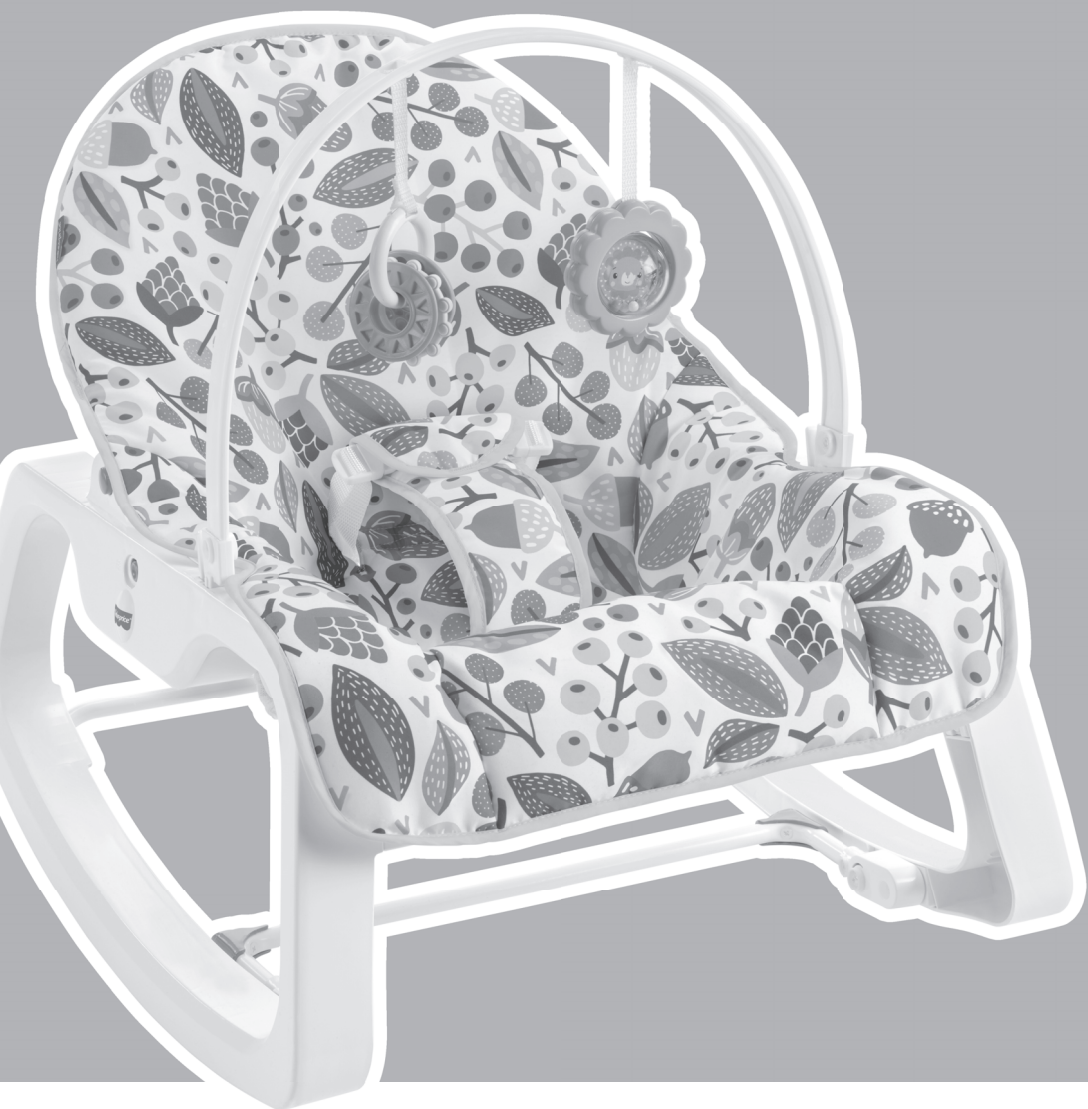

HHB63

OWNER'S MANUAL

## BEFORE YOU BEGIN



### IMPORTANT!

Keep this instruction sheet for future reference, as it contains important information.

Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. Do not use the product if any parts are missing, damaged or broken. Do not use accessories or replacement parts other than those approved by the manufacturer. Never substitute parts.




Adult assembly is required. Tool needed for assembly: Phillips screwdriver (not included).

Please read these instructions before assembly and use of this product. Product features and decorations may vary from images.



Set aside at least 20 minutes for assembly.

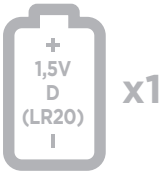

One D (LR20) **alkaline** battery is required (not included). For longer life, use **alkaline** batteries.



Use the product from birth until child weighs 18 kg (40 lb).

## **WARNING**

**FALL HAZARD:** Children have suffered head injuries falling from rockers.

 

- **ALWAYS** use restraints until child is able to climb in and out of the product unassisted. Adjust to fit snugly.
- **NEVER** lift or carry child in rocker.
- **STOP** using rocker when child has reached 40 lb.
- The upright position is only for children who have developed enough upper body control to sit up without tipping forward.
- **ALWAYS** place rocker on floor. Never use on any elevated surface.

**SUFFOCATION HAZARD:** Children have suffocated when seats tipped over on soft surfaces.


- **NEVER** use on a bed, sofa, cushion, or other soft surface.
- Stay near and watch child during use. This product is not safe for unsupervised use or unattended sleep.
- The toy bar is not a carry handle. Never use toy bar to lift or carry product.

## PARTS




**IMPORTANT!** Please remove all parts from the package and identify them before assembly. Some parts may be packed in the pad.

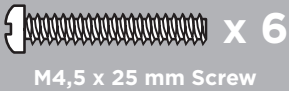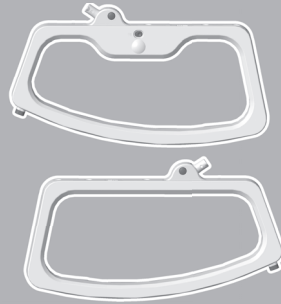

 **NOTE:** Tighten or loosen all screws with a Phillips screwdriver. Do not over-tighten the screws.

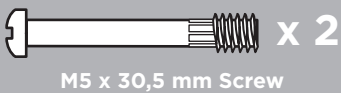


## ASSEMBLY

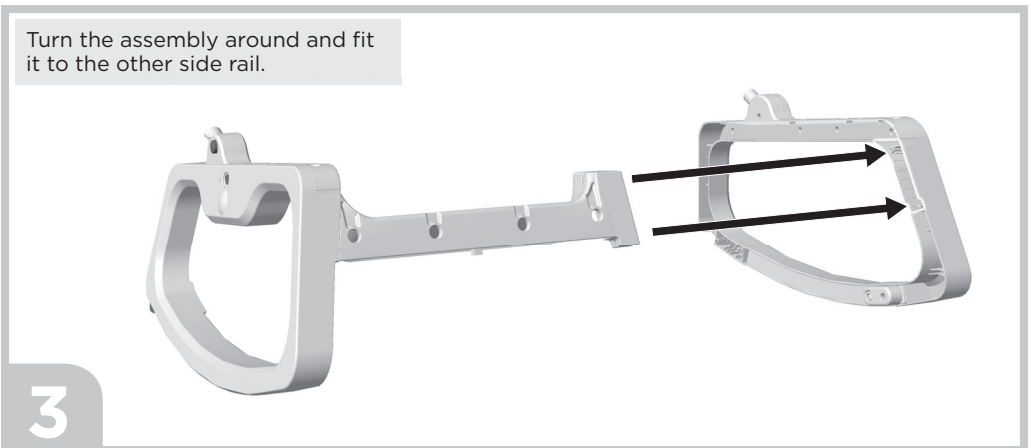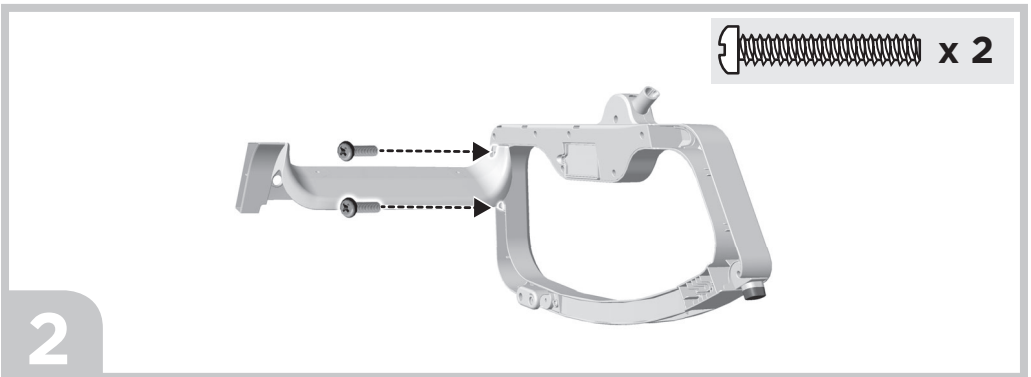
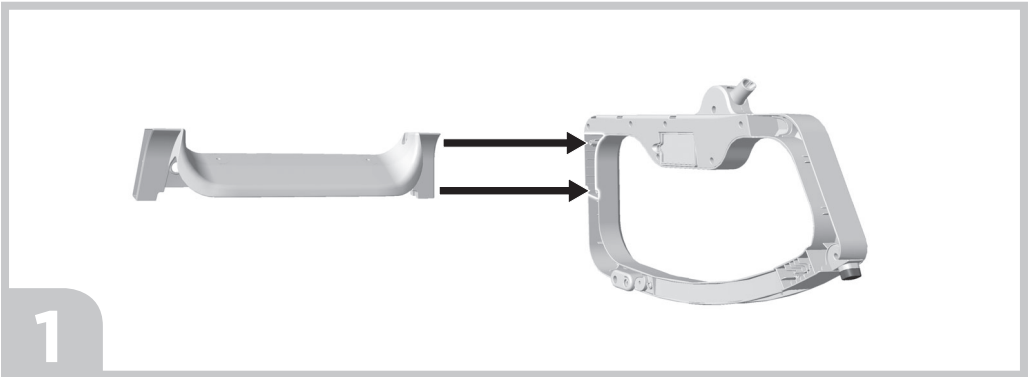


## ASSEMBLY

 x 2


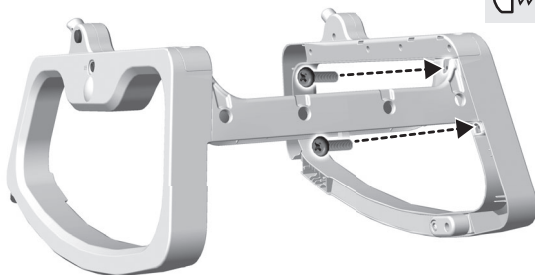


4

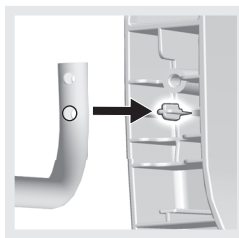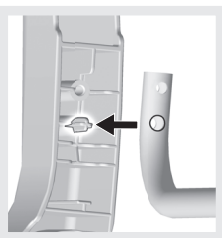

5

Turn the assembly around and fit the ends of the crossbar to the pegs on the side rails.

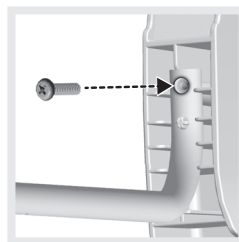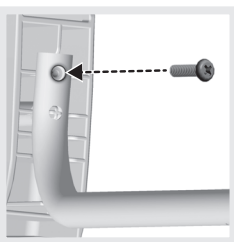

6

 x 2


## ASSEMBLY

Turn the assembly face down to fit the kickstand to the side rails.

7



8

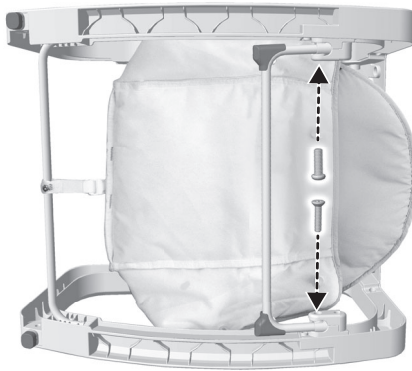

Turn the assembly upright. After assembling the seat back tube, pull up on it to be sure it's secure!

9



## ASSEMBLY

10



11




12



## ASSEMBLY

After assembling the pad, push down in the seat area to be sure it's secure to the frame!

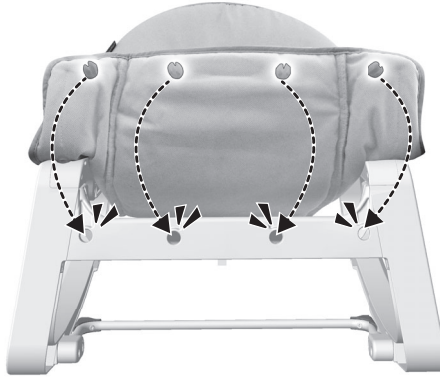

13

The toy bar is removable. Simply press the ends of the latches and lift the toy bar.



14


## BATTERY INSTALLATION

The battery compartment is located on the inside of one of the side rails.

Loosen the screw in the battery compartment door and lift to remove the door.

Insert one D (LR20) **alkaline** battery.

Replace the battery compartment door and tighten the screw.

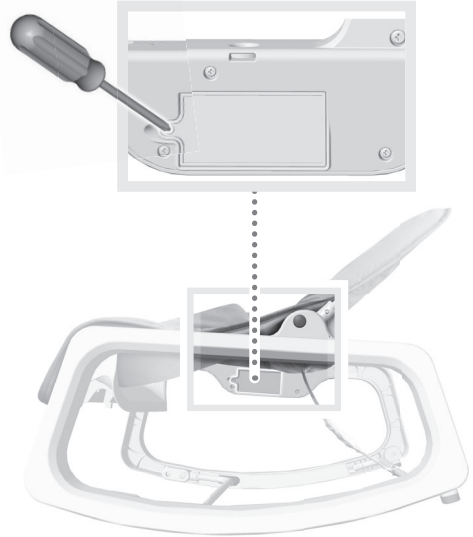

Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

## SEAT BACK POSITION

Press both buttons and **lift for upright** or **lower for recline**.




## KICKSTAND

Rotate the kickstand **in for rocker** or **out for infant seat**.



**Rocker**

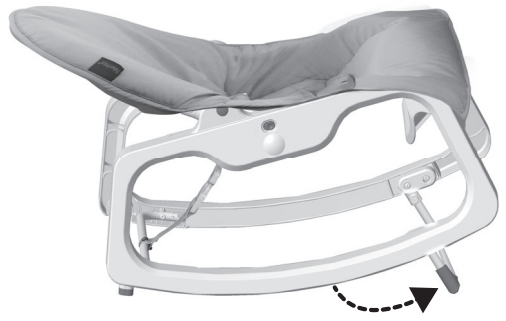

**Infant Seat**

## RESTRAINT SYSTEM




Position the restraint pad between your child's legs and fasten the restraint belts to each side of the restraint pad. **Make sure you hear a "click" on both sides.**


Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.

Tighten each waist belt so that the restraint system is snug against your child.

1

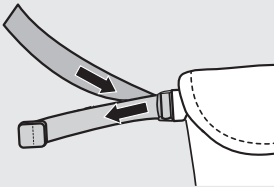

**To tighten:** Feed the attached end of the restraint belt into the buckle to form a loop. Then, pull the free end of the restraint belt.

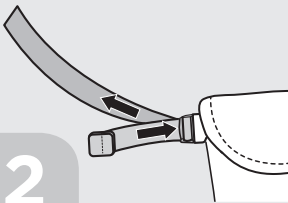

**To loosen:** Feed the free end of the restraint belt into the buckle to form a loop. Then, pull the anchored end of the restraint belt.

2

## CALMING VIBRATIONS

Slide switch to turn vibrations ON or OFF. Low battery power or a static charge may cause this product to operate erratically. If vibration does not turn on or will not turn off, remove and reinstall the battery. If you still experience a problem, replace the battery.



## TODDLER ROCKER

1



Fit the restraint system back through the slots in the pad when your child is ready to use as a toddler rocker.

2



## CARE

The pad is machine washable. Wash the pad separately, with a mild detergent, in cold water and on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly.

**To remove the pad:** Lift to remove the pad pegs from the frame. Unfasten the rear strap buckle on the pad and remove the pad.

The frame and toy bar may be wiped clean using a mild cleaning solution and a damp cloth. Do not use bleach. Do not use harsh or abrasive cleaners. Rinse clean with water to remove residue. Do not immerse the frame or toy bar.

**When replacing the pad,** be sure to fasten the rear strap buckle on the pad. Follow the assembly instructions to attach the pad properly.



## BATTERY SAFETY INFORMATION

### CAUTION

To prevent battery leaks, which can burn skin and eyes:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment (+ and -).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product immediately. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Always replace the entire set of batteries at one time.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.



**AUSTRALIA:** Mattel Australia Pty. Ltd.,  
658 Church Street, Locked Bag #870,  
Richmond, Victoria 3121 Australia.  
Consumer Advisory Service 1300 135 312.

**NEW ZEALAND:** 16-18 William Pickering Drive,  
Albany 1331, Auckland.