 


THOMAS & FRIENDS™

LAUNCH & LOOP MAINTENANCE YARD™

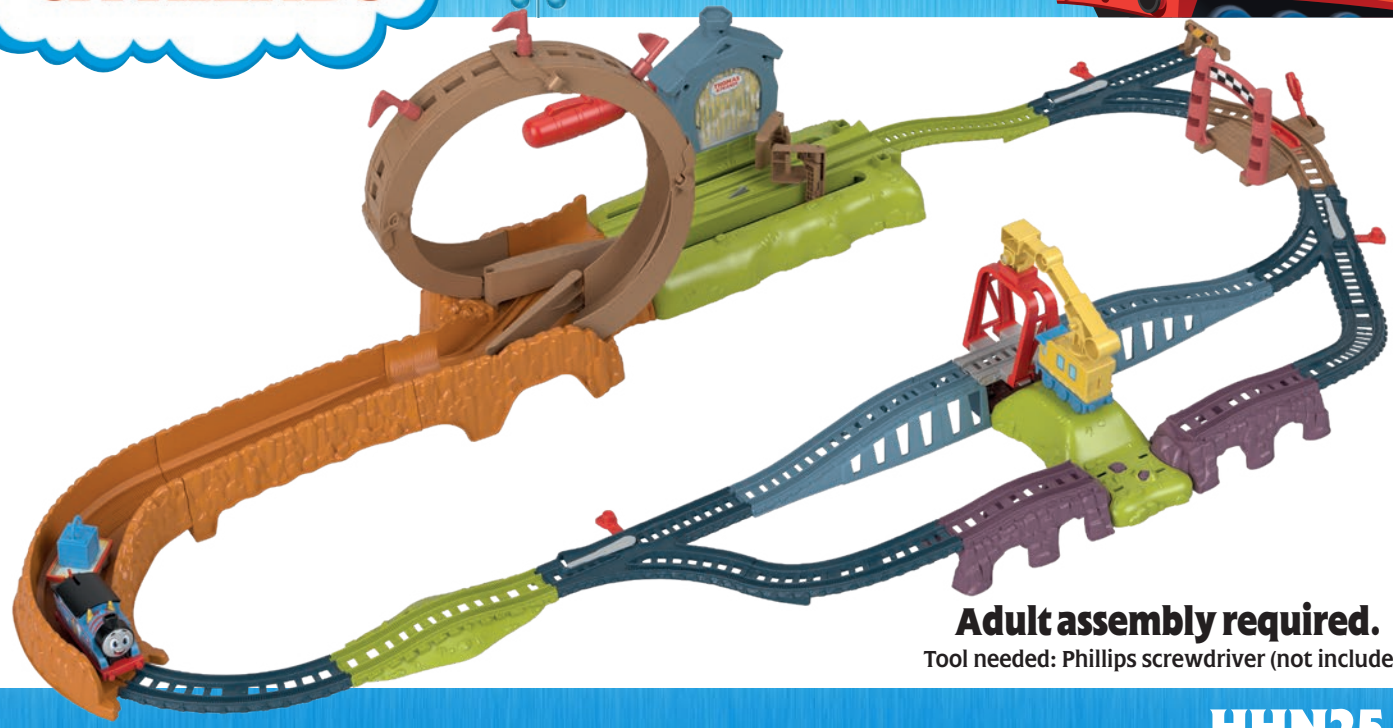

Adult assembly required.
Tool needed: Phillips screwdriver (not included).

INSTRUCTIONS

Keep these instructions for future reference as they contain important information.

HHN25



UNITED STATES
Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Consumer Services: 1-800-432-5437.

CANADA
Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2. Consumer Services/Service à la clientèle : 1-800-432-5437. www.service.mattel.com.

GREAT BRITAIN
Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK.
www.service.mattel.com/uk.

NETHERLAND
Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

AUSTRALIA
Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service
1300 135 312.

NEW ZEALAND
16-18 William Pickering Drive, Albany 1331, Auckland.

SOUTH AFRICA
Mattel South Africa (PTY) LTD, Office 102 13, 30 Melrose Boulevard, Johannesburg 2196.


CREATED BY BRIT ALLCROFT

Based on the Railway Series by The Reverend W Awdry.
©2022 Gullane (Thomas) Limited. Thomas the Tank Engine & Friends™ and Thomas & Friends™ are trademarks of Gullane (Thomas) Limited.
©2022 HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.


©2022 Mattel. ® and ™ designate U.S. trademarks of Mattel, except as noted. **PRINTED IN CHINA.**
Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500.



 
HHN25-0970G3-1102788172-DOM

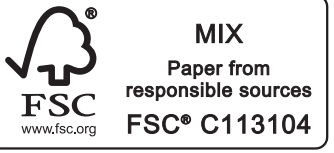

What's Included

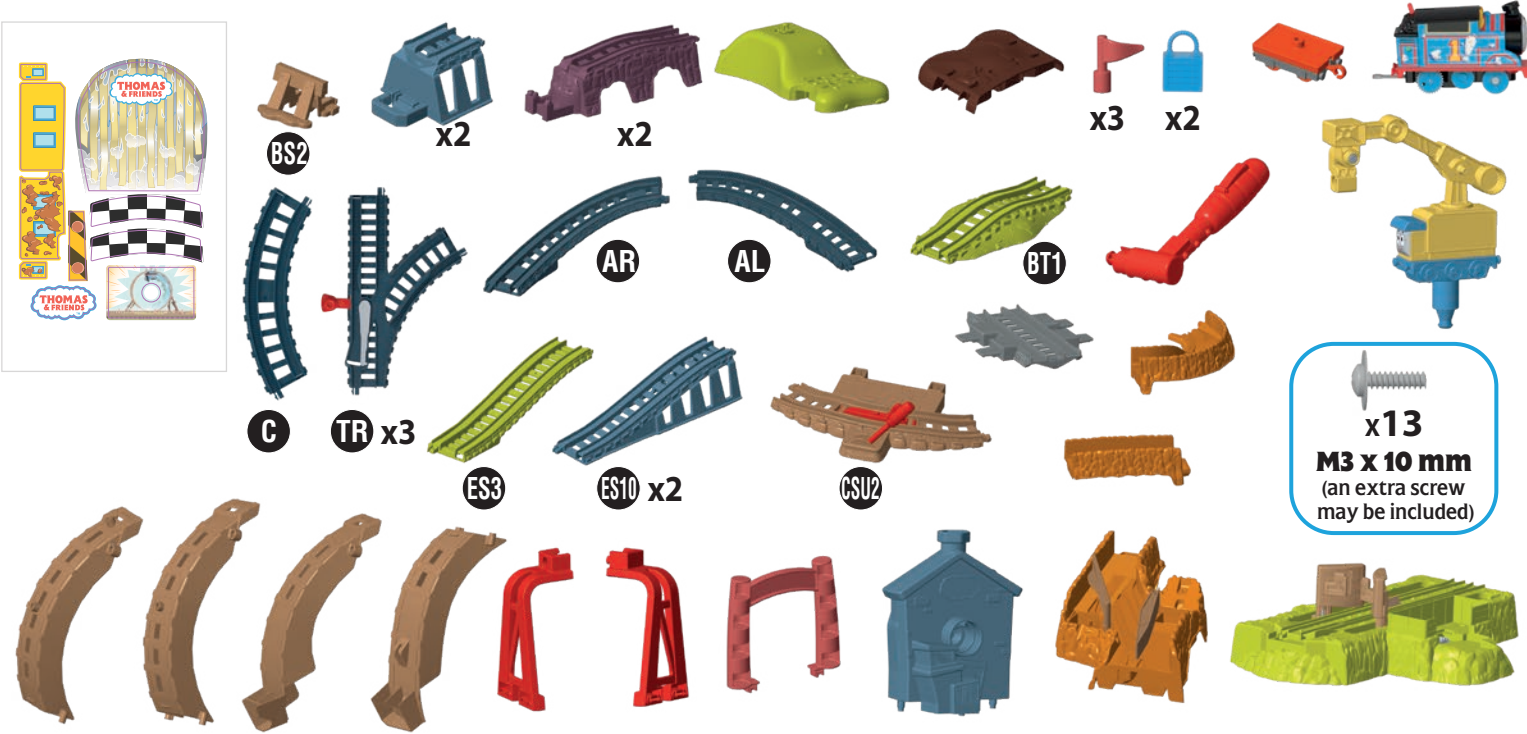 


Helpful Hints

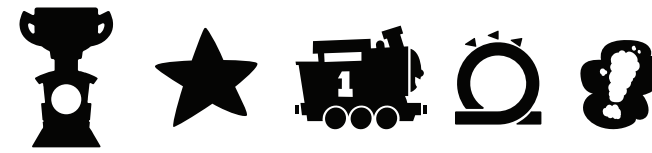 

Look for matching icons on the loop pieces.

 Look for codes on the bottom of some track pieces.

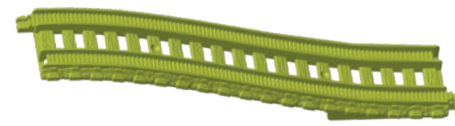

This set includes tracks with a bend so that the engine can climb up and travel down!

Some engines may not work on this track set.



Assembly steps marked with a star indicate a permanent assembly. Once these parts are assembled, they can't be taken apart.

Assembly

-
-
-
-
-
-
-

Assembly

 
8




9



10

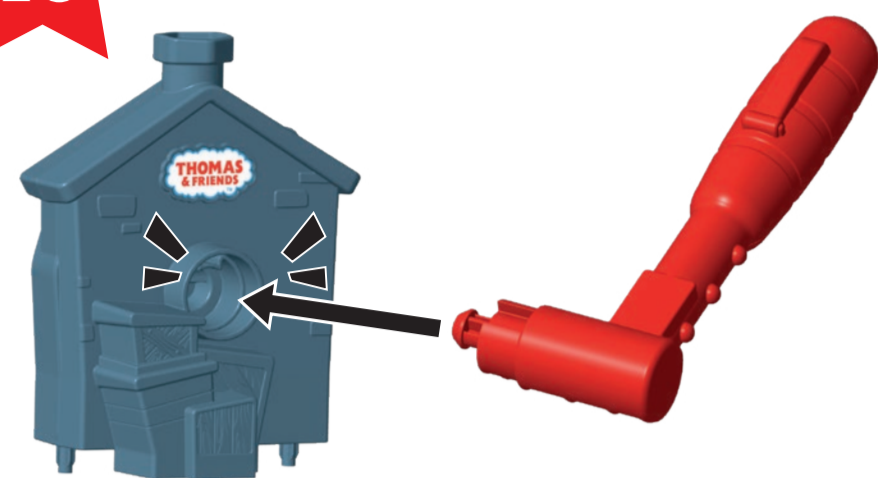


11

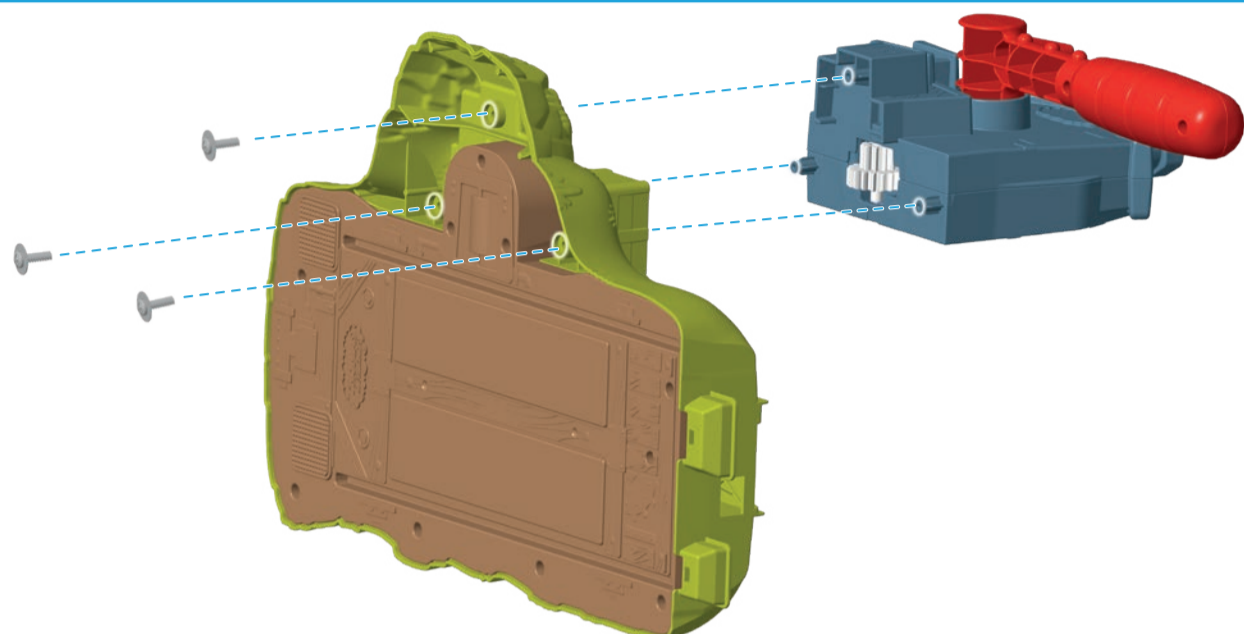 


 **X3**

 12

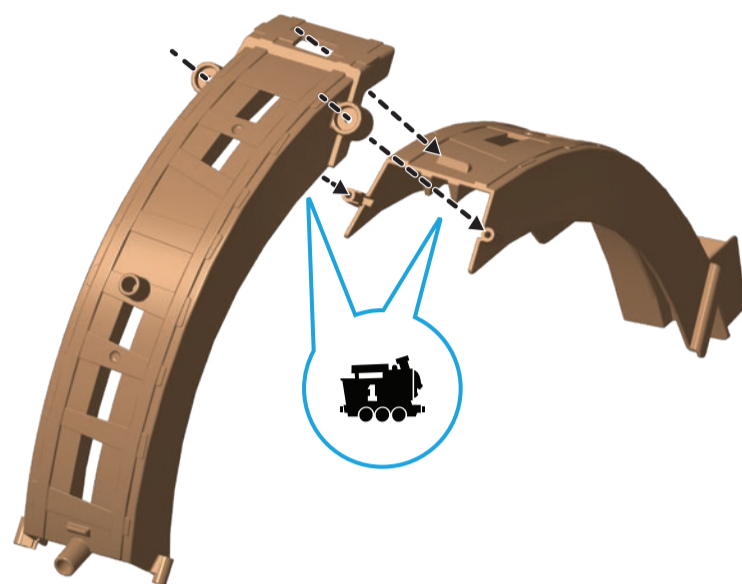


13





 **X2**

 14

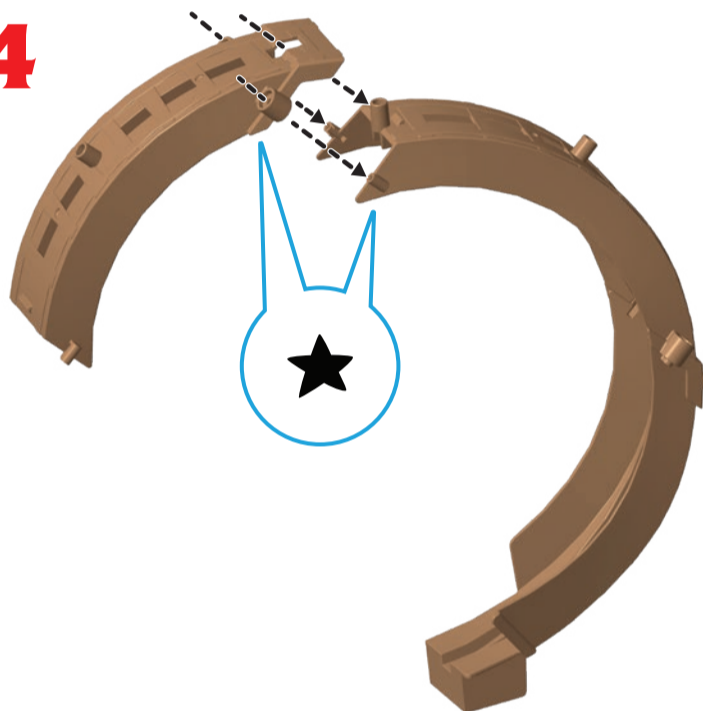


15

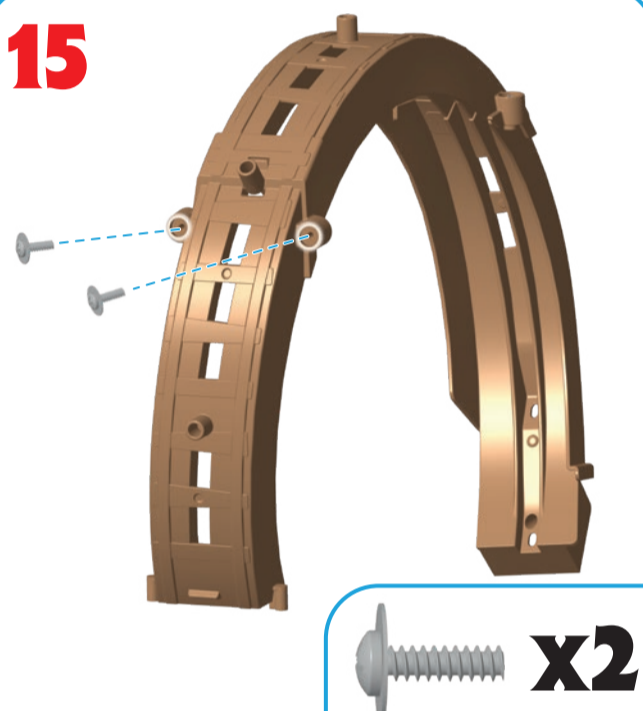 



 **X2**

 16

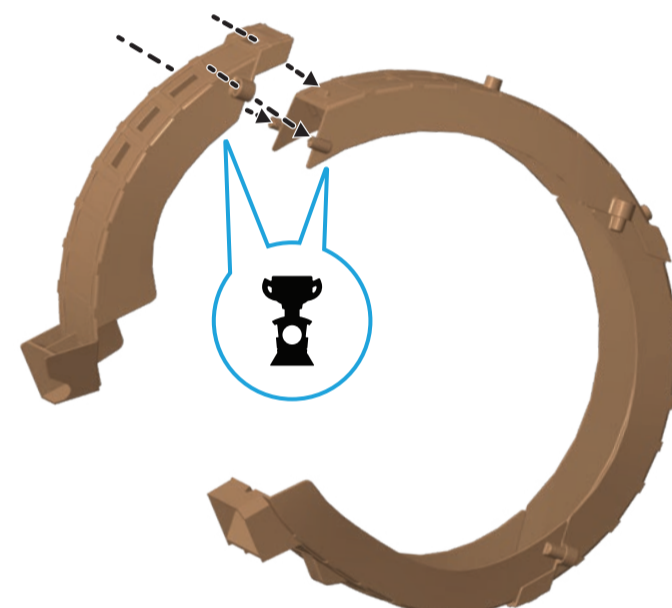


17

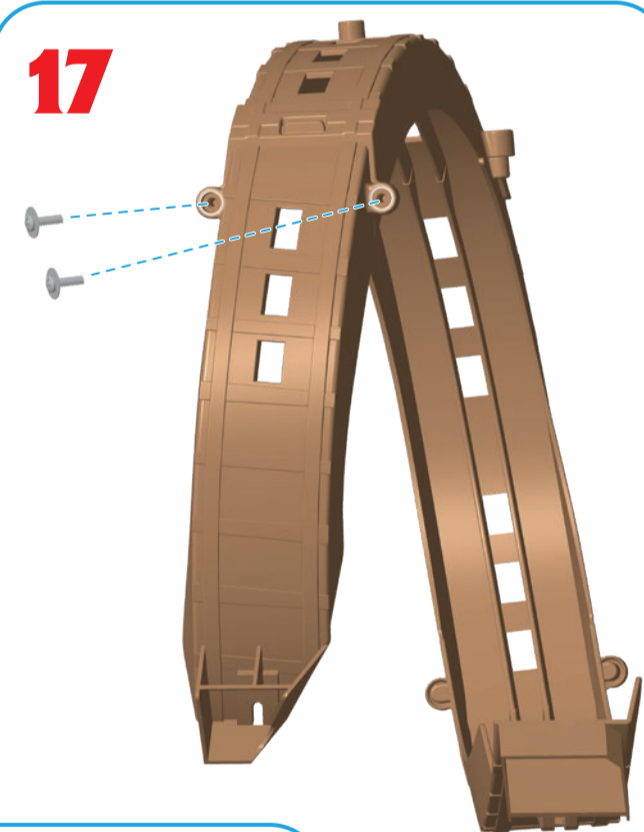 


 **X2**

 18

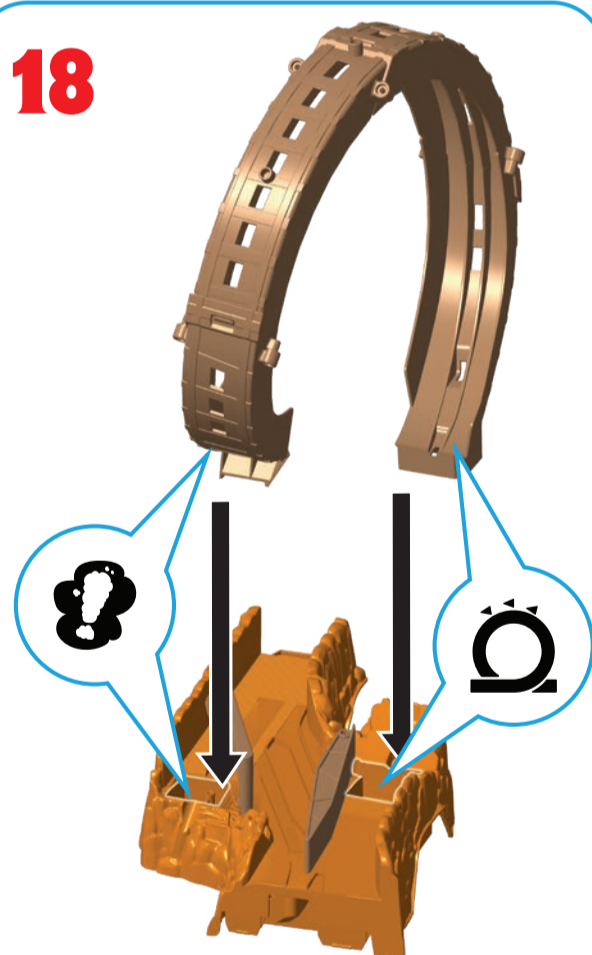

19

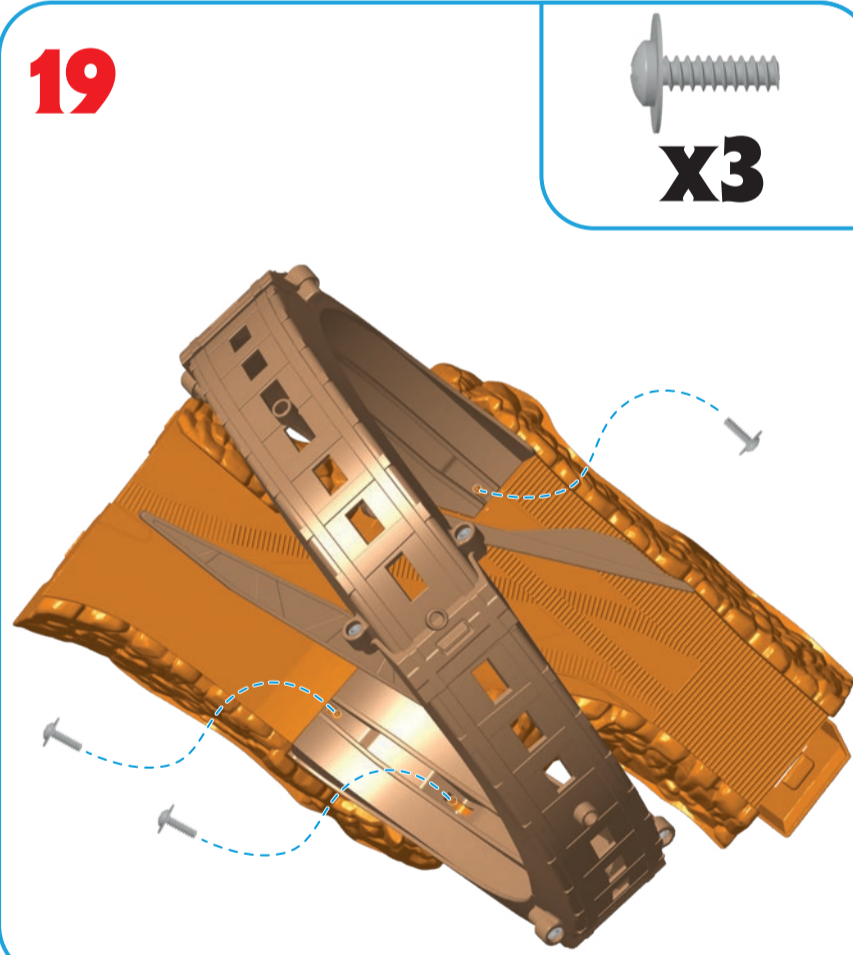 


 **X3**


20



 
21

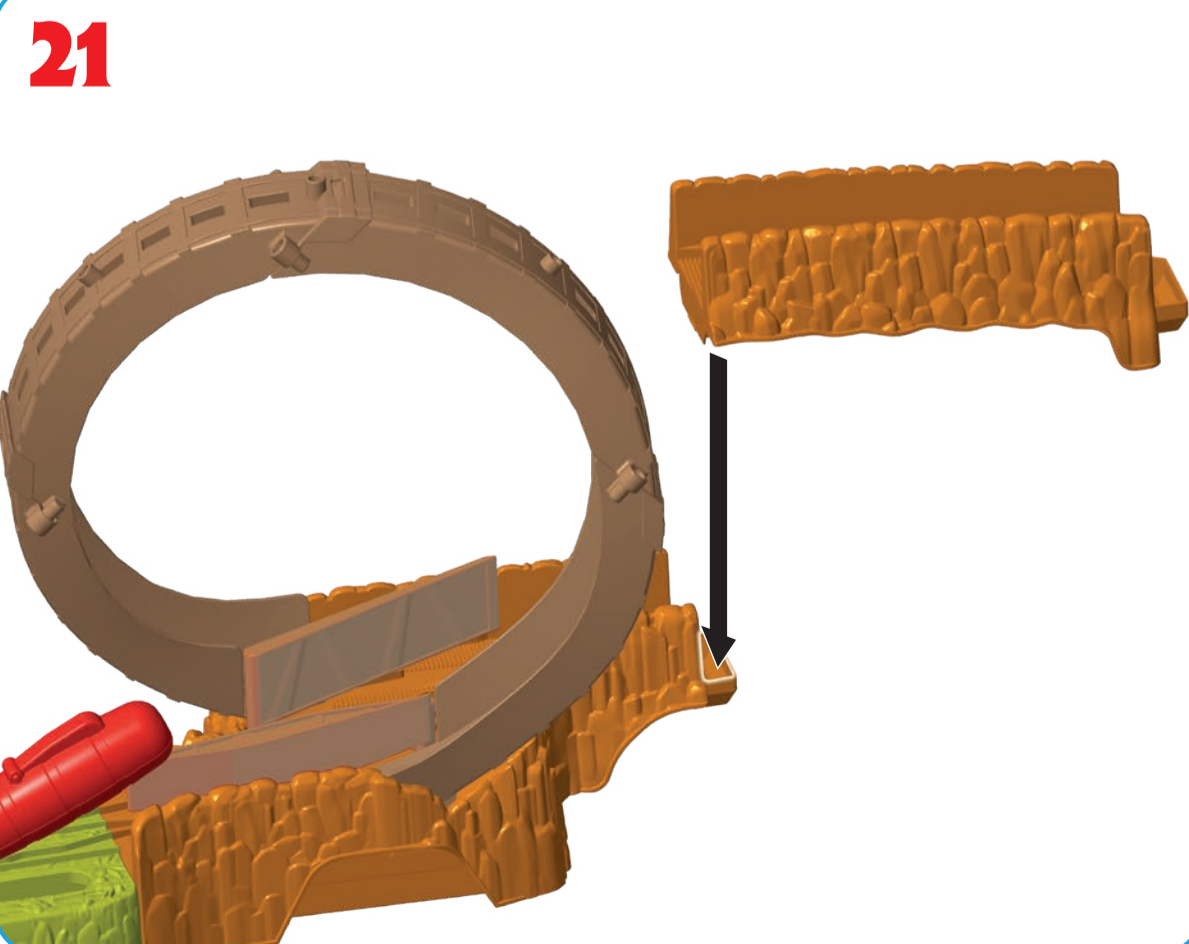


22

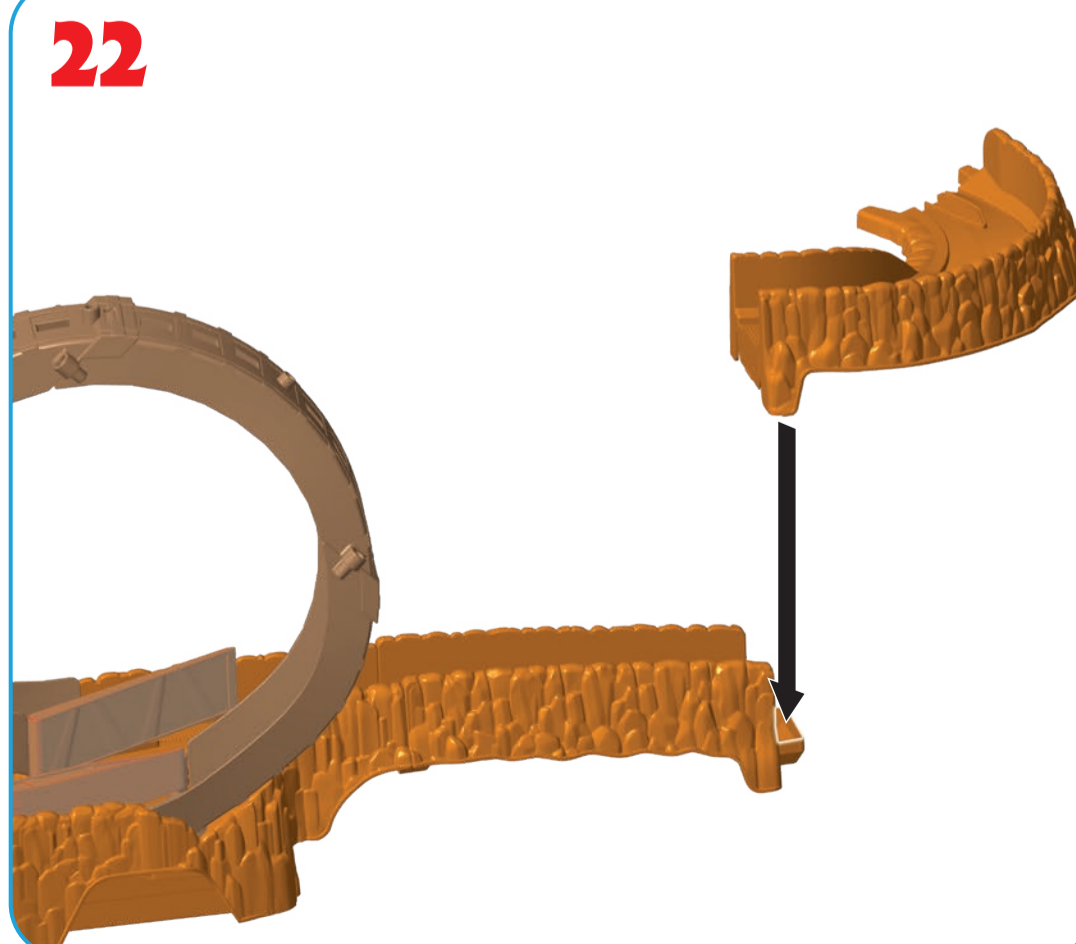 

 Assembly is complete!
Move on to the track layout section on the other side.

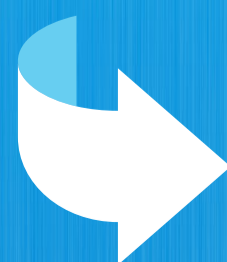

Track Layout

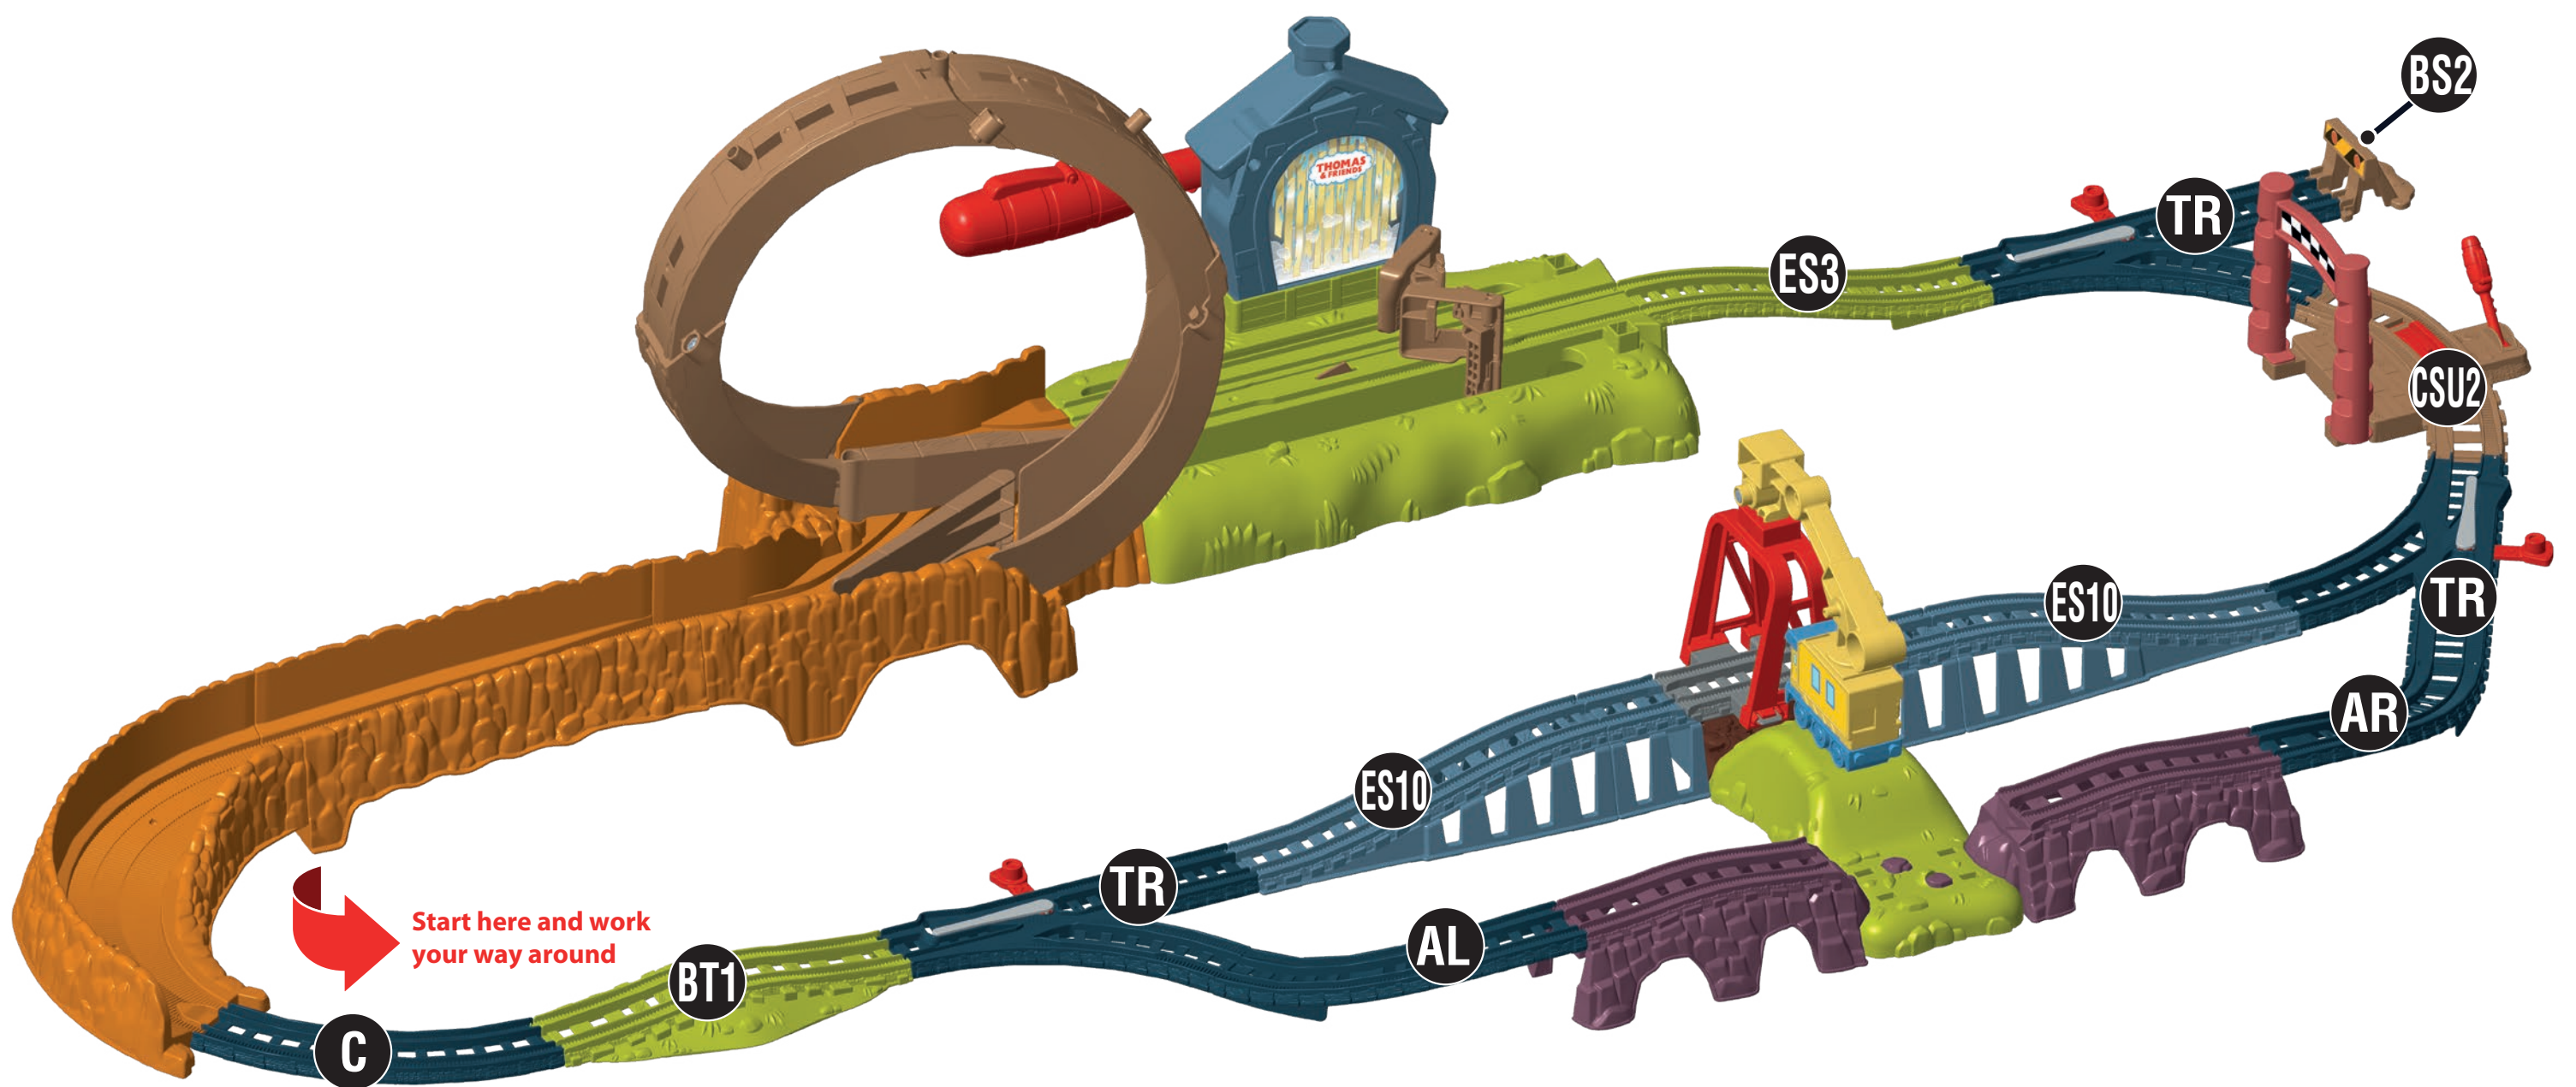 

Battery Information

REQUIRES:

- Phillips screwdriver (not included) for battery installation.
- Two AAA (LR03) **alkaline** batteries (not included).

BATTERY INSTALLATION

Access the battery compartment by loosening the screw in the bottom of the engine and separating the top half of the engine from the bottom half of the engine. Install the batteries as indicated inside the battery compartment. Re-assemble the halves of the engine and tighten the screw. If the engine begins to malfunction, first check battery installation. You may need to reset the electronics by removing the batteries and reinstalling them. If the engine continues to malfunction or no longer operates, it's time to replace the batteries with fresh batteries. For longer life, use **alkaline** batteries.

 
 
 
BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity (+ and -).
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of batteries safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.





Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

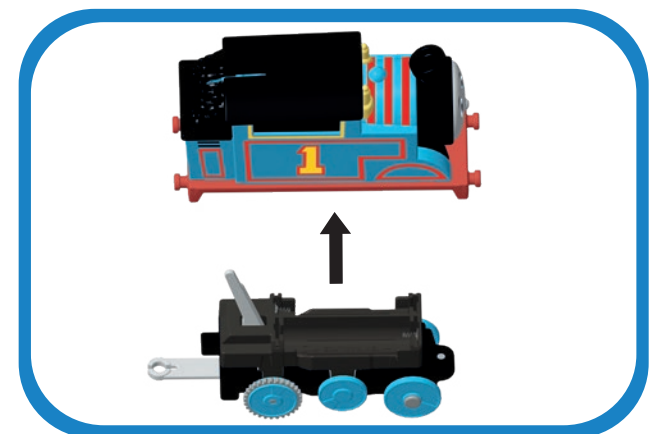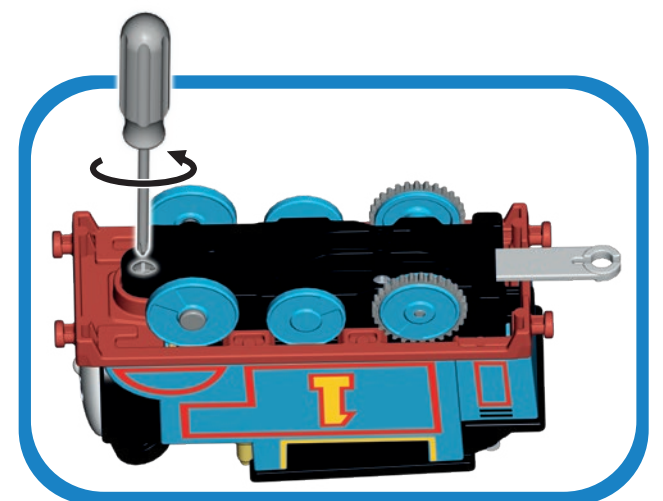

Let's Play

  1

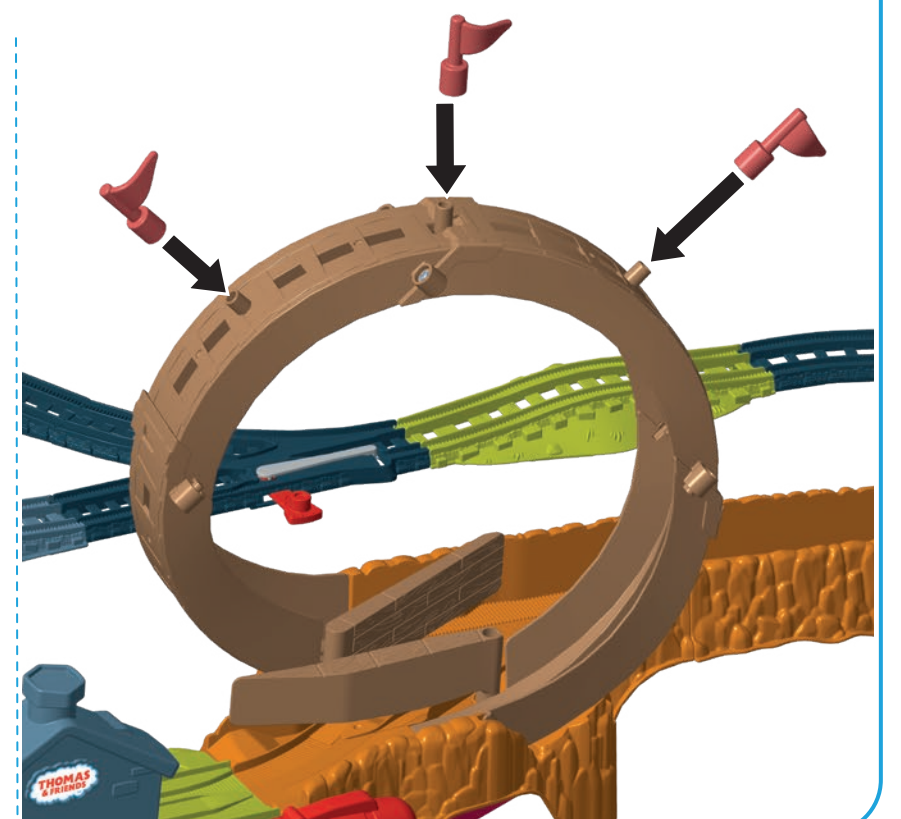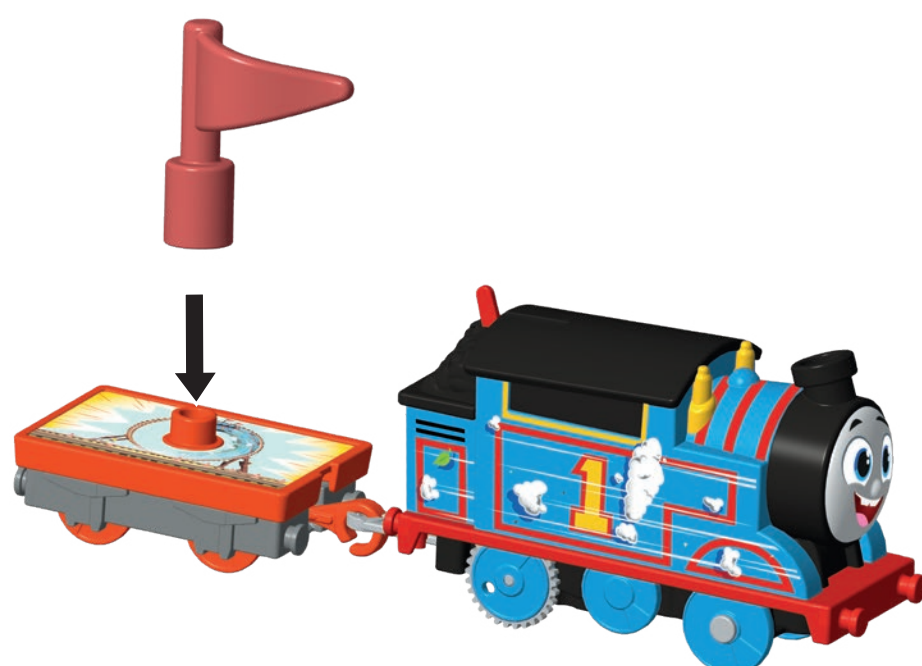


Only use the cargo car and cargos included in this playset.

Let's Play


2 Use the switch tracks to change tracks.



 
3 Set the stop-track to "STOP".

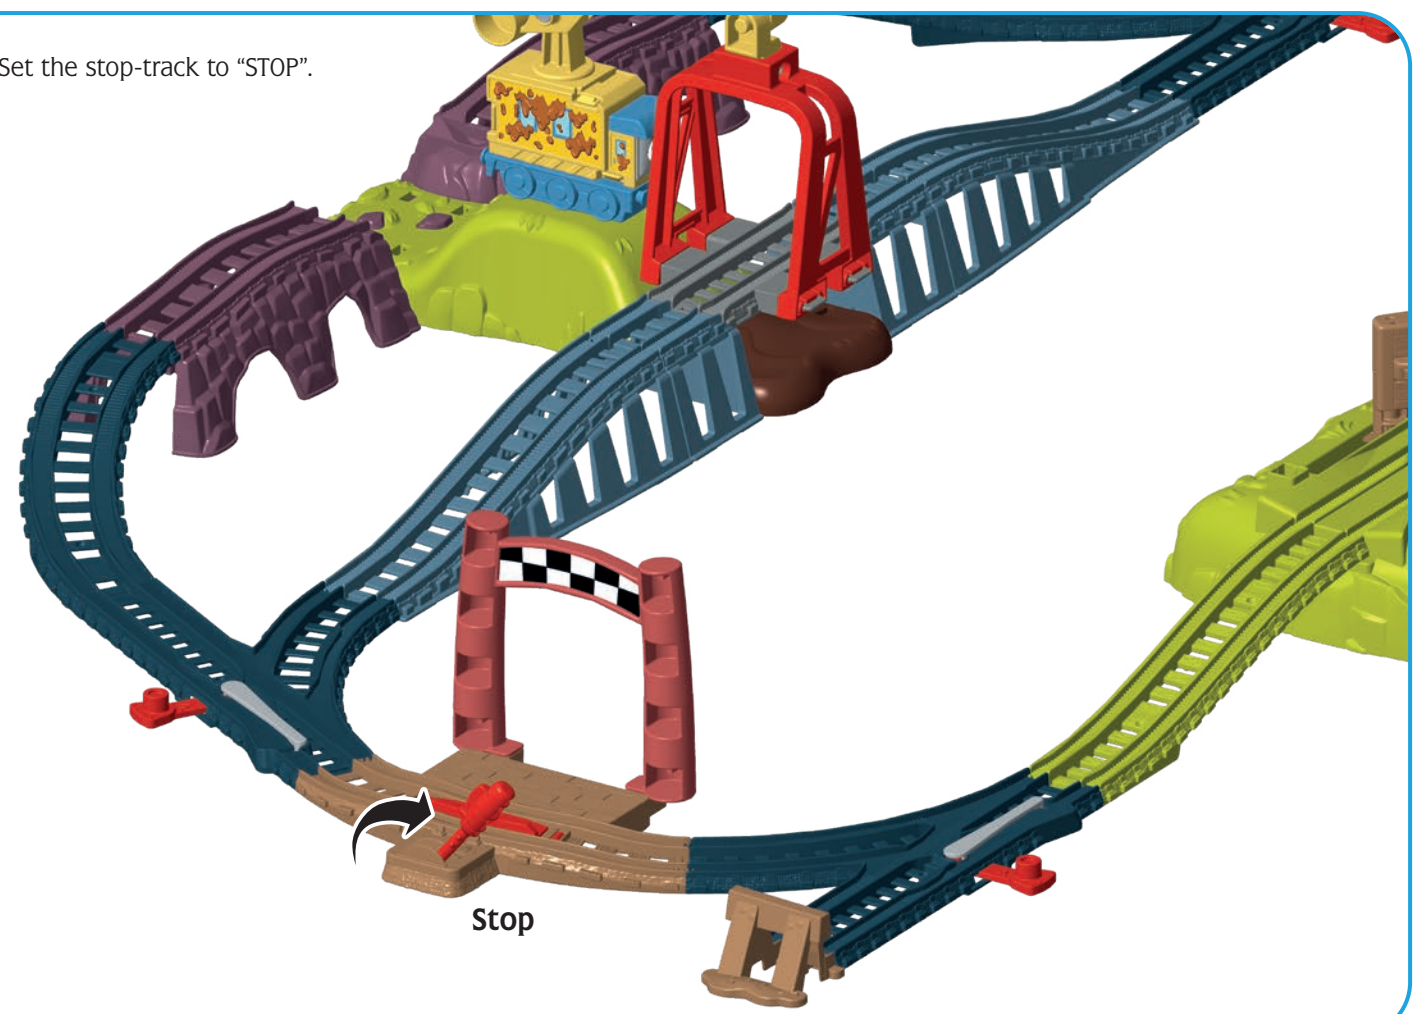

 
4 Lift up the basket, then rotate Carly to connect the tracks. (two ways to go).

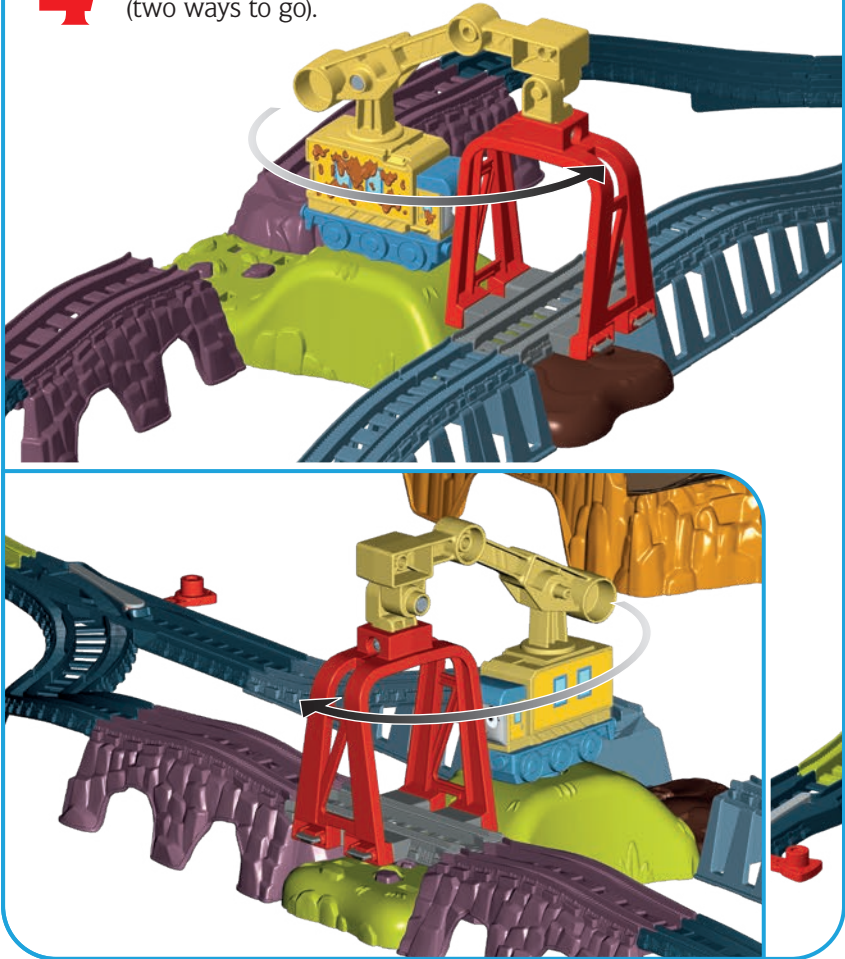

 
5 Pull the handle to the stop position to set the launcher and release. The engine will bypass the Loop if the Launcher is not set.

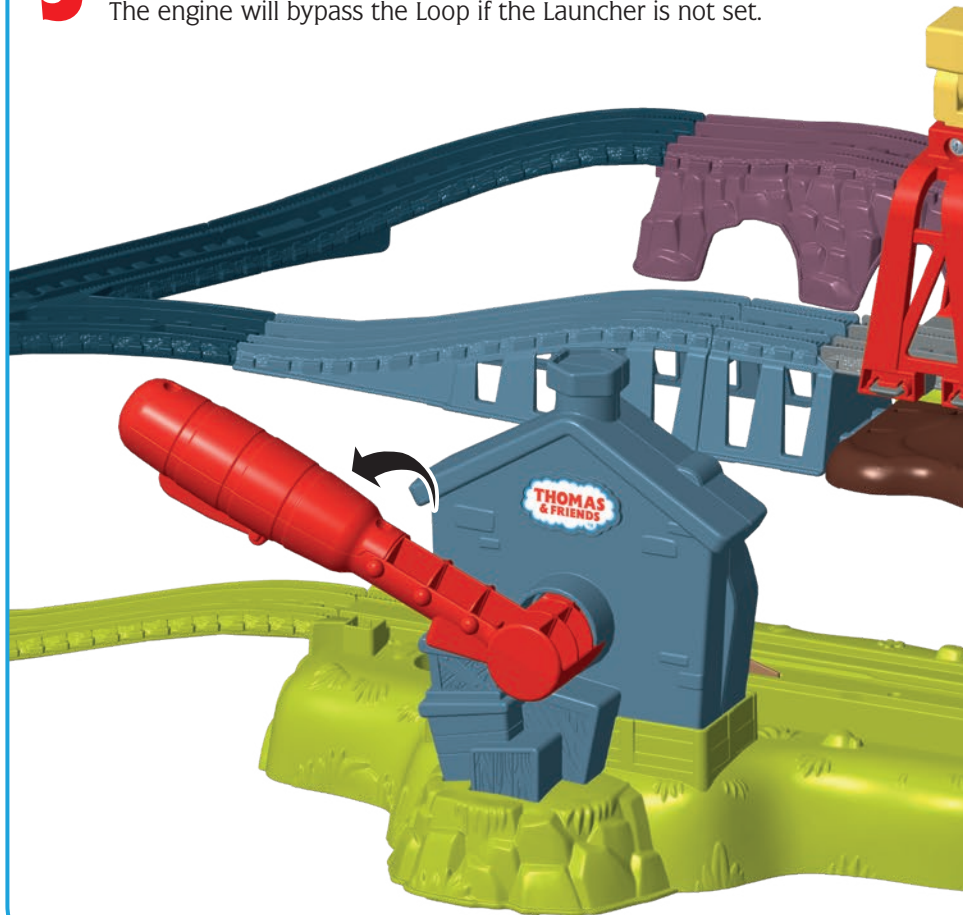

 6 Place engine on the track and turn power on.

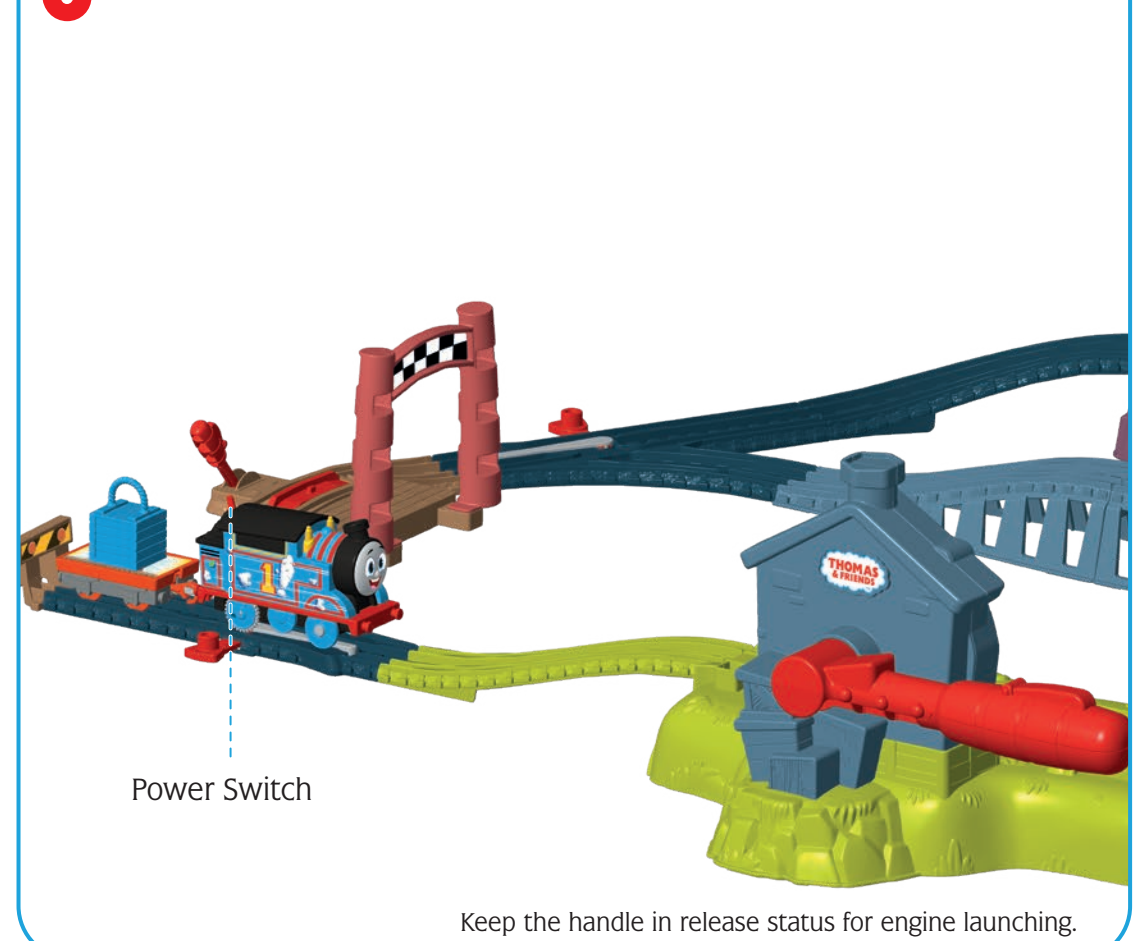

 7 The launcher sends the engine "soaring" through the 360 loop! Reset the launcher for the next round play.

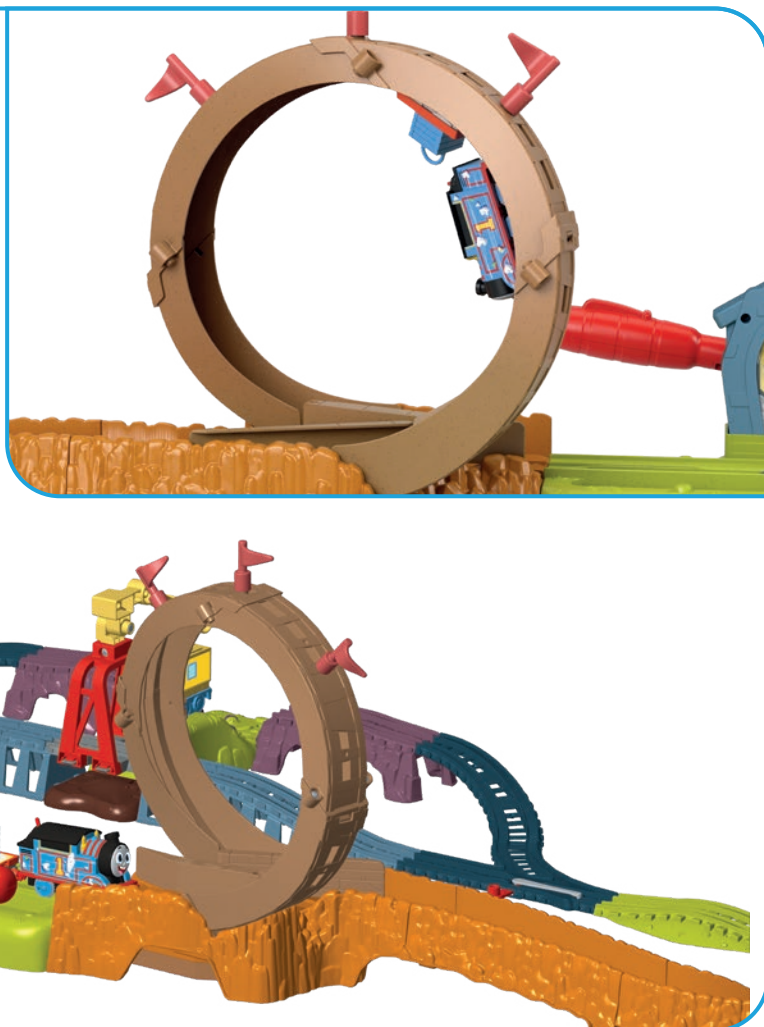

8 The engine passes through the broken bridge with Carly's help.



9 As the engine stops, unload the cargo to the platform.



10 Flip the lever to release the engine.

