

MATCHBOX

ASSEMBLY INSTRUCTIONS.



ADULTS, FIND OUT MORE:

3+



MIX

Paper from responsible sources
FSC® C113104

INSTRUCTIONS

CONTENTS

 
Please keep these instructions for future reference as they contain important information.

Warning: Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range.

ADULT ASSEMBLY REQUIRED






WARNING:
CHOKING HAZARD - Toy contains small balls. Not for children under 3 years.



HHT06-0970
1102826631-DOM




   1 APPLY LABELS

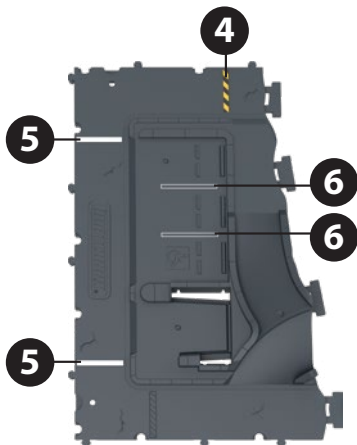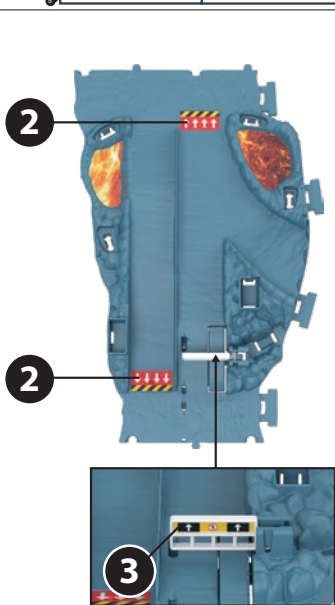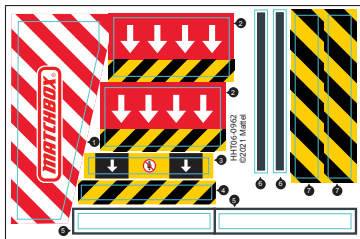

2 BATTERY REPLACEMENT

 - Batteries included are for demonstration purposes only.
- Replace the batteries if lights dim or sounds distort.
- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Remove batteries and dispose of them safely.
- Install 3 new AG13/LR44 1.5V button cell batteries in the battery box.
- Replace battery cover and tighten screw.
- For best performance, use only alkaline batteries.
- When exposed to an electrostatic source, the product may malfunction. To resume normal operation, remove and reinstall the batteries.

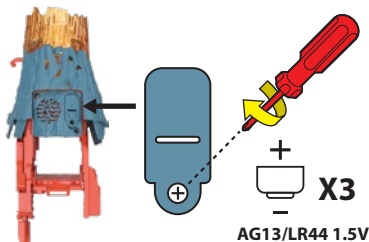


AG13/LR44 1.5V


3 ASSEMBLY

1

 ASSEMBLY INSTRUCTIONS.
ADULTS, FIND OUT MORE:

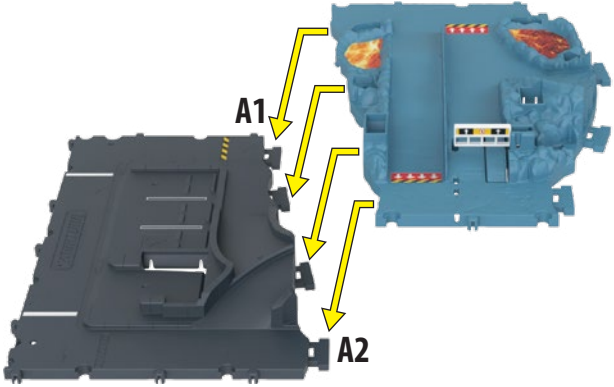

2

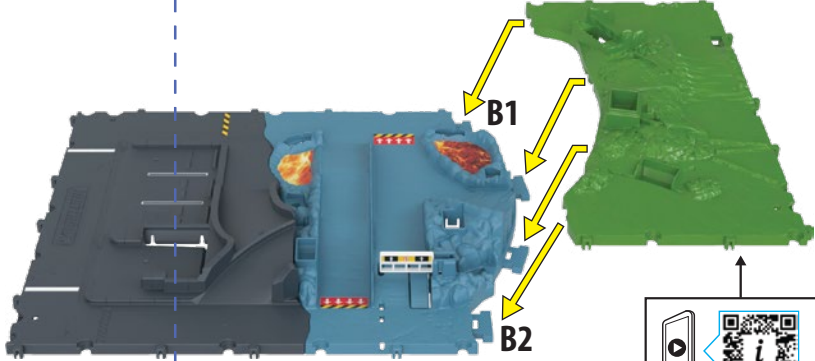 


Assembly QR code underneath.


3








 10


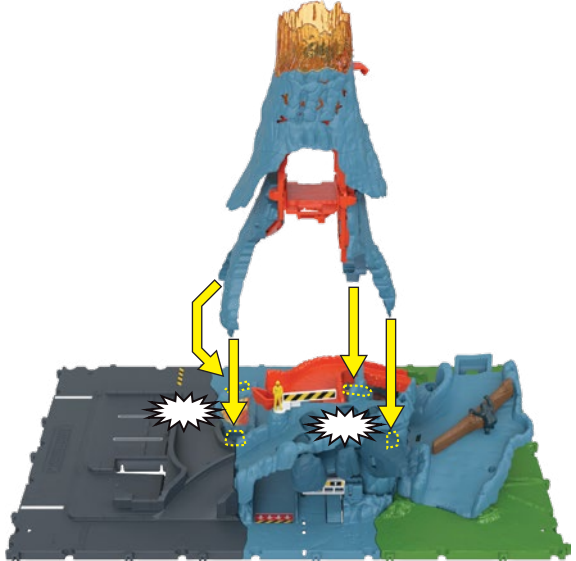


11


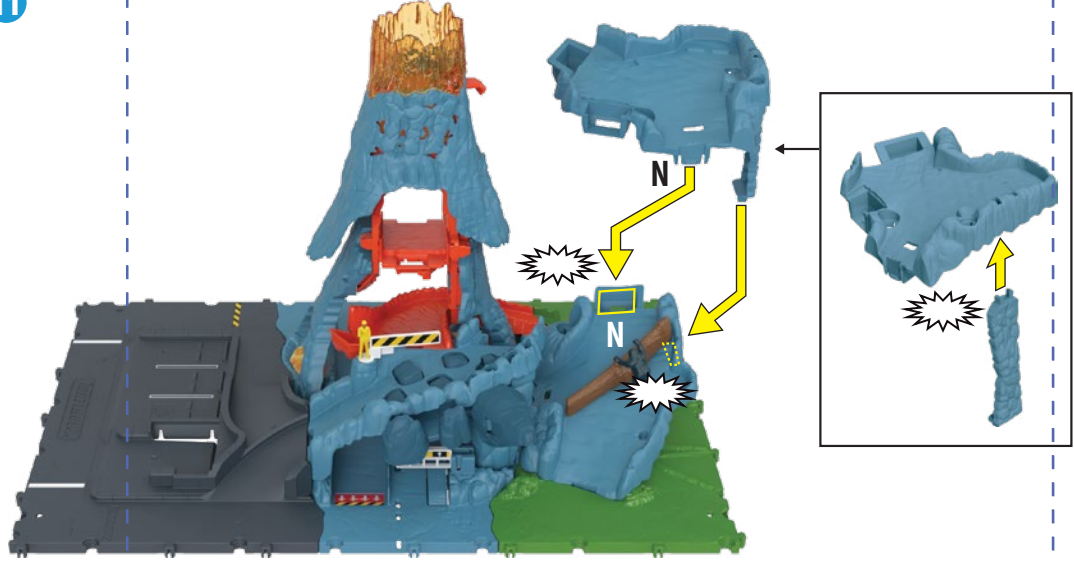 


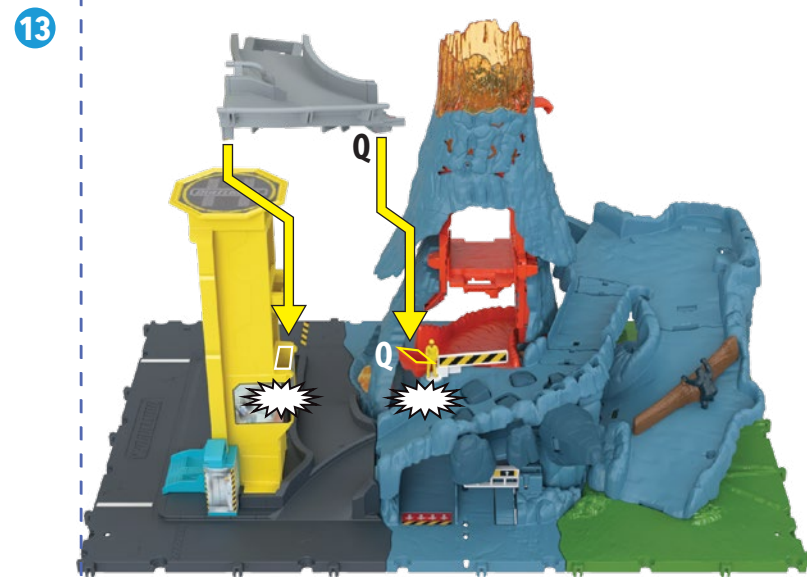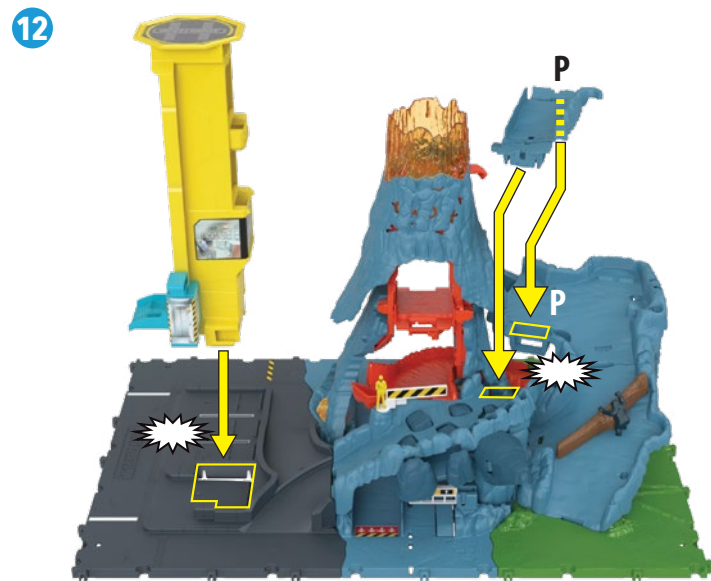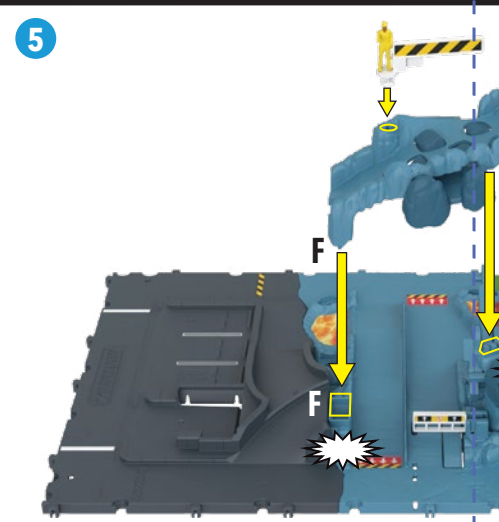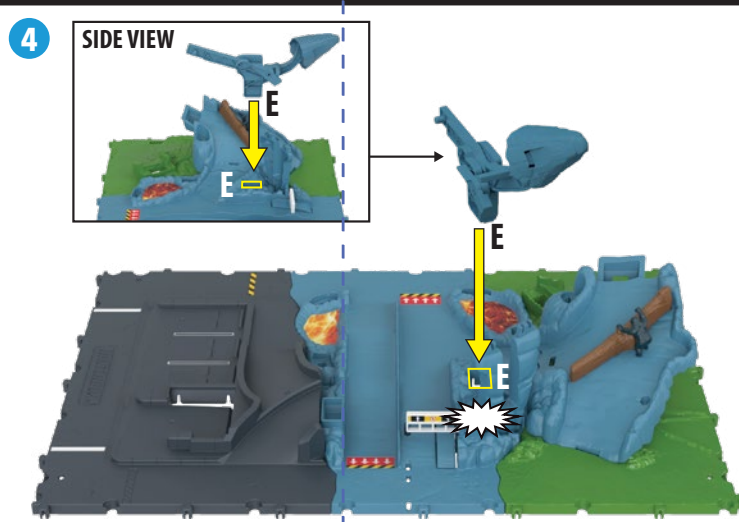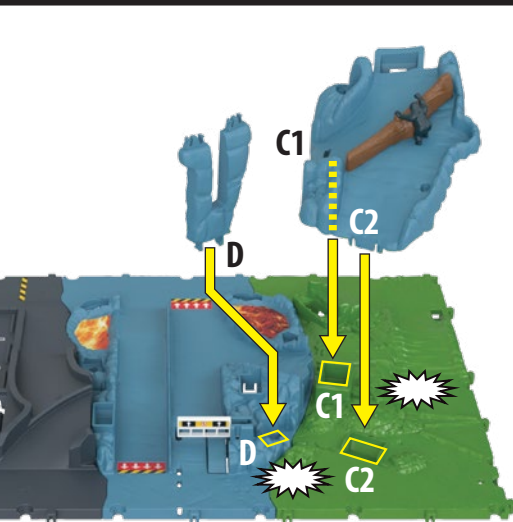     


6

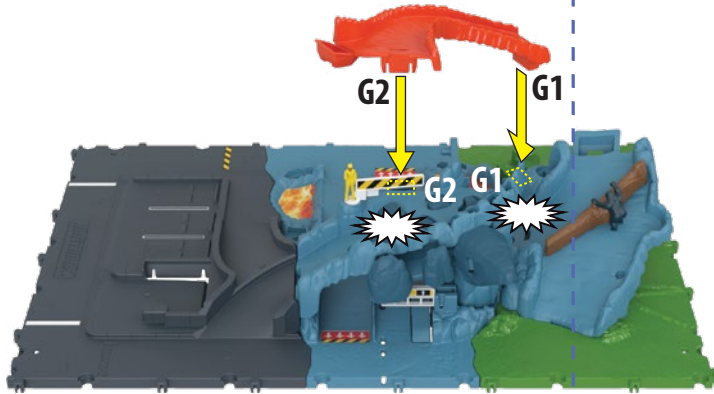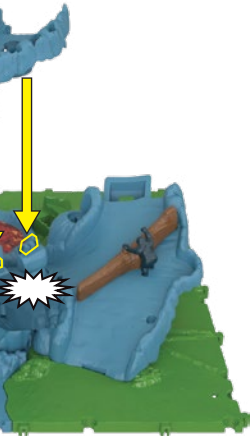  

7

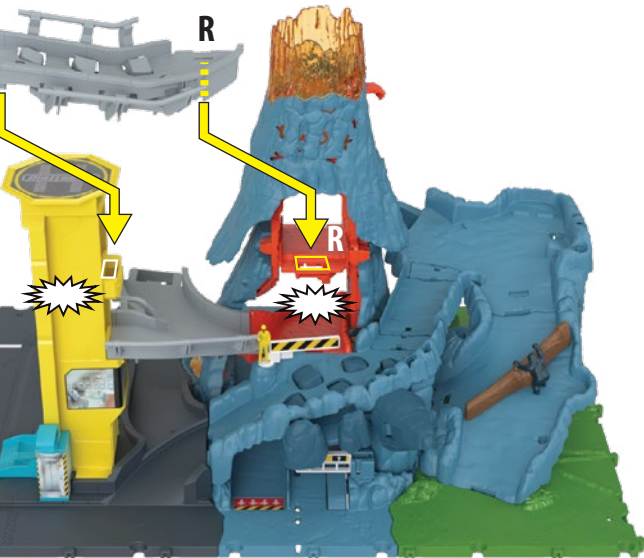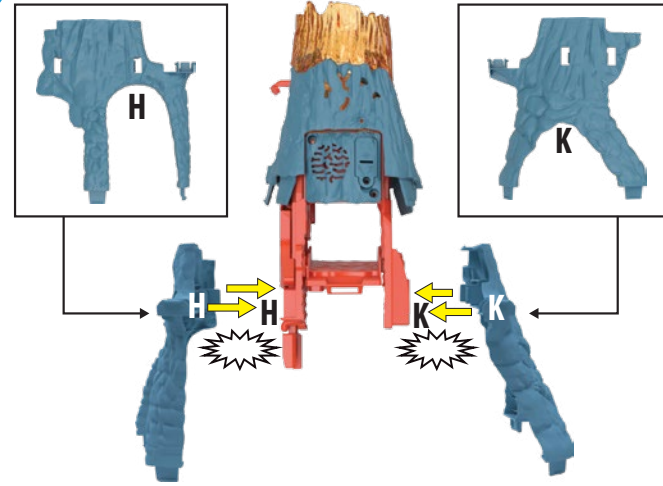  


15 BACK VIEW

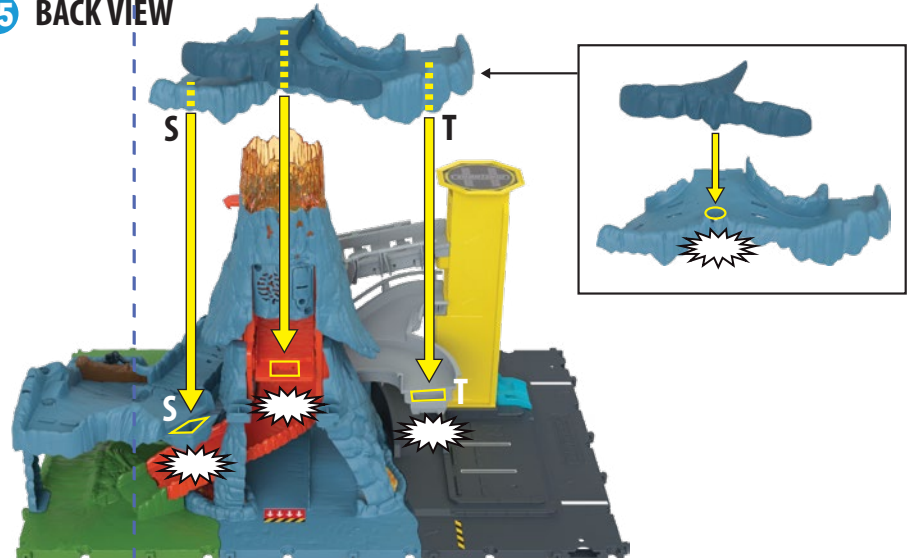 



16



 
8

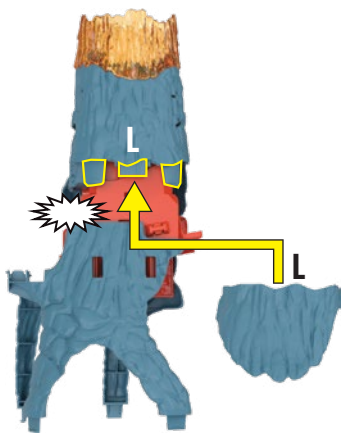

9


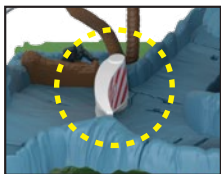 
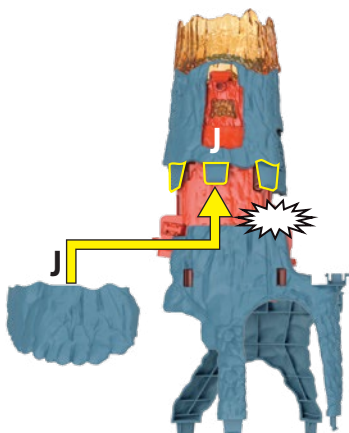 


BACK VIEW

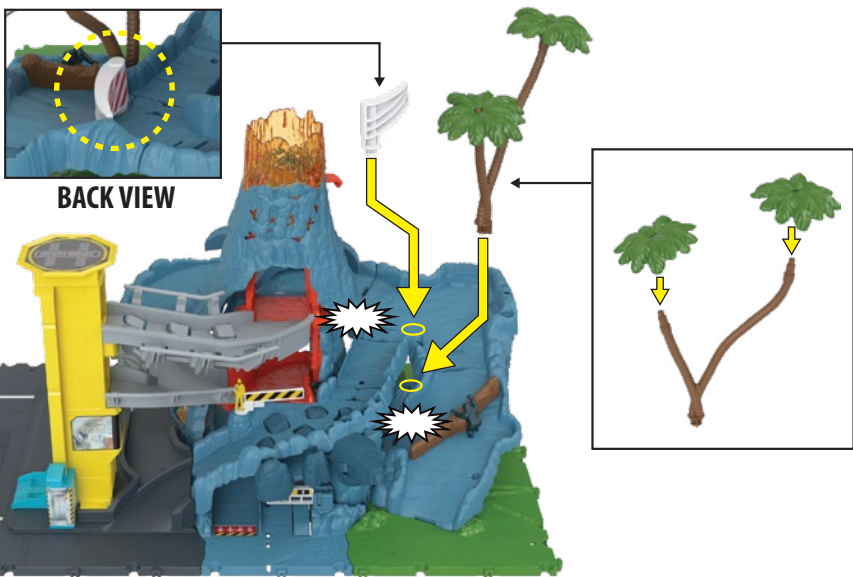 


3 ASSEMBLY (CONTD.)

 
 
 
17

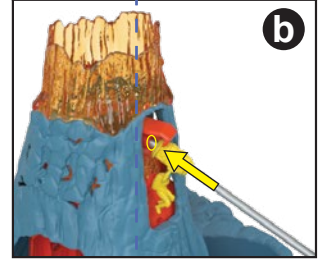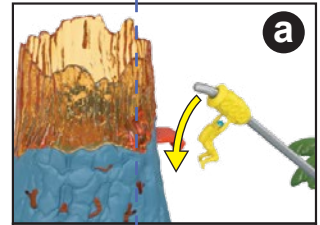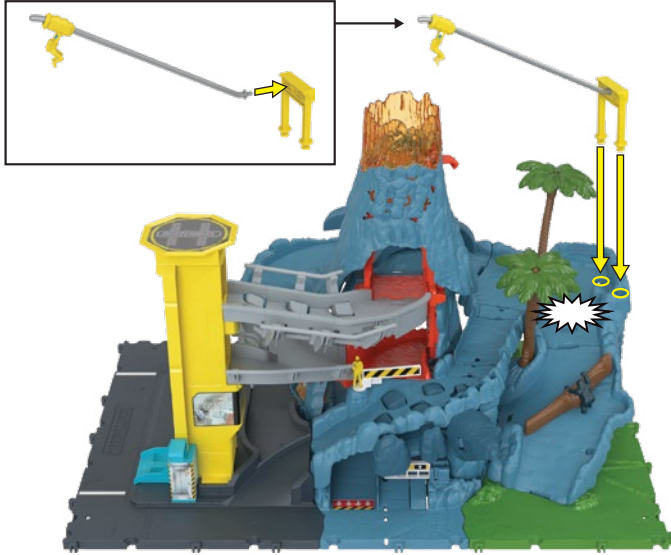


4 TO PLAY

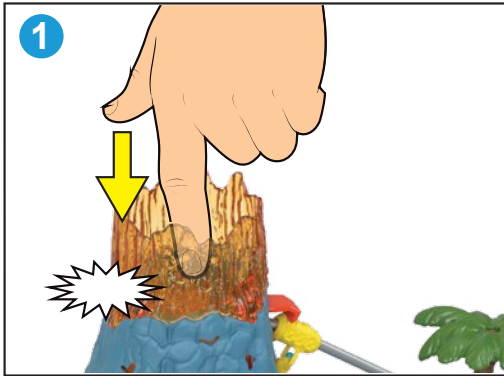 

   
Lock and load volcano each time before play.

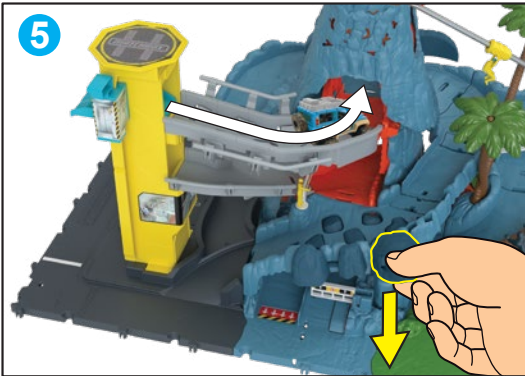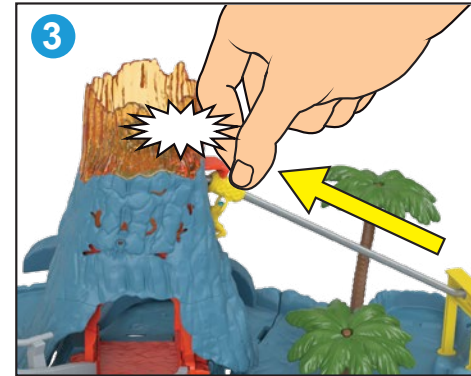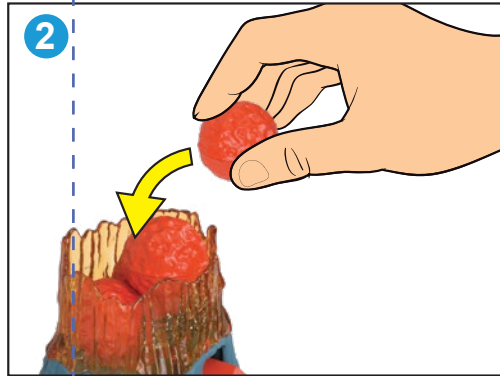

Drive through the volcano.

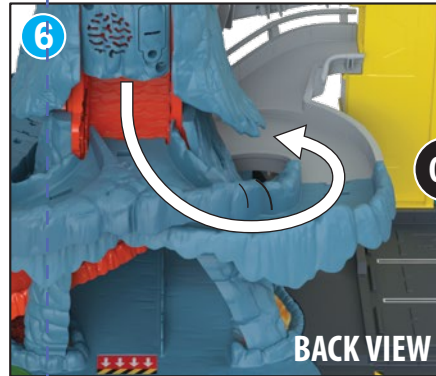 

Race down to the next level!


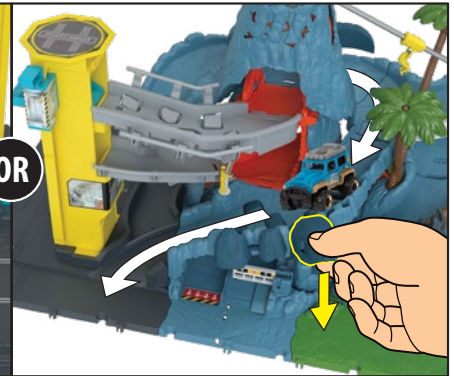 


Ride on the bumpy road!



Volcano

  Warning: Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range.

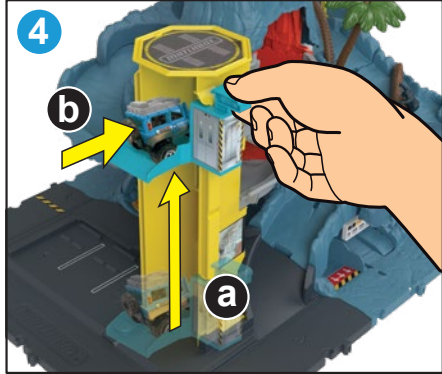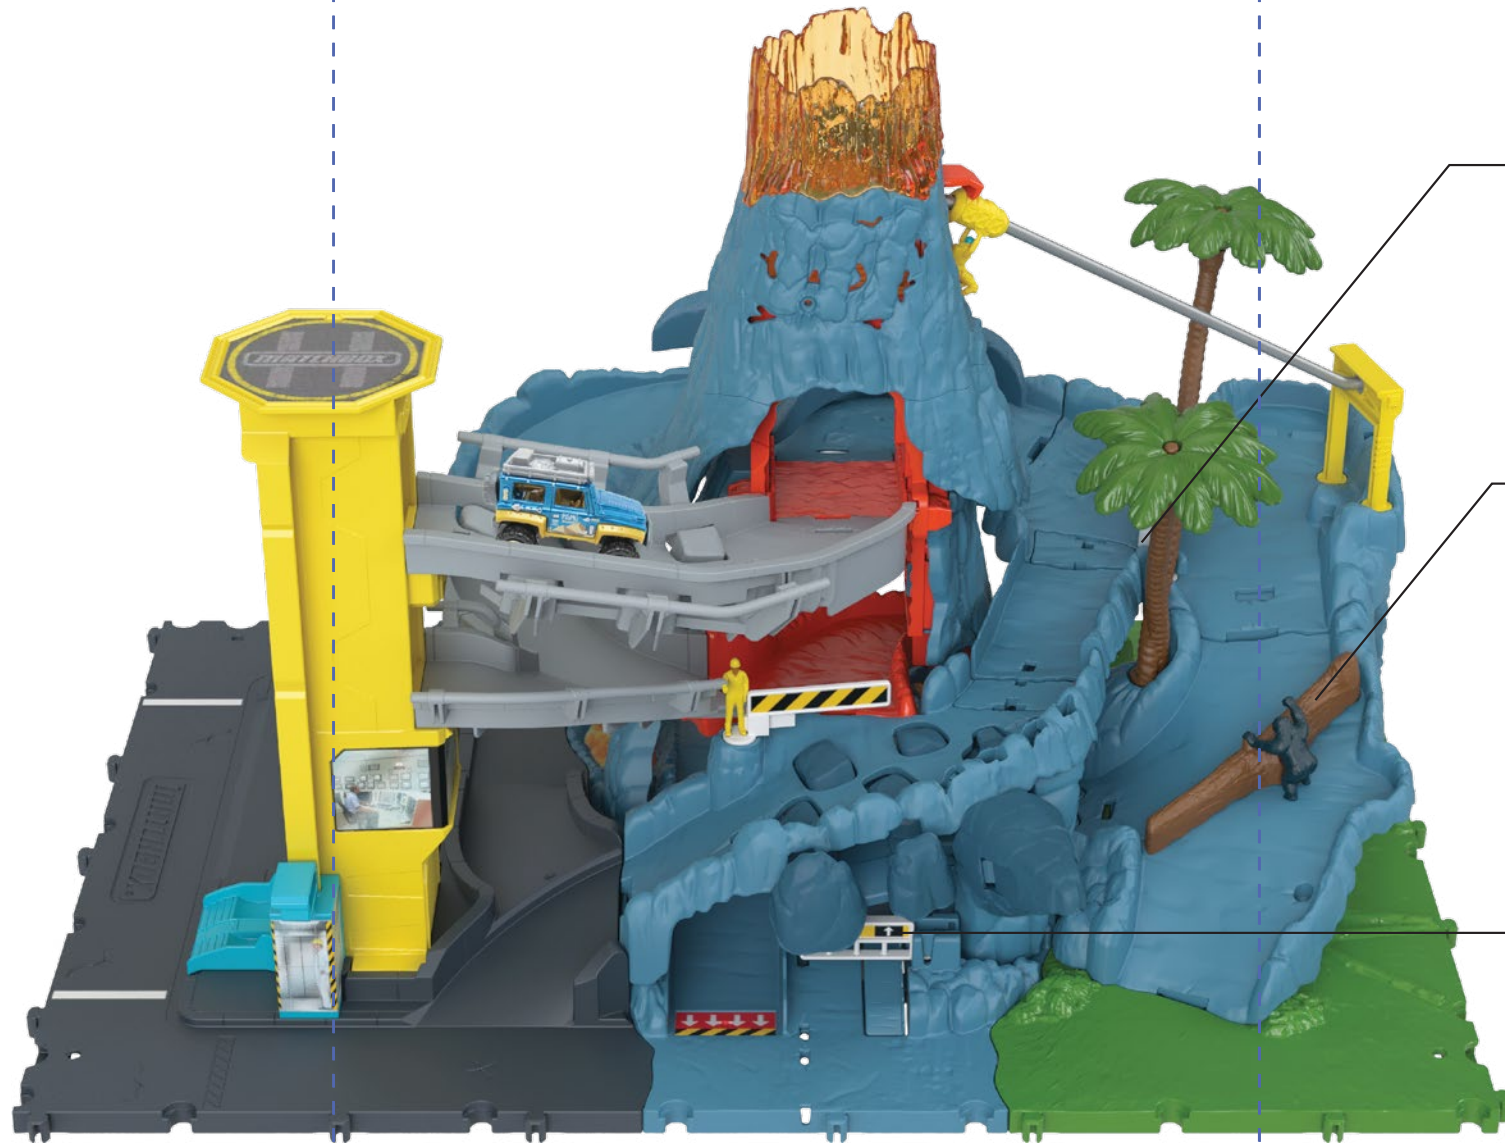


4
Take car lift to the top.




no will erupt anytime! Get out quickly!

 Move diverters for alternative routes!

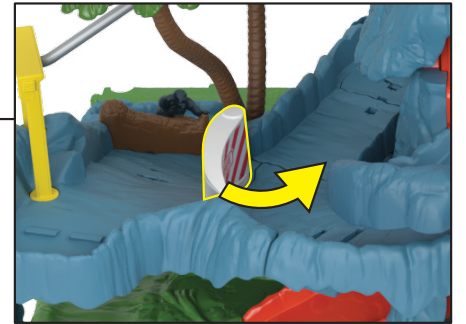

Tunnel with car-activated gate!

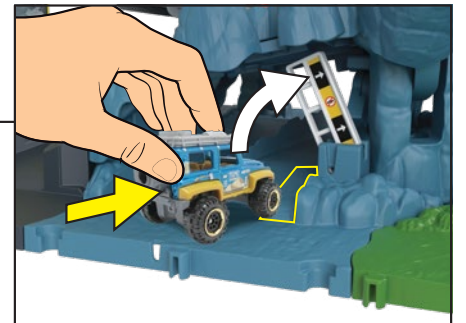 

5 MORE WAYS TO PLAY

ADVERTISEMENT

Connect to other Matchbox® or Hot Wheels® sets to expand your city!



MATCHBOX

HHT06 MATCHBOX® VOLCANO ESCAPE™



MATCHBOX

GYN89 MATCHBOX® AIRPORT ADVENTURE™

HOT WHEELS

GVN72 HOT WHEELS®
DOWNTOWN POLICE STATION

 
Additional tracks or sets sold separately, subject to availability.

6 DISASSEMBLE & RECYCLE

Do this **ONLY BEFORE RECYCLING** the product.

Follow the steps below to remove the electronic components.

1

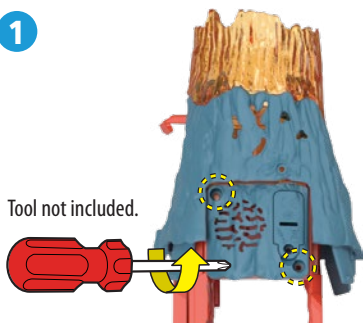

2

E-WASTE



DISPOSE OF ELECTRONIC WASTE AT YOUR LOCAL E-WASTE RECYCLING CENTER. DISPOSE OF REMAINING PLASTIC ACCORDING TO LOCAL PLASTIC RECYCLING GUIDELINES.

©2022 Mattel. ® and ™ designate U.S. trademarks of Mattel, except as noted. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK. Mattel Australia Pty. Ltd., 658 Church St., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312. Mattel South Africa (PTY) LTD, Office 102 13, 30 Melrose Boulevard, Johannesburg 2196. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Continental Asia Sdn Bhd. Level 19, Tower 3, Avenue 7, No. 8 Jalan Kerinchi, Bangsar South, 59200 Kuala Lumpur, Malaysia.