

fisher-price®



Stand & Cruise



Sit & Play

Keep this instruction sheet for future reference, as it contains important information.

Adult assembly is required. No tools needed for assembly.

Requires three AA batteries (included) for operation.

Batteries included are for demonstration purposes only.

Tool required for battery replacement: Phillips screwdriver (not included).

To clean, wipe with a damp cloth. Do not Immerse.

HLM43




Where great minds think like kids™

Since 1961, early childhood development experts at the Fisher-Price™ Play Lab have watched and learned from real-life fun experts (aka kids) to help us design toys that help babies learn and grow in the most natural way. From engaging activities to get them sitting up and crawling, to supportive pals that help with first steps and introduce first words, Fisher-Price® infant toys help make reaching those important milestones (and everything in between) so much fun.

Parts



Battery Replacement

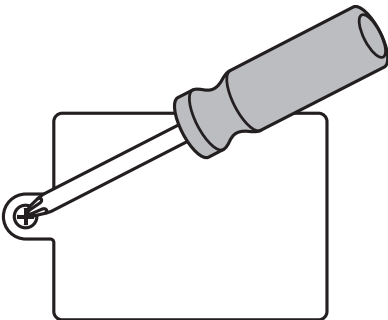


- For longer life, use **alkaline** batteries.
- Locate the battery compartment on the bottom of the toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Remove the exhausted batteries and properly dispose.
- Insert three, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If this toy begins to operate erratically you may need to reset the electronics. Slide the power-volume switch off and back on.
- When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries.

Assembly for Stand & Cruise

① Place the table top face down on a flat surface.

② Insert the legs into the sockets in the table top. Push to "snap" each leg in place.

1

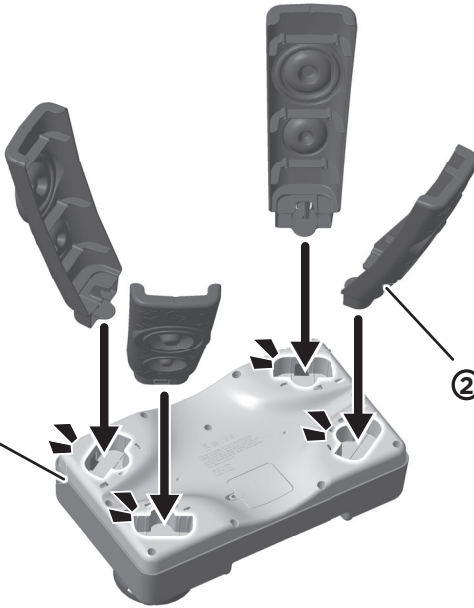


2



3



Disassembly for Sit & Play

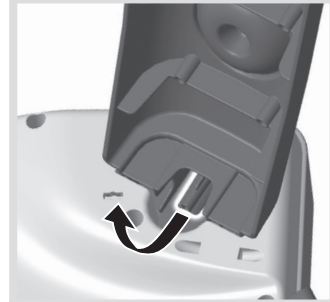

Pull each leg release tab and remove the legs from the table top. Store the legs in a safe place for future use (Stand & Cruise).

Battery Safety Information


In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment (+ and -).
- Remove batteries during long periods of nonuse. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.



Use

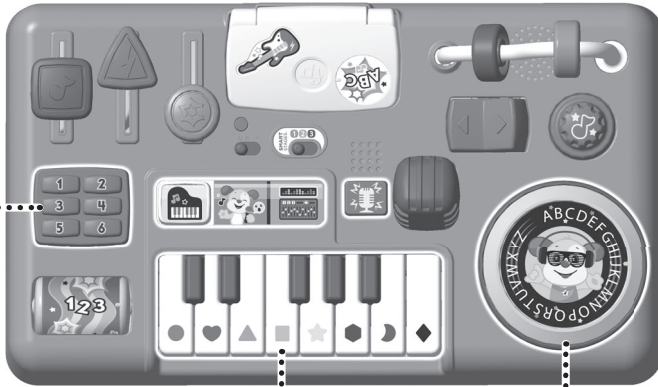

Press the
number pad

Press the piano keys

Spin the record

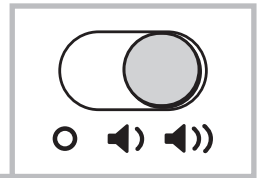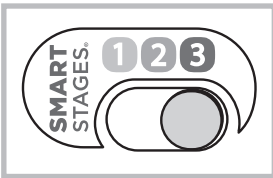


- Slide the Smart Stages® mode switch to:
 - 1 Explore** – Fun sounds, songs and music introduce colors, numbers, shapes and the alphabet!
 - 2 Encourage** – Baby enjoys bilingual fun with each press of a key or spin of the record.
 - 3 Pretend** – Realistic sounds and music encourage pretend DJ play.


- Slide the power-volume switch to ON with low volume (speaker icon), ON with high volume (two speaker icons) or OFF (circle icon).




- Slide the slider to choose a music mode!

 **Piano Mode** – Press the piano keys for realistic sounds.

 **Party Mode** – Press the piano keys for fun phrases.

 **Synth Mode** – Press the piano keys for synthesizer sounds.

 Get ready! Press the Record & Remix button. When the light turns red, say a phrase up to 3 seconds. Then listen to the phrase in a song remix!

Consumer Information

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



UNITED STATES

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Consumer Services: 1-800-432-5437.

CANADA

Mattel Canada Inc., 6155 Freemont Blvd., Mississauga,
Ontario L5R 3W2 Consumer Services/Service à la clientèle :
1-800-432-5437. www.service.mattel.com.

GREAT BRITAIN

Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK.
www.service.mattel.com/uk.

NEDERLAND

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond,
Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

SOUTH AFRICA

Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard,
Johannesburg 2196.



©2022 Mattel.

PRINTED IN CHINA

HLM43-0970-1102998609-DOM

