

fisher-price

SENSORY
bright™

Light Station



Keep this instruction sheet for future reference,
as it contains important information.

HNB10

BEFORE YOU BEGIN



x4

Includes 4 C batteries (R14) 1.5V. Batteries included are for demonstration purposes only. Battery replacement is required. Only adults should replace batteries. For longer battery life, use **alkaline** batteries. Required tool: Phillips screwdriver (not included).



Wipe this toy with a clean, damp cloth.
Do not immerse.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.



Slide the power-volume switch to ON with silence , ON with low volume , ON with high volume  or OFF .

This toy goes into sleep mode after a period of inactivity. Activate any button, switch, dial, or knob to wake it up.

If this toy begins to operate erratically, you may need to reset the electronics. Slide the power-volume switch off and then back on again.



Slide the mode switch to any of the 6 play modes:



BATTERY SAFETY INFORMATION

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

 
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity (+ and -).
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

CARE AND CLEANING

- Do not draw directly on the screen with any writing implement.
- Draw only on a paper surface placed on top of the screen. Check to make sure any markings do not bleed through the paper onto the screen.
- Do not use any sharp objects, ink pens, or permanent markers to draw as this will damage the screen. Washable markers and crayons (not included) are recommended for use.
- If necessary, a damp cloth can be used to wipe the screen.

Colors, decorations or auditory content may vary.

BATTERY REPLACEMENT

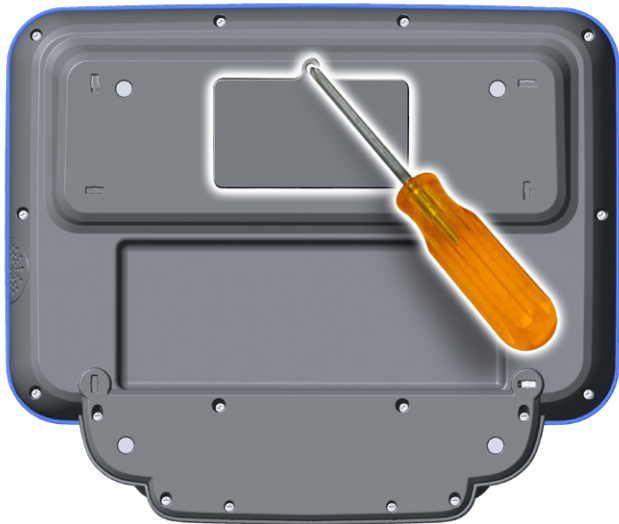


- Locate the battery compartment door on the bottom of the toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Remove the exhausted batteries and properly dispose.
- Insert four, new C (LR14) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not overtighten.

SENSORY FUN FOR ALL KIDS!



 Press, turn, twist, click or slide!

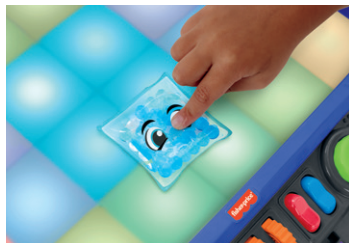

Squish Me!



Spin Me!



UNITED STATES

Fisher-Price, Inc.,
636 Girard Avenue,
East Aurora, NY
14052. Consumer
Services:
1-800-432-5437.

CANADA

Mattel Canada Inc., 6155 Freemont
Blvd., Mississauga, Ontario L5R 3W2.
Consumer Services/Service à la
clientèle : 1-800-432-5437.
www.service.mattel.com.

GREAT BRITAIN

Mattel U.K. Limited, The Porter
Building, 1 Brunel Way, Slough SL1
1FQ, UK. www.service.mattel.com/uk.

NEDERLAND

Mattel Europa B.V., Gondel 1, 1186 MJ
Amstelveen, Nederland.

AUSTRALIA

Mattel Australia Pty. Ltd., 658
Church Street, Locked Bag #870,
Richmond, Victoria 3121 Australia.
Consumer Advisory Service
1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive,
Albany 1331, Auckland.

SOUTH AFRICA

Mattel South Africa (PTY) LTD,
Office 102 13, 30 Melrose Boulevard,
Johannesburg 2196.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

 
Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



Customize your own audio/visual possibilities!

This mode is all about experimentation: turn a dial, press some buttons, flip a switch, and see what each combination does to the audio and light display.

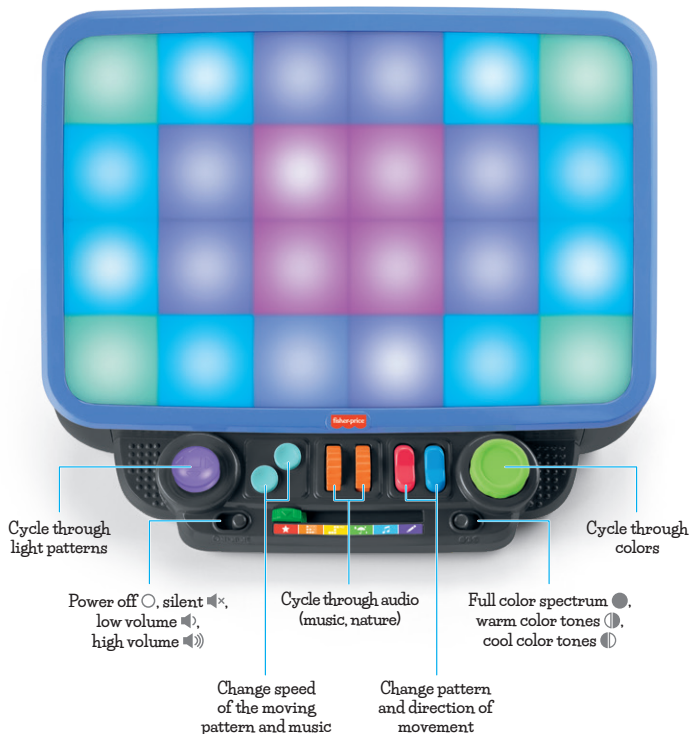




GLIDE

Wipe one color off to reveal a new one!

 Direct the joystick to move a "wiper" cursor around the grid until every square has been touched and transformed into the next color, which restarts the play sequence. Progress is rewarded with audio and visual effects!

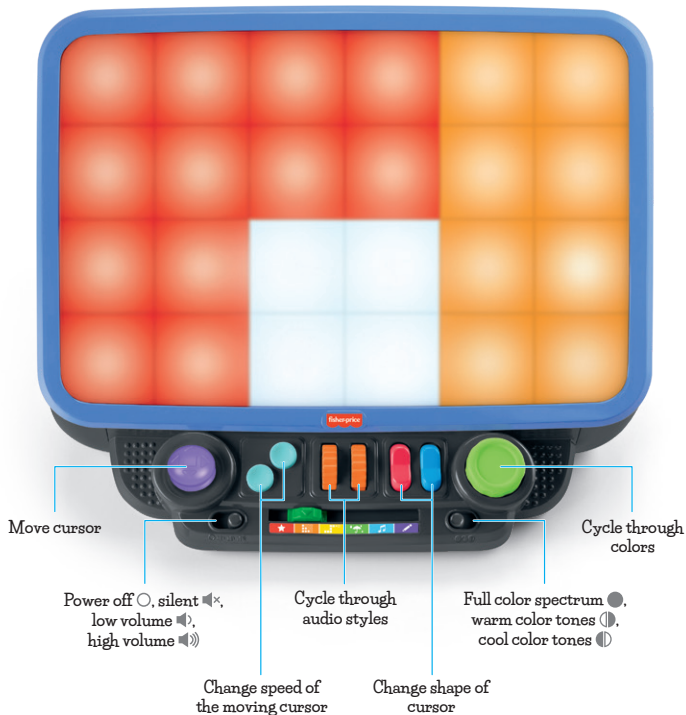







SNAKE

Find the food and make the snake grow!

Direct the joystick to turn the snake left or right as it moves forward automatically. When it "eats" the food, the snake grows and changes color. If the snake gets stuck, the game will start over. Progress is rewarded with audio and visual effects!



Change direction of moving snake




Power off , silent , low volume , high volume 

Change speed of the moving snake and music

Cycle through audio styles

Left switch turns white background light on or off, right switch selects "rainbow snake" or "normal snake"

Cycle through colors

 
Full color spectrum , warm color tones , cool color tones 



RAINDROP

Catch the colored raindrops with the umbrella!


Direct the joystick to move the umbrella cursor in two directions along one edge of the grid and try to catch the raindrops. Special raindrops create fun bonus effects: grow the umbrella; shrink the umbrella; produce excessive "crazy rain". Progress is rewarded with audio and visual effects!

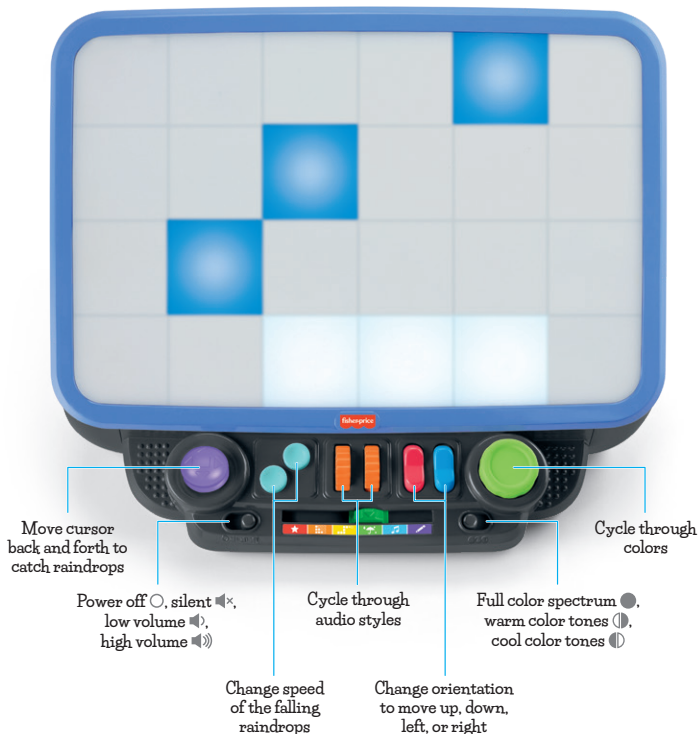

DJ DANCE PARTY™

Change the music and watch the light pattern follow along!

 Use the controls to change the music's speed and the instrumentation of its melody and rhythm, independently.

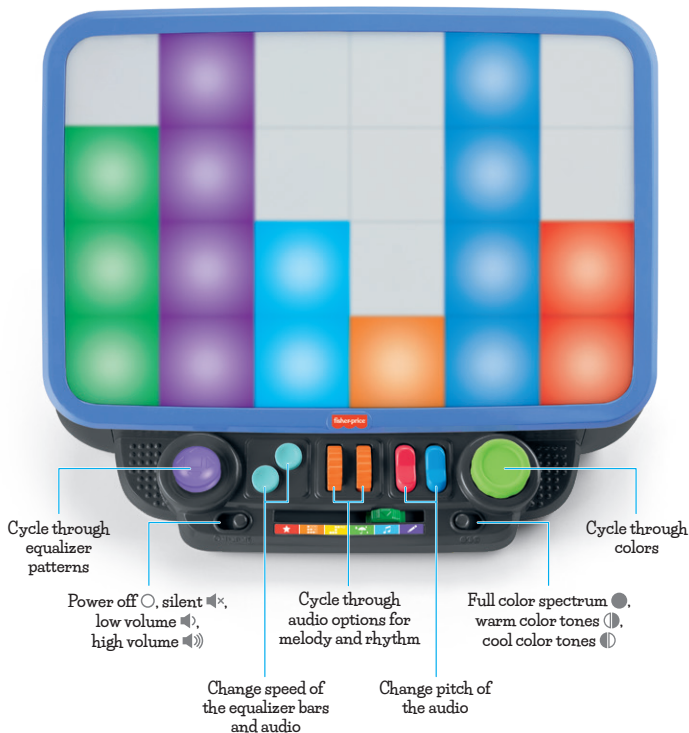



ART

Pick any pic you have & start tracing—or just add a light-up color background!

In Art mode, this toy can be used like a traditional light table, but it also provides the ability to recolor segments of the grid. Crayon and paper not included.



Move cursor

Power off ○, silent 🔇, low volume 🔊, high volume 🔊

Cycle through audio (music, nature)

Change speed of the music

Change background light settings to solid or two-tone

Cycle through colors for background or blinking cursor

Full color spectrum ●, warm color tones ◐, cool color tones ◑

IMPORTANT! See "Care and Cleaning" instructions on page 3.