 


2. PENGGANTIAN BATERAI • BATTERY REPLACEMENT

- Baterai yang disertakan hanya untuk keperluan demonstrasi.
- Ganti baterai bila lampu mulai meredup atau suara melemah.
- Lepaskan sekrup penutup baterai dengan kepala obeng Phillips (tidak termasuk).
- Lepaskan baterai dan buang dengan aman.
- Pasang 3 baterai alkaline AAA (LR03) 1.5V baru di dalam kotak baterai.
- Pasang kembali penutup baterai dan kencangkan sekrup.
- Untuk hasil terbaik, gunakan hanya baterai alkalin.
- Ketika terpapar sumber elektrostatis, produk mungkin akan mengalami malafungsi. Untuk melanjutkan pengoperasian normal, geser saklar daya selama beberapa detik dan kemudian hidupkan kembali.

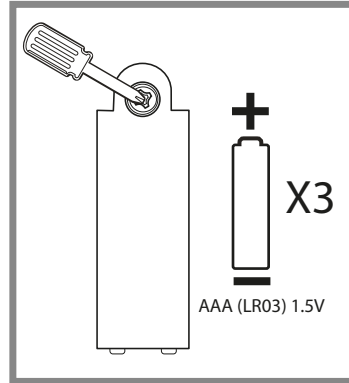

 
- Batteries included are for demonstration purposes only.
- Replace the batteries if lights dim or sounds distort.
- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Remove batteries and dispose of them safely.
- Install 3 new AAA (LR03) 1.5V alkaline batteries in the battery box.
- Replace battery cover and tighten screw.
- For best performance, use only alkaline batteries.
- When exposed to an electrostatic source, the product may malfunction. To resume normal operation, slide the power switch off for a few seconds and then on again.

CATATAN: Produk ini dilengkapi dengan fitur mati otomatis yang membantu menghemat daya tahan baterai.

NOTE: This product is equipped with an automatic shut-off feature that helps preserve battery life.

©2023 Mattel. ® and ™ designate U.S. trademarks of Mattel, except as noted. PT Mattel Trading Indonesia, Pondok Indah Office Tower, 17/F, Jl. Sultan Iskandar Muda Kav V-TA, Jakarta 12310.

© 2023 Mojang AB. All Rights Reserved. Minecraft, the Minecraft logo, the Mojang Studios logo and the Creeper logo are trademarks of the Microsoft group of companies.



HNM78-LT70
1102695424-2XT

 
? service.mattel.com



PETUNJUK • INSTRUCTIONS

Harap simpan instruksi ini sebagai referensi di masa depan karena mengandung informasi penting.
Please keep these instructions for future reference as they contain important information.

ISI • CONTENTS

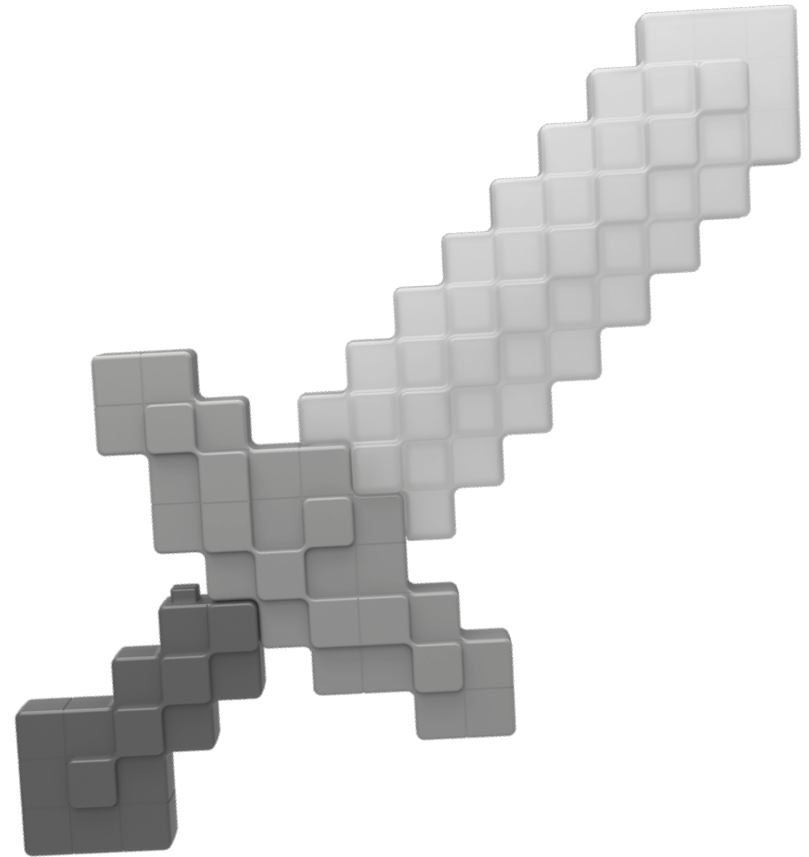


1. CARA BERMAIN - TO PLAY

- A.** Geser tombol nyala ke posisi I (ON).
Slide the power switch to I (ON).

TAMPAK BAWAH
BOTTOM VIEW

 I: HIDUPKAN • ON
O: MATIKAN • OFF
X: MODE COBA • TRY ME MODE

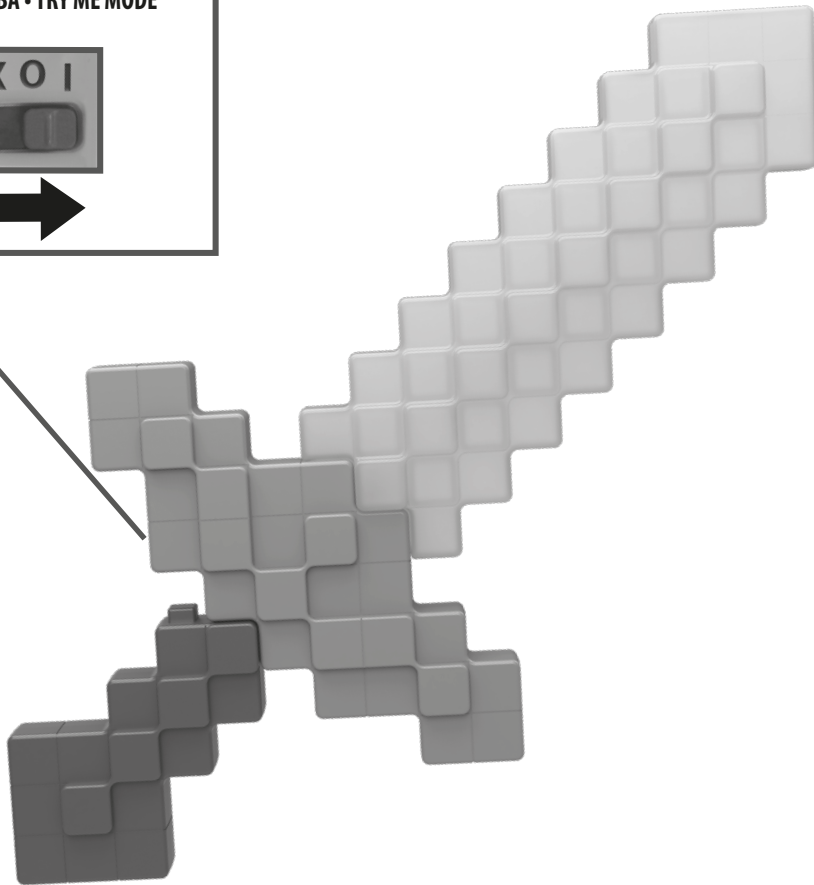

- B.** Tekan tombol untuk menyalakan lampu-lampu yang berkelip dan suara pertempuran.
Press for enchanted lights and fighting sounds!

