

# fisher-price®



Keep this instruction sheet for future reference, as it contains important information.

Gym requires two AA batteries (included).

Batteries included are for demonstration purposes only.

Adult assembly is required.

Tool required for battery installation and assembly:  
Phillips screwdriver (not included).

## HNT98



### **Where great minds think like kids™**



Since 1961, early childhood development experts at the Fisher-Price™ Play Lab have watched and learned from real-life fun experts (aka babies & big kids) to help us design toys and nursery gear that help babies learn and grow in the most natural way. From bright colors that delight their eyes and textures made for squishing, to friends that keep tummy time exciting, Fisher-Price® toys are made just right for your newborn.

## Assembled Parts




# CAUTION

This package contains small parts. For adult assembly only.

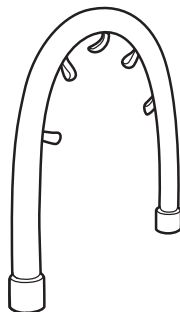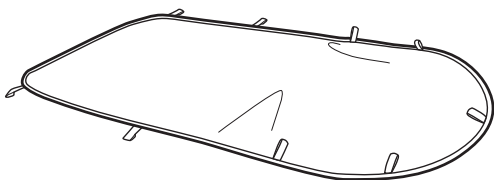

Left & Right

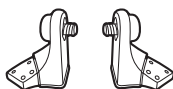

Left & Right



x 8

M3,5 x 1,3 cm Screw


# Assembly and Setup

Fit a hub to a base.


**Hint:** The hubs are designed to fit each base one way. If a hub does not seem to fit, try assembling it to the other base.

Insert four screws into the hub and tighten.

Repeat this procedure to assemble the other base and hub.

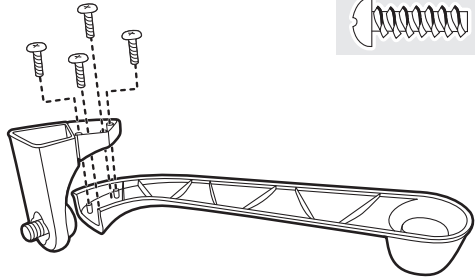


1

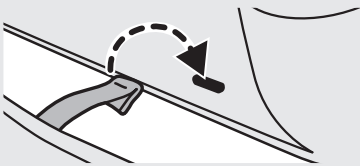

Place the mat, print side up, between the bases.

Fit the straps on the squared end of the mat into the slots in the bases. Make sure the tab on the end of each strap forms a "T" on the other side of the slot.


Pull up on the mat to be sure it is assembled to the bases.

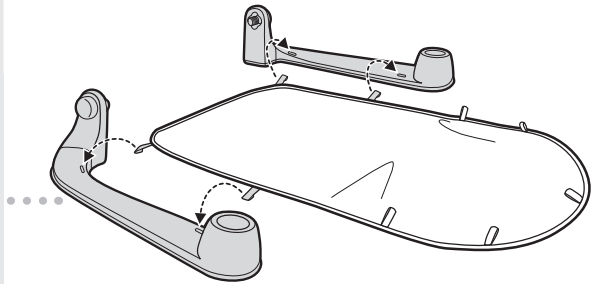

2

The piano can be assembled to the hubs for Lay and Play or Sit and Play modes.


Fit the piano onto the peg on each hub.

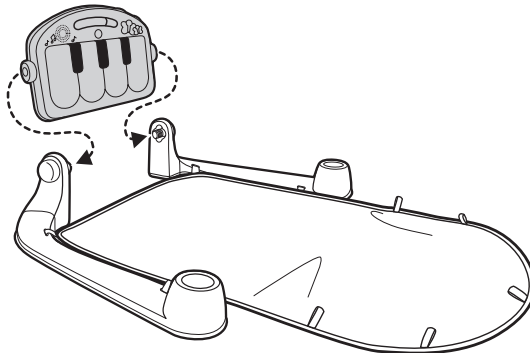

3


## Assembly and Setup

Lay and Play

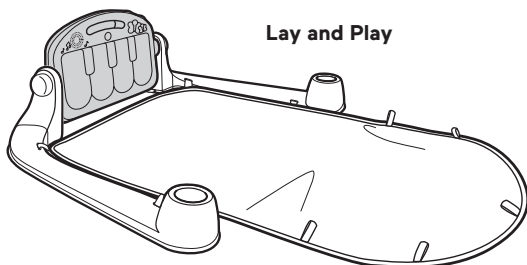


4

Tighten each hub to secure the piano in place.

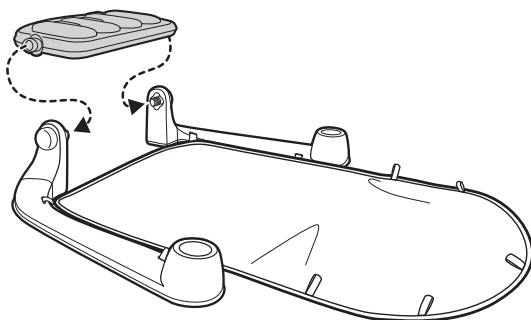

5


Sit and Play

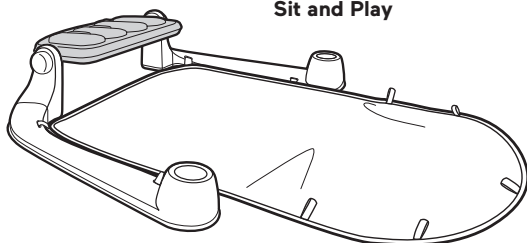

6


## Assembly and Setup

Fit the ends of the arch into the socket in each base.

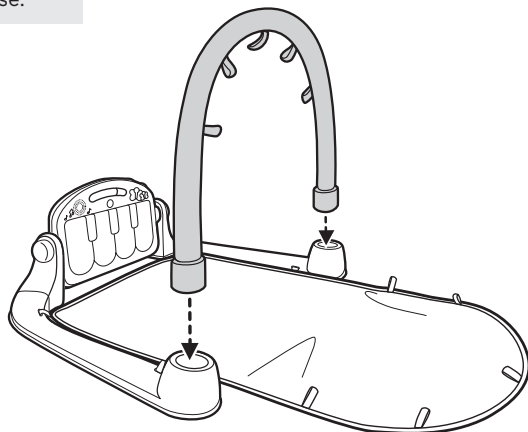

7



Secure the fasteners on the mirror to the arch.

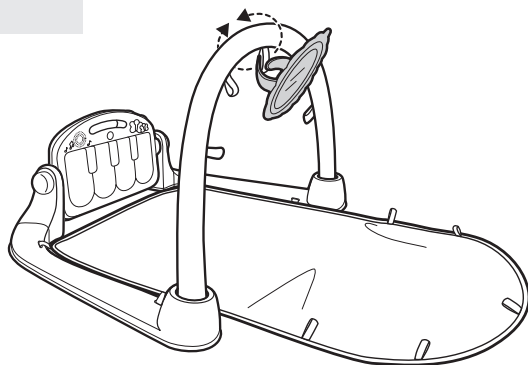

8

## Assembly and Setup


Attach the toys to any of the loops on the arch or the mat.

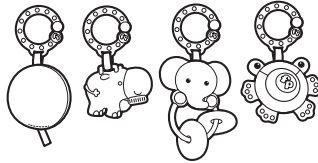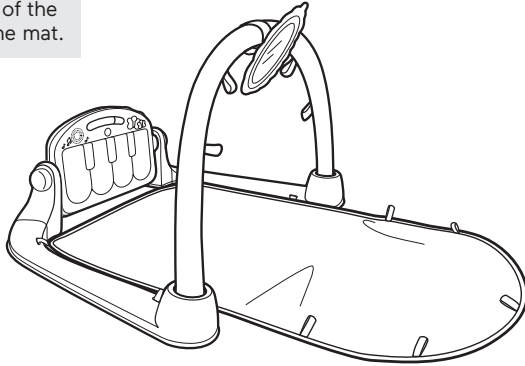


Toys

9

## Battery Replacement

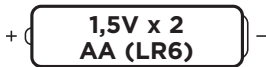

For longer life,  
use **alkaline** batteries.

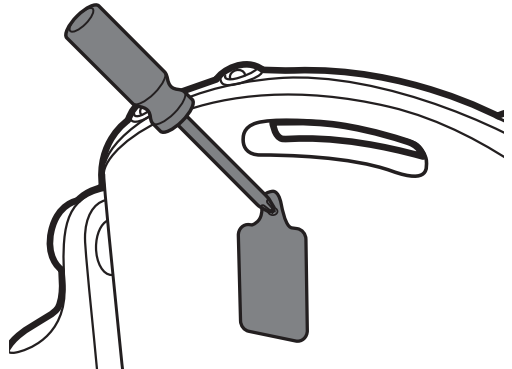

- Locate the battery compartment door on the back of the piano.
- Loosen the screw in the battery compartment door and remove the door.
- Remove the exhausted batteries and dispose properly.
- Insert two, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If the piano begins to operate erratically, you may need to reset the electronics. Slide the power-volume switch off and then back on.
- When sounds become faint or stop, it's time for an adult to change the batteries.

## Musical Fun!

### **WARNING**

To prevent entanglement injury, never place the gym in a crib or playpen.  
Never add strings, ties or other products to the gym.



**Lay and Play**



**Tummy-time**




**Sit and Play**




**Take-along**

## Musical Fun!

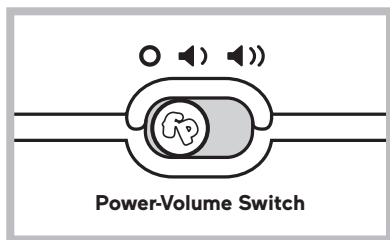

Power-Volume Switch

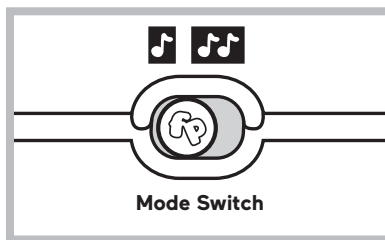

Mode Switch

- Slide the power-volume switch to ON with low Volume , ON with high volume  or OFF .
- Slide the mode switch to:

 **Long Play** - Press a button to hear up to 10 minutes of music.

 **Short Play** - Hear a short ditty or a piano note play with each press.

## Care

- The mat, soft toy and hedgehog plush are machine washable. Wash separately in cold water on the gentle cycle. Do not use bleach. Tumble dry on low heat.
- The arch, toys, bases, piano and coffee cup teether can be wiped with a clean, damp cloth. Do not immerse the piano.

### Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment (+ and -).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

**UNITED STATES**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052. Consumer Services: 1-800-432-5437.

**CANADA**

Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2 Consumer Services/Service à la clientèle : 1-800-432-5437. [www.service.mattel.com](http://www.service.mattel.com).

**GREAT BRITAIN**

Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK. [www.service.mattel.com/uk](http://www.service.mattel.com/uk).

**NEDERLAND**

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

**AUSTRALIA**

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**NEW ZEALAND**

16-18 William Pickering Drive, Albany 1331, Auckland.

**SOUTH AFRICA**

Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

**FCC STATEMENT (UNITED STATES ONLY)**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAN ICES-3 (B)/NMB-3 (B)**

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



©2022 Mattel.

**PRINTED IN CHINA**

HNT98-0970-1103010671-DOM

