

fisher-price®



Keep this instruction sheet for future reference, as it contains important information.

Otter requires four AA batteries (included).

Tummy wedge requires three AA batteries (included).

Batteries included are for demonstration purposes only.

For longer life, use **alkaline** batteries.



Battery replacement is required. Only adults

should replace batteries. Required tool:



Phillips screwdriver (not included).

HNT99


Replace Batteries

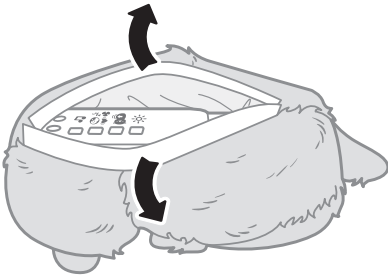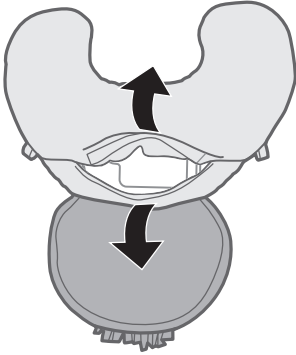

 - Open the fasteners and pull to remove the electronic units.

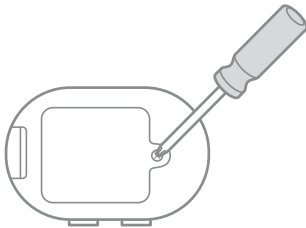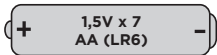


Tummy Wedge

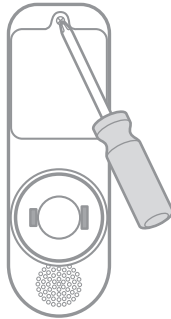

Otter

- Loosen the screws in the battery compartment doors with a Phillips screwdriver and remove the doors.
- Remove the exhausted batteries and properly dispose.
- Insert three, new (LR6) **alkaline** batteries into the tummy wedge compartment. Insert four, new AA (LR6) **alkaline** batteries into the otter compartment.
- Replace the battery compartment doors and tighten the screws. Do not over-tighten.

- When vibrations or sound from the tummy wedge become faint or stop, it's time for an adult to change the batteries.
- When music, sound, or motion from the otter become faint, slow or stop, it's time for an adult to change the batteries.
- If the tummy wedge begins to operate erratically, you may need to reset the electronics. Slide the power-volume switch off and back on.
- If the otter begins to operate erratically, you may need to reset the electronics. Remove and reinstall the batteries.

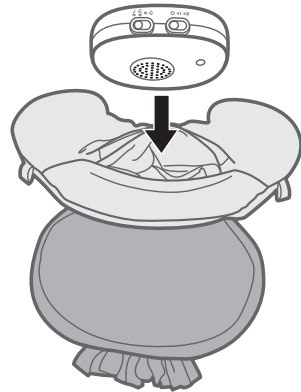


- Fit the electronic unit back inside the toy. Make sure the speaker/button faces the front of the toy and the power-volume and mode switches face you.
- Close the fasteners.



- With the speaker facing the front of the toy, fit the electronic unit to the tabs inside the toy. Before closing the fasteners, make music/sounds/motion selections and adjust volume.

Power-Volume & Mode Switches

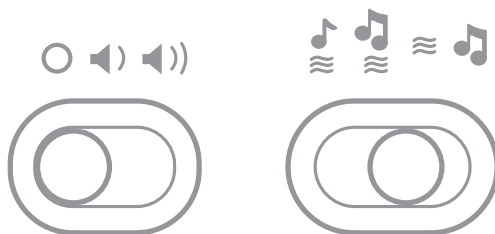

- Turn the power on, select a volume level and mode for use.

- ▶ On with Low Volume
- ▶▶ On with High Volume
- Off
- ♪ Short Play (Music and Vibration)
- ♪♪ Long Play (Music and Vibration)
- ≡ Vibration Only
- ♪ Music Only



Press here to start music, sound effects or vibrations. Press and hold for a few seconds to turn off. Note that music/sounds/vibration times stated below are approximate.

- ♪ **Short Play**
15 seconds of music and vibrations or a quick sound effect and vibrations
- ♪♪ **Long Play**
10 minutes of soothing music along with 5 minutes of calming vibrations
- ≡ **Vibration Only**
5 minutes of calming vibrations
- ♪ **Music Only**
10 minutes of soothing music

Soothing Sensations



Press the **-** button to decrease volume and the **+** button to increase volume. Press both buttons to stop all functions.

Press this button to hear 30 minutes of soothing music.

Press this button to choose 30 minutes of soothing sounds including: nature, snoring, heartbeat, and white noise.

Press this button for 10 minutes of breathing motion.

Press this button for 15 minutes of soothing light.

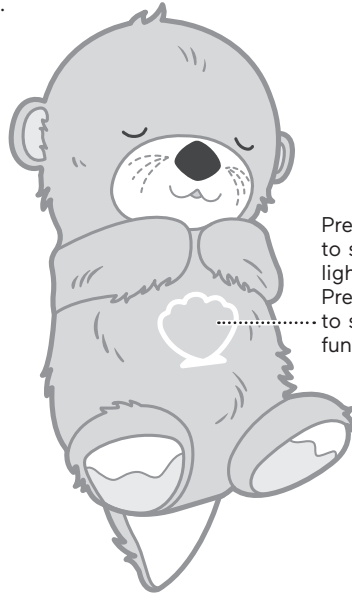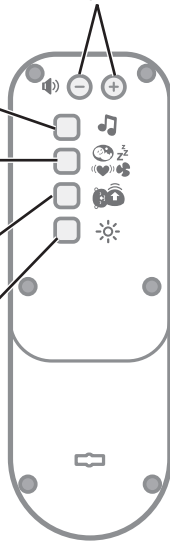

Press my belly to start music/ lights/motion! Press and hold to stop all functions.

Note: Function times listed are approximate. Music and sounds will not play at the same time. If music is playing when the  button is pressed the music will fade and stop before starting the sounds. If sounds are playing when the  button is pressed the sounds will fade and stop before starting the music.

Care

- The tummy wedge and the otter are machine washable without the electronics unit. Do not immerse the electronics unit.
- Open the fasteners on the back of the toys and remove the electronics units.
- Place the koala teether in a pillowcase before washing. Machine wash the koala teether, the tummy wedge and the otter in cold water on the gentle cycle. Do not use bleach. Tumble dry on low heat.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes :

- (1) il ne doit pas produire de brouillage et
- (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**UNITED STATES**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Consumer Services: 1-800-432-5437.

CANADA

Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2
Consumer Services/Service à la clientèle : 1-800-432-5437.
www.service.mattel.com.

GREAT BRITAIN

Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK.
www.service.mattel.com/uk.

NEDERLAND

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121
Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

SOUTH AFRICA

Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.



©2022 Mattel.
PRINTED IN VIETNAM
HNT99-0970-1103010665-DOM

