

fisher-price®



Keep this instruction sheet for future reference, as it contains important information.

Walker and storybook require four AA batteries for operation (included). Cat on a Vac requires two AAA batteries (included).

Adult assembly is required for the walker.
Tool required: Phillips screwdriver (not included).

Wipe all toys with a damp cloth.
Do not immerse.

HNVO1



Where great minds think like kids™

Since 1961, early childhood development experts at the Fisher-Price™ Play Lab have watched and learned from real-life fun experts (aka kids) to help us design toys that help babies learn and grow in the most natural way. From engaging activities to get them sitting up and crawling, to supportive pals that help with first steps and introduce first words, Fisher-Price® infant toys help make reaching those important milestones (and everything in between) so much fun.

Assembled Parts

CAUTION

This package contains small parts. For adult assembly only.



Front Frame



Back Frame



2 Front Axles



Handle



4 Wheels




M4,5 x 19 mm Screw


Tighten or loosen all screws
with a Phillips screwdriver.
Do not over-tighten.

Battery Replacement


For longer life, use **alkaline** batteries.

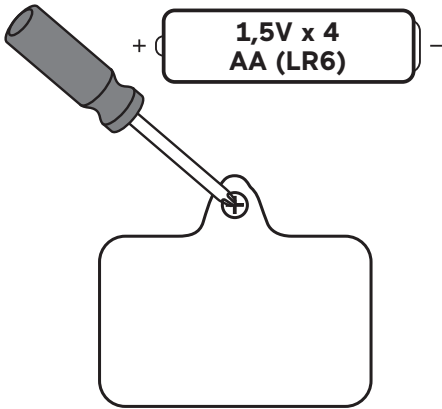

Walker

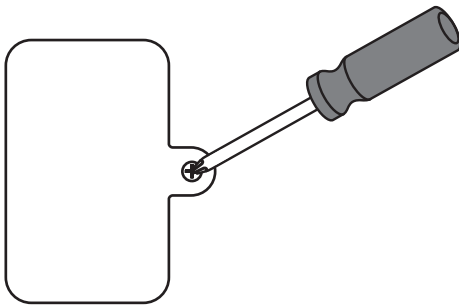

Storybook

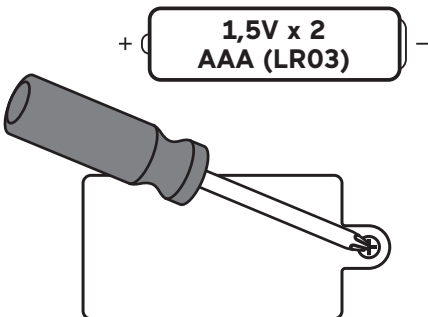

Cat on a Vac


- Loosen the screws in the battery compartment doors and remove the doors.
- Remove the batteries and properly dispose.
- Insert two, new AA (LR6) **alkaline** batteries into the walker and storybook compartments. Insert two, new AAA (LR03) **alkaline** batteries into the Cat on a Vac compartment.
- Replace the battery compartment doors and tighten the screws.
- If the walker or storybook begins to operate erratically you may need to reset the electronics. Slide the power-volume switch off and then back on. If the Cat on a Vac begins to operate erratically, remove the batteries and reinstall them.
- When sounds or lights from the toys become faint or stop, it's time for an adult to change the batteries.




Protect the environment by not disposing of this product or any batteries with household waste.

This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.


Walker Assembly

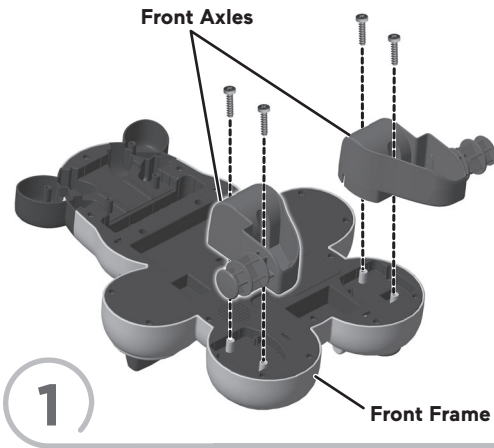

- Fit the front axles onto the front frame.
Hint: The front axles are designed to fit the front frame one way. If one does not seem to fit, try assembling to the other side of the front frame.
- Insert two screws into each front axle and tighten.

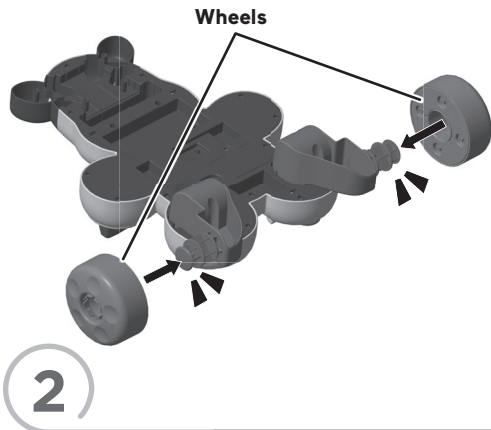

- **"Snap"** a wheel onto each front axle.

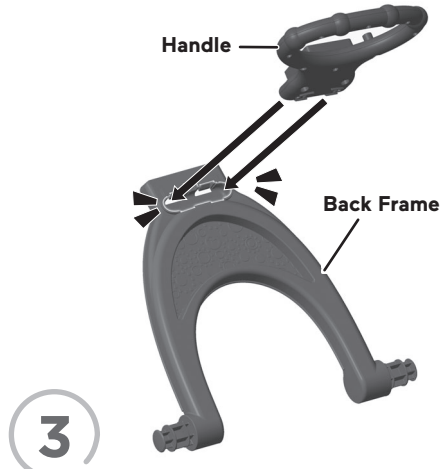

- Insert and **"snap"** the handle into the slot in the back frame.
Hint: The handle is designed to fit one way. If it does not seem to fit, turn it around and try again.



- **"Snap"** the remaining wheels onto the rear frame.

Walker Assembly



5


- Fit the back frame assembly to the front frame assembly.



6

- Insert four screws into the handle and tighten.

Lights, Music & Hands-on Fun!

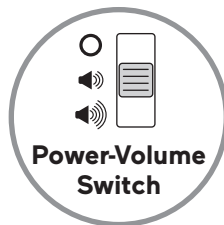


- Slide the power-volume switch to ON with low volume , ON with high volume  or OFF .
- Press the paw button to hear phrases and sound effects.
- Press the music button to hear songs and more fun sounds.
- Turn the page in the book to hear songs.
- Hear more phrases and music when baby walks!

Open the book to hear the nursery rhyme on each page! Close the book and songs/lights will stop.

Press to learn about an object on a page and the letter it begins with.

Press to learn how many objects are on a page.

Press to learn about the color and shape of an object on a page.

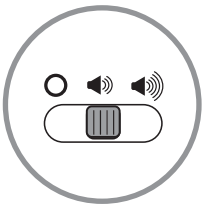

Slide the power-volume switch to ON with low volume , ON with high volume  or OFF .



-
- Press for songs and counting fun!



- Press cat's head down for crawl and chase fun along with music and sound effects.



- Pull cat back for even more zooming fun!

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment (+ and -).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



UNITED STATES

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Consumer Services: 1-800-432-5437.

CANADA

Mattel Canada Inc., 6155 Freemont Blvd., Mississauga,
Ontario L5R 3W2 Consumer Services/Service à la clientèle :
1-800-432-5437. www.service.mattel.com.

GREAT BRITAIN

Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK.
www.service.mattel.com/uk.

NEDERLAND

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond,
Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

SOUTH AFRICA

Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard,
Johannesburg 2196.



©2023 Mattel.
PRINTED IN CHINA
HNV01-0971-1103000875-DOM

