

fisher-price®



Keep this instruction sheet for future reference, as it contains important information.

Requires two AA (LR6) batteries (not included).

Adult assembly is required.


Tool required for battery installation: Phillips screwdriver (not included).

To clean, wipe with a damp cloth. Do not immerse.


Maximum weight: 55 lb (25 kg).

HPV34

 Battery Installation



For longer life, use **alkaline** batteries.

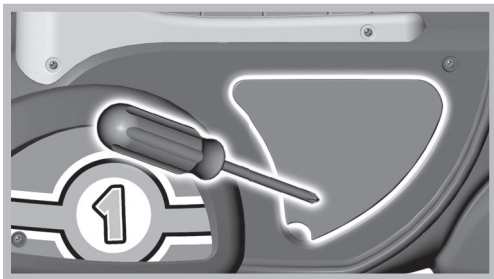

- Loosen the screw in the battery compartment door and remove the door.
- Insert two new, AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If the toy begins to operate erratically you may need to reset the electronics. Slide the power-volume switch off and then back on.
- When sounds from this toy become faint or stop, it's time for an adult to change the batteries.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment (+ and -).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Assembly



- Insert and **"snap"** the handle into the scooter.

Hint: The handle is designed to fit into the scooter one way. If it does not seem to fit, turn it around and try again.

Use

! WARNING!

To prevent tip over, not to be used by children over 36 months.



- Slide the power-volume switch to ON with low volume, ON with high volume or OFF.
- Slide the **Smart Stages®** mode switch to:
 - 1 Explore** - Press a button on the dash to learn shapes, listen to a song or sound effects! Press the horn for more fun sounds!
 - 2 Encourage** - Press a button on the dash to learn shapes and colors, or hear a song. Listen for the prompts and find the matching shape and color. Press the horn for songs and sound effects.
 - 3 Pretend** - Press a button on the dash to learn traffic signals. Press the horn for more fun songs, sounds and phrases!
- Hear sound effects and musical ditties as baby scoots around in any mode!



UNITED STATES

Fisher-Price, Inc.,
636 Girard Avenue,
East Aurora, NY 14052.
Consumer Services:
1-800-432-5437.

CANADA

Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2 Consumer
Services/Service à la clientèle : 1-800-432-5437.
www.service.mattel.com.

GREAT BRITAIN

Mattel U.K. Limited, The Porter Building,
1 Brunel Way, Slough SL1 1FQ, UK.
www.service.mattel.com/uk.

NEDERLAND

Mattel Europa B.V., Gondel 1, 1186 MJ
Amstelveen, Nederland.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria
3121 Australia. Consumer Advisory Service
1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331,
Auckland.

SOUTH AFRICA

Mattel South Africa (PTY) LTD, Office 102 I3,
30 Melrose Boulevard, Johannesburg 2196.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two
conditions: (1) this device may not cause
interference, and (2) this device must accept
any interference, including interference that
may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée
seulement aux conditions suivantes : (1) il ne
doit pas produire de brouillage et (2) il doit
pouvoir tolérer tout brouillage radioélectrique
reçu, même si ce brouillage est susceptible de
compromettre son fonctionnement.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to
comply with the limits for a Class B digital device,
pursuant to Part 15 of the FCC rules. These limits
are designed to provide reasonable protection
against harmful interference in a residential
installation. This equipment generates uses
and can radiate radio frequency energy and,
if not installed and used in accordance with the
instructions, may cause harmful interference
to radio communications. However, there is no
guarantee that interference will not occur in
a particular installation. If this equipment does
cause harmful interference to radio or television
reception, which can be determined by turning
the equipment off and on, the user is encouraged
to try to correct the interference by one or more
of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment
and receiver.
- Consult the dealer or an experienced radio/TV
technician for help.

NOTE: Changes or modifications not expressly
approved by the manufacturer responsible for
compliance could void the user's authority to
operate the equipment.

This device complies with Part 15 of the FCC
Rules. Operation is subject to the following two
conditions: (1) This device may not cause harmful
interference, and (2) this device must accept any
interference received, including interference that
may cause undesired operation.



©2022 Mattel.

PRINTED IN CHINA

HPV34-0970-1100480078-DOM

