

fisher-price®



HRB13
HRB14

0-36
m





Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.
Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A.
Consumer Services 1-800-524-8697 and 1-800-432-5437 for
Fisher Price products. Mattel U.K. Limited, The Porter Building,
1 Brunel Way, Slough SL1 1FQ, UK. Mattel Australia Pty. Ltd.,
658 Church St., Richmond, Victoria, 3121. Consumer Advisory
Service - 1300 135 312. 16-18 William Pickering Drive, Albany 1331,

Auckland. Mattel Barbie (Shanghai) Trading Co., Ltd. Room 2005, 20th Floor,
899 Ruining Road, Xuhui District, Shanghai, 200232, PRC. Customer Care Line:
400-819-8658. Kids Kingdom Limited, Room 1908-9, Gala Place, 56 Dundas Street,
Mongkok, Kowloon, Hong Kong, P.R.C. Customer Care Line: (852)2782-0766.
CHICKABIDDY CO., LTD, F5, No. 186, Sec. 4, Nanjing E. Rd., Taipei 10595,
Taiwan region. Customer Care Line: 0800 001 256. Diimport & Diedarkan Oleh:
Mattel Continental Asia Sdn Bhd. Level 19, Tower 3, Avenue 7, No. 8 Jalan Kerinchi,
Bangsar South, 59200 Kuala Lumpur, Malaysia. Mattel South Africa (PTY) LTD,
Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.



Remove Lock-out Fastener

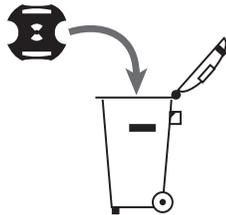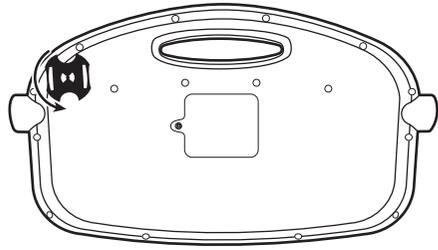

CAUTION


This package contains small parts. For adult assembly only.

This toy includes a lock-out fastener on the back of the piano. To unlock all modes, be sure to remove it! Turn the lock-out fastener and pull to remove. Properly dispose of the lock-out fastener.

Battery Replacement



For longer life, use **alkaline** batteries.

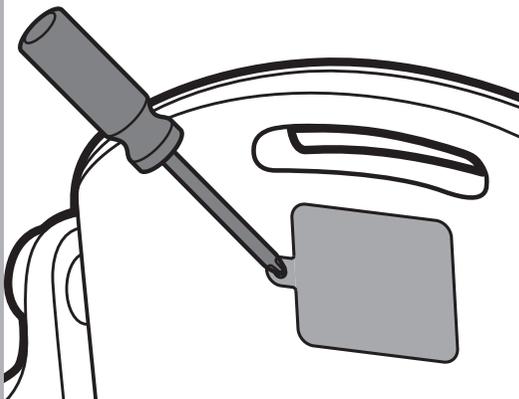

Locate the battery compartment door on the back of the piano.

Loosen the screw in the battery compartment door and remove the door.

Remove the exhausted batteries and dispose properly.

Insert three, new AA (LR6) **alkaline** batteries.

Replace the battery compartment door and tighten the screw. Do not over-tighten.




If this product begins to operate erratically, you may need to reset the electronics. Slide the power-volume switch off and then back on.

When sounds or lights from this toy become faint, slow or stop, or if the lights slowly blink red three times, it's time for an adult to change the batteries.



Consumer Information

Keep this instruction sheet for future reference, as it contains important information.
Adult assembly is required.
Requires three AA batteries (included). Batteries included are for demonstration purposes only.
Tool required for assembly and battery replacement: Phillips screwdriver (not included).


Parts

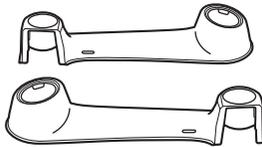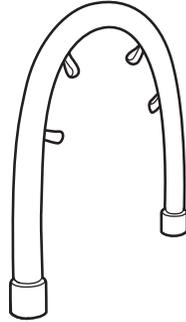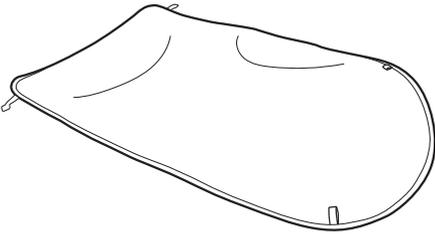

Left & Right

  


Left & Right

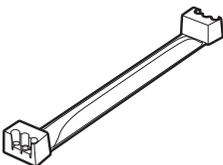

M3,5 x 1,3 cm Screw


Mat, Hub and Base Assembly

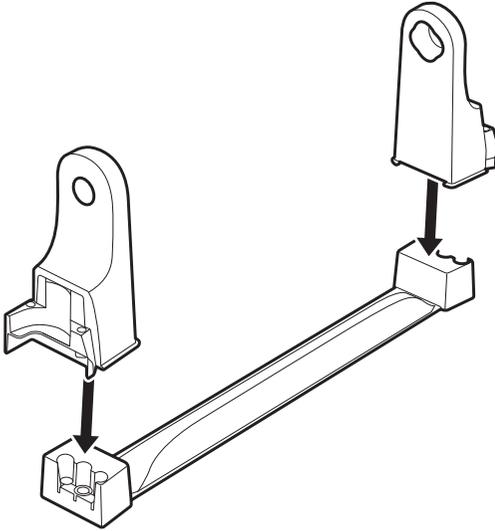


Fit the hubs onto the crossbar.

Hint: The hubs are designed to fit the crossbar one way. If a hub does not seem to fit, try assembling it to the other end of the crossbar.

 1

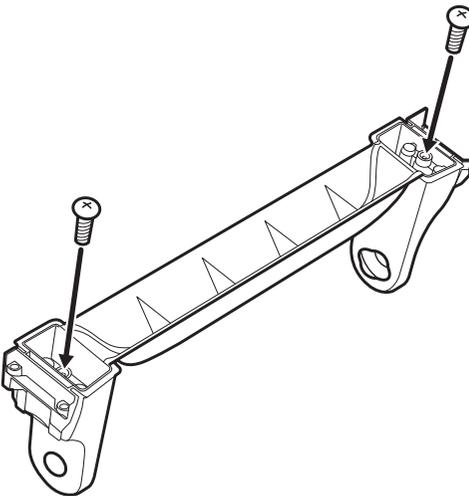



 x 2

Turn the assembly over and fasten with two M3,5 x 1,3 cm screws.

2

 
Mat, Hub and Base Assembly

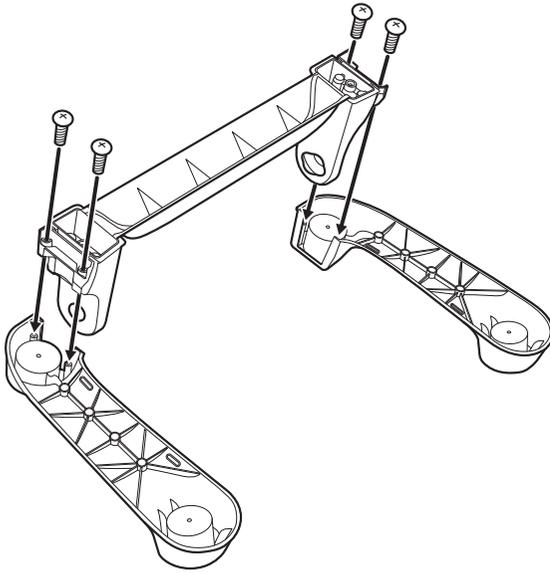



 x 4

Fit the bases onto the hubs and fasten with four M3,5 x 1,3 cm screws.

Hint: The bases are designed to fit one way. If a base does not seem to fit, try assembling it to the other hub.

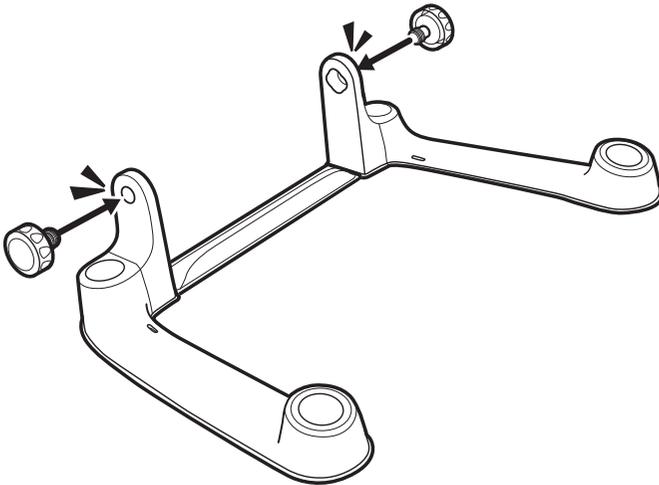


Mat, Hub and Base Assembly

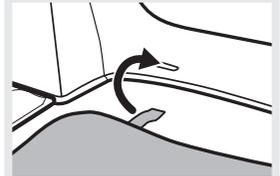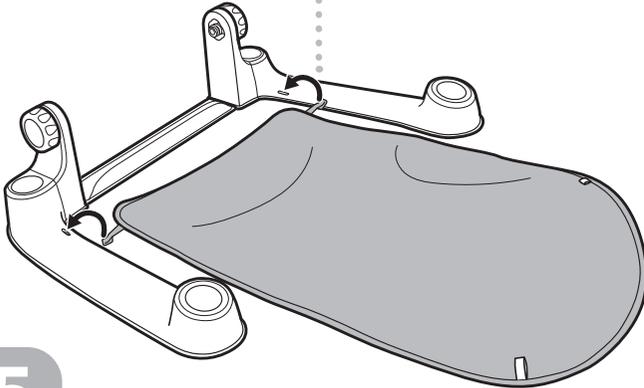

Fit the straps on the squared end of the mat into the slots in the bases. Make sure the tab on the end of each strap forms a "T" on the other side of the slot. Pull up on the mat to be sure it is assembled to the bases.

5



Lay and Play Assembly

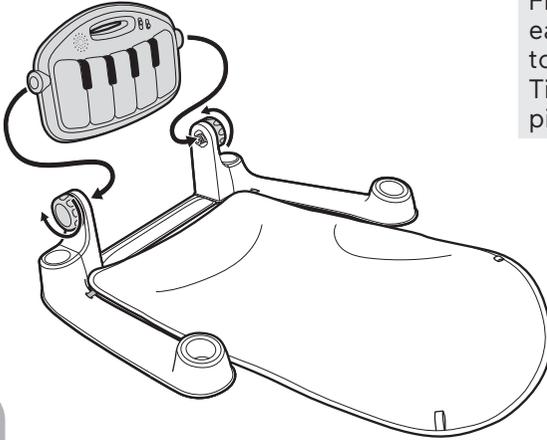

Fit the piano onto the peg on each hub with the keys facing towards the mat. Tighten each hub to secure the piano in place.

1


Fit the ends of the arch into the socket in each base farthest away from the piano.

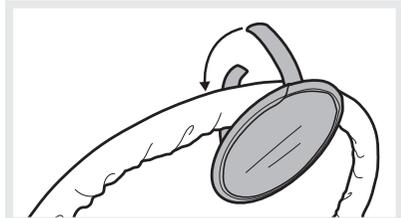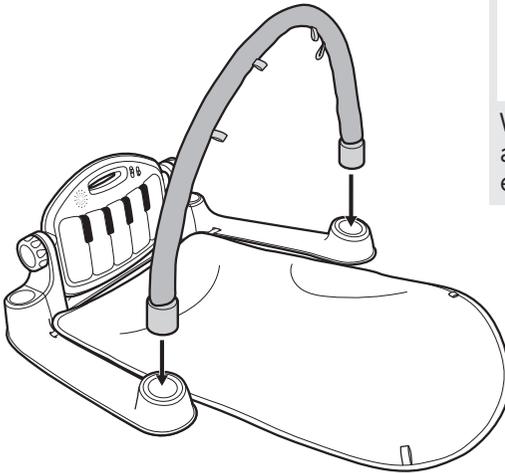

Wrap the strap on the mirror around the arch and fasten the ends together.


2

Sit Up Assembly

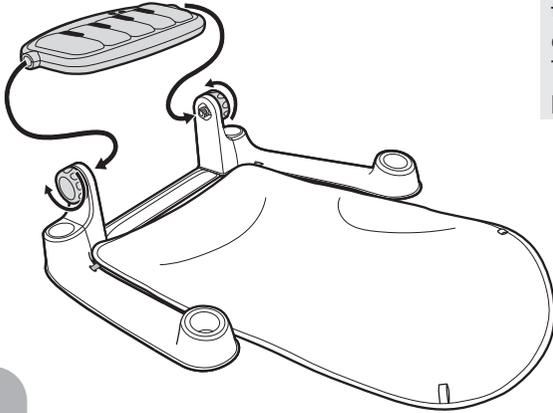

With the keys facing up, fit the piano onto the peg on each hub.
Tighten each hub to secure the piano in place.


1

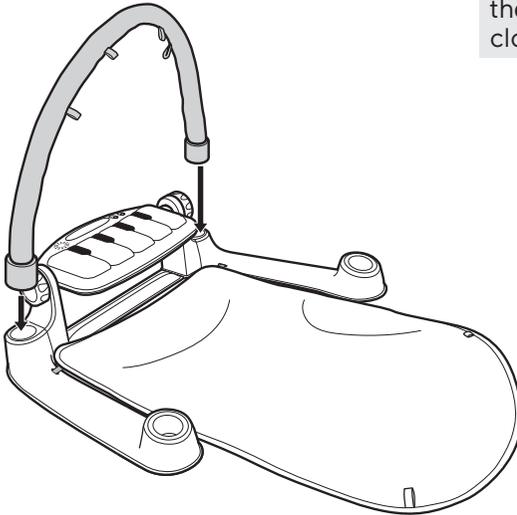


Fit the ends of the arch into the socket in each base closest to the piano.

2


Attach Toys

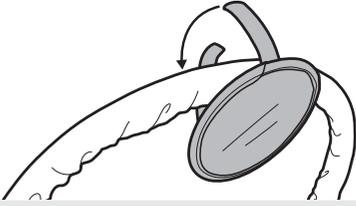

Wrap the strap on the mirror around the arch and fasten the ends together.

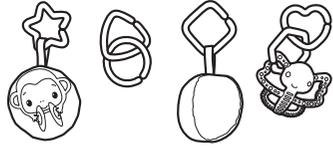

Attach the toys to any of the loops on the arch or the mat!

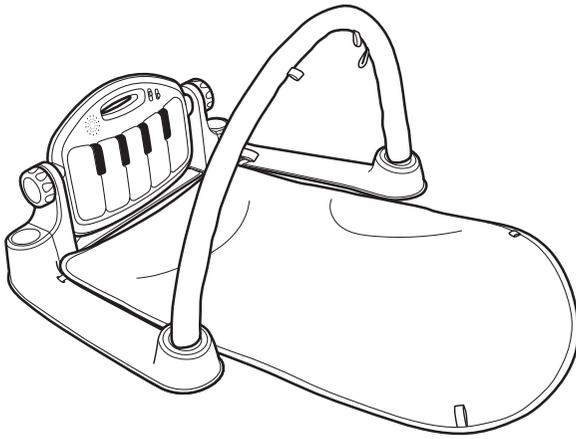

Care


The mat and soft toys are machine washable. Wash separately in cold water on the gentle cycle. Do not use bleach. Tumble dry on low heat.

The arch, hard toys, mirror, bases and piano can be wiped with a clean, damp cloth. Do not immerse the piano.

It's time to kick things up a notch!

WARNING

To prevent entanglement injury, never place the gym in a crib or playpen. Never add strings, ties or other products to the gym.

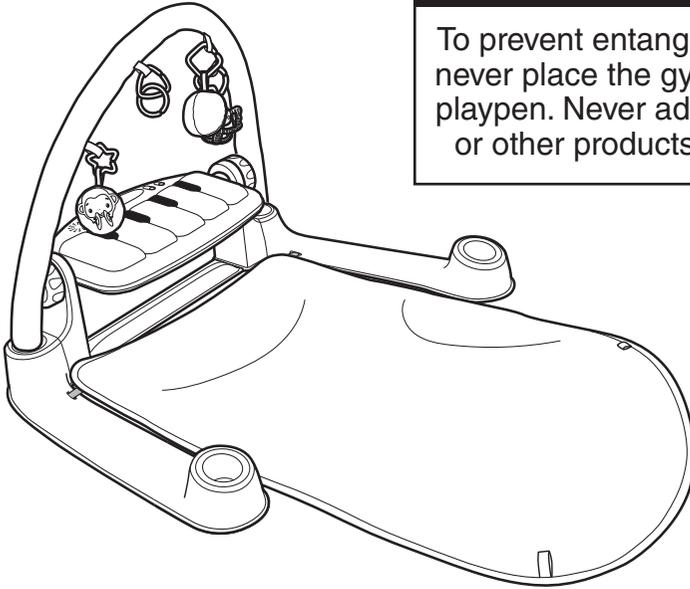

Slide the power-volume switch to ON with low volume , ON with high volume  or OFF .



Slide the mode switch to:

- 1 Sense** - Enjoy 30 minutes of music with each button press!
 - 2 Discover** - Press to hear a musical instrument or animal sound effects.
 - 3 Explore** - Press to hear colors, shapes and numbers!
-  **Piano Play** - Press to hear real piano notes.



WARNING

USING THIS PRODUCT FOR SLEEP OR NAPS CAN KILL.

Babies can turn over or roll out without warning and **CAN SUFFOCATE** in only a few minutes.

- **Use on the floor with baby on back, face-up.** Put baby on back after Tummy Time.
- **Stay near and watch baby during use.**
- **Do not use on soft surfaces or in sleep products** like cribs or bassinets.
Keep blankets and other soft items out of and away from product.
- If baby falls asleep, move baby to infant sleep product, such as a crib or bassinet.

Babies have been injured from **FALLS**.

- Do not use on beds, sofas, or other raised surfaces.
- Never carry or move product with baby in it.



WARNING

- Read all instructions before using this product.
- Keep instructions for future use.
- Do not use this product if it is damaged or broken.