 


fisher-price

Little People®

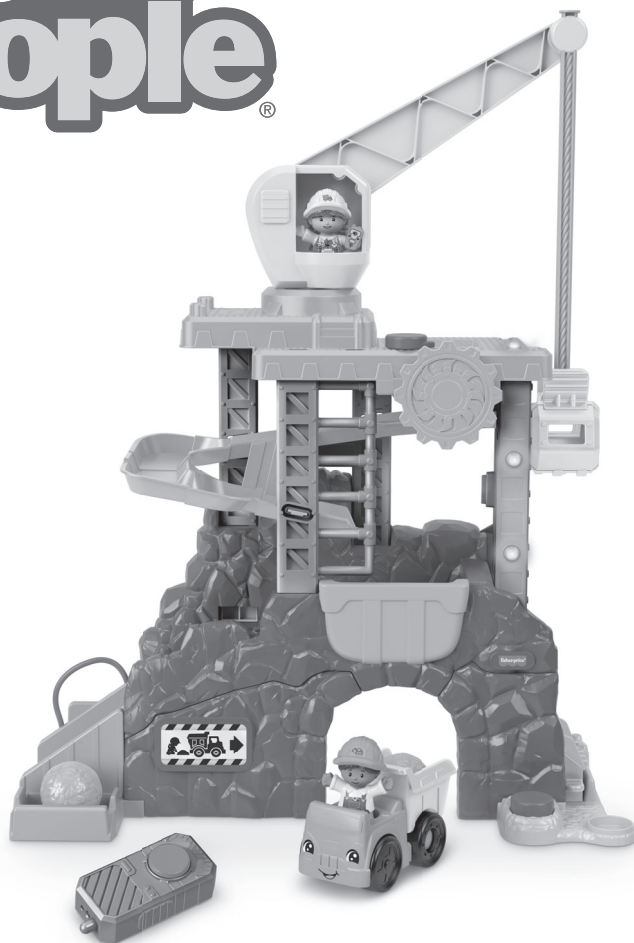

Keep these instructions for future reference, as they contain important information.

Adult assembly is required. No tools required.

The remote requires two AAA batteries (included).

The playset requires three AA batteries (included).

Batteries included are for demonstration purposes only.

Battery replacement is required. Tool required for battery replacement: Phillips screwdriver (not included).

To clean, wipe with a damp cloth.

Do not immerse.


HRP09



Discover Our Little Big World™

Fisher-Price® Little People® toys are designed to bring the great big world down into the tiny hands of toddlers. Diverse characters and familiar settings encourage discovery and provide a starting point for imaginative, storytelling fun. And while they're creating a world of their own, kids are also learning about people & places, animals, being a good friend, and more.


Assembly

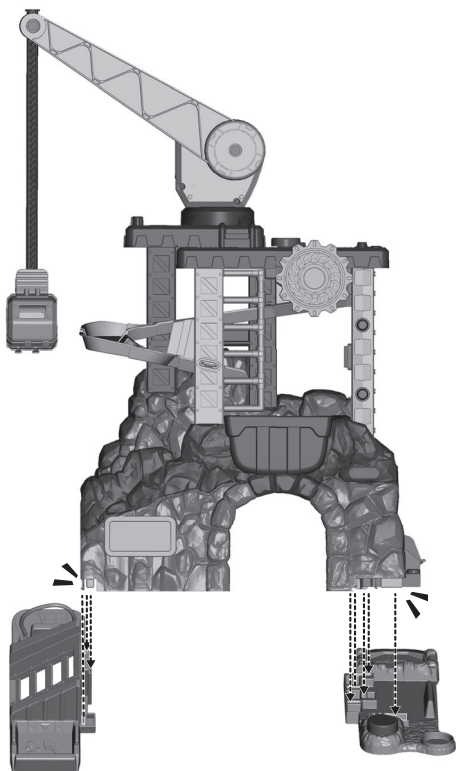

“Snap” the elevator and ramp bases to the bottom of the playset.


Replace Batteries

1,5V x 2
AAA (LR03)

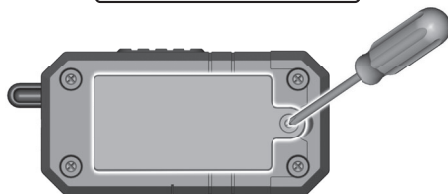

Remote Battery Door


1,5V x 3
AA (LR6)

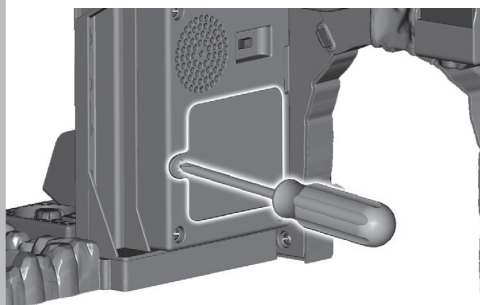

Playset Battery Door

- For longer life, use **alkaline** batteries.
- Loosen the screw in each battery compartment door with a Phillips screwdriver and remove the doors. Remove the exhausted batteries and properly dispose.
- Insert two, new AAA (LR03) **alkaline** batteries in the remote and three, new AA (LR6) **alkaline** batteries in the playset.
- Replace the battery compartment doors and tighten each screw. Do not over-tighten.


Let's Work Together!

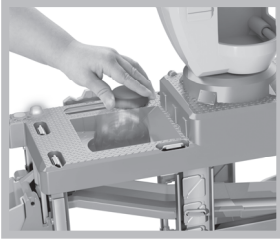

Slide to drop a boulder down the ramp. Listen to construction sound effects and phrases and fun songs too!



Point the remote to the rooftop sensor and press the button. Listen to fun phrases, sound effects and music.

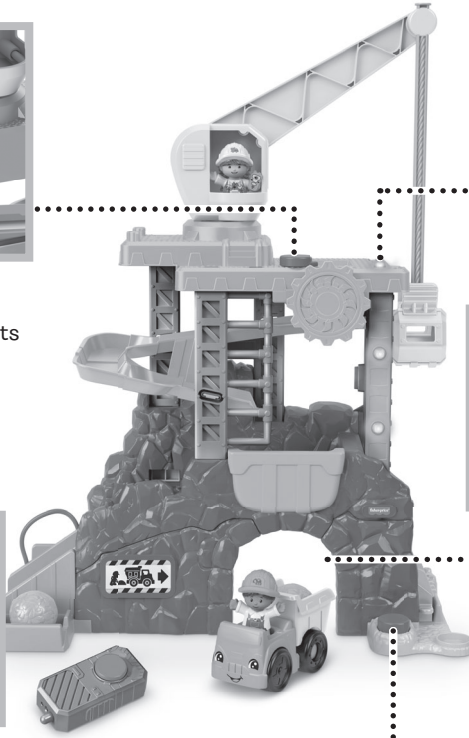

..... Rooftop Sensor



Slide the power switch to ● ON or ○ OFF.



Press to release a boulder from the hopper! Watch the elevator lights and listen to songs and phrases about working together.

- After a few minutes of inactivity, the playset enters sleep mode and the rooftop sensor turns off. When this happens, the remote does not activate lights, sounds or phrases. To wake up the playset:
 - Slide or press a button on the playset.
 - Slide the power switch off and then back on.
- The maximum range between the remote and the playset is about 10 feet (3 meters).
- Bright sunlight may affect the range between the remote and the playset. For best performance, do not use in direct sunlight.
- Make sure there is a clear path between the remote and the playset.
- When sounds or lights from the playset or the light on the remote becomes faint or stops, it's time for an adult to change the batteries.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power switch on the playset off and back on. Remove the batteries from the remote and reinstall them.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment (+ and -).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

**UNITED STATES**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052. Consumer Services: 1-800-432-5437.

CANADA

Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2 Consumer Services/Service à la clientèle : 1-800-432-5437. www.service.mattel.com.

GREAT BRITAIN

Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK. www.service.mattel.com/uk.

NEDERLAND

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

SOUTH AFRICA

Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.



©2023 Mattel.
PRINTED IN CHINA
HRP09-0970-1103101383-DOM

