



MODEL 72001 P/N 82361200 Rev.A
For 1 player / Ages 8 and up


INSTRUCTION MANUAL

Sit down to a few hands with your new Draw Poker from Radica and experience all the thrills and excitement of high-stakes poker without the risk of losing your life savings. Faster dealing keeps the game moving as you try to draw the best hand you can.

Button Functions:

On•Deal•Draw – Press this button to turn the game on, deal your first five (5) cards (5 points will automatically be bet). After you HOLD the cards you want to keep, press this button again to DRAW new cards.

Hold (5) – Press these buttons according to which card you want to keep. Press these buttons again to release the HOLD on that card.

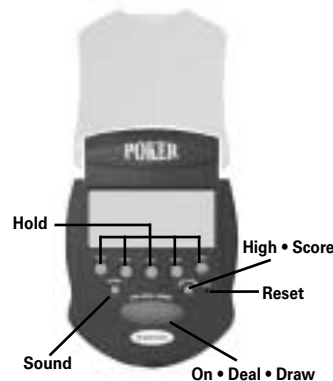

Sound – Press this button to turn the sound on or off.

High•Score – Press this button at any time to see the highest score achieved on this unit since the last time the computer was reset or the last time the batteries were installed or re-inserted.

Reset – Press this button to reset the game. This will erase the high score achieved on this unit.

PLAYING THE GAME:

Turn on the game by pressing the **On•Deal•Draw** button.

Press the **On•Deal•Draw** button again to deal your first set of cards. Five (5) points are automatically bet.

Select the cards you wish to hold by using the **Hold** buttons, which are located directly below each card.

Press the **On•Deal•Draw** to receive your next set of cards. If you have a winning hand, your points will increase by the amount listed on the pay table on the back of your game.

FLIP TOP POKER RADICA	
ROYAL FLUSH	5000
STRAIGHT FLUSH	250
4 OF A KIND	125
FULL HOUSE	40
FLUSH	25
STRAIGHT	20
3 OF A KIND	15
2 PAIR	10
JACKS OR BETTER	5

NOTE: If your point total gets down to zero, 100 points is automatically added to your total. Maximum displayable score: 99,995.

SLEEP MODE:

Flip Top Poker will go to sleep after one minute of non-activity. To wake the game, press the **On•Deal•Draw** button.

BATTERY INSTALLATION:

This game is powered by one (1) AAA battery.

- Using a screwdriver, loosen the screw until the battery compartment door can be removed.
- Insert one (1) AAA battery (we recommend alkaline) as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERY.

CAUTION:

- As with all small batteries, the batteries used with this game should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.
- Be sure you insert the battery correctly and always follow the game and battery manufacturer's instructions.
- Do not dispose of batteries in fire.
- Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.

MAINTENANCE:

- Handle this game carefully.
- Store this game away from dusty or dirty areas.
- Keep this game away from moisture or extreme temperature.
- Do not disassemble this game. If a problem occurs, press the Reset button, or remove and replace the battery to reset the game, or try new battery. If problems persist, consult your warranty card for replacement instructions.
- Use only the recommended battery type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable battery.
- Do not attempt to recharge non-rechargeable battery.
- Remove any exhausted battery from the game.
- Do not short-circuit the supply terminals.
- Insert battery with the correct polarity.

Please retain this for future reference.

RADICA:®
FLIP TOP POKER IS A TRADEMARK OF
RADICA CHINA LTD.
© 2001 RADICA CHINA LTD.
PRODUCT SHAPE™
ALL RIGHTS RESERVED

