



Model 2700 P/N 82350300 Rev.A
For 1 Player / Ages 18 and Up

This is not a toy and is intended for use by or under the supervision of adults.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS

All the safety and operating instructions should be read before the product is operated.

RETAIN INSTRUCTIONS

The safety and operating instructions should be retained for future reference.

HEED WARNINGS

All warnings on the product and in the operating instructions should be adhered to.

FOLLOW INSTRUCTIONS

All operating and use instructions should be followed.

CLEANING

Unplug this product from the wall outlet before cleaning. The product should be cleaned only with a polishing cloth or a soft dry cloth. Never clean with furniture wax, benzene, insecticides or other volatile liquids since they may corrode the cabinet.

ATTACHMENTS

Do not use attachments not recommended by the product manufacturer.

WATER AND MOISTURE

Do not use this product near water - for example, near a bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.

POWER SOURCES

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.

LOCATIONS

Do not install the product in a location which is exposed to direct sun ray, or near stoves or radiators. Excessive heat can adversely affect the cabinet and internal components. Installation of the product in a damp or dusty environment may also result in a malfunction or an accident. (Avoid installation near cookers etc., where the product may be exposed to oily smoke, steam or heat.)

Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product.

Do not install the product on a tottered stand nor in an unstable or inclined place.

NON-USE PERIODS

The power cord of the product should be unplugged from the outlet when left unused for long period of time.

GROUNDING OR POLARIZATION

This product is equipped with a three wire grounding type plug, a plug having a third (grounding) pin. It will only fit into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.

POWER-CORD PROTECTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or an electric shock.

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product. Never make a knot in the cord or tie it with other cords. A damaged cord may cause fire, electric shock. Check the power cord periodically.

LIGHTNING

For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.

OVERLOADING

Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

OBJECT AND LIQUID ENTRY

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

SERVICING

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

DAMAGE REQUIRING SERVICE

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instruction as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.

REPLACEMENT PARTS

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

SAFETY CHECK

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

WALL OR CEILING MOUNTING

The product should not be mounted to a wall or ceiling.

HEAT

The product should be situated away from heat.

NOTE: Replace only with fuses of the same type and electrical rating. Otherwise, it may result in fire or electric shock.

NOTE: Replace only with fluorescent tubes and starters of the same type and electrical rating. Otherwise, it may result in damage, fire or electric shock.

SAVE THESE INSTRUCTIONS

SUPPLIED ACCESSORIES

- Operating instructions (this manual)
- Quick Start Guide
- (2) T5 6W white light fluorescent tube
- (2) 120V 6W Starter
- (1) Candle lamp cover
- (1) E10 Size 6V 1.5W (Screw) Light bulb
- (1) Power cord

CONNECTING POWER

1. Make sure that the switch is in the "off" position (O side is down).
2. Plug the power cord into the power receptacle at the back of the product.
3. Plug the power cord into a power outlet.

PLAYING THE MEGA MILLION SLOT

Switch the ON / OFF button to ON.

Press "PLAY 1 CREDIT" to bet one credit. Pressing it again increases the bet from one to two or three bets. A maximum of three credits may be betted.

Press "PLAY 3 CREDITS" to maximize the bet to three credits.

Spin the reels by using a smooth, gentle pull on the handle. Release the handle immediately after the mechanism releases. NEVER jerk or pull the handle in a rough manner.

ALWAYS WAIT FOR THE REELS TO STOP BEFORE PULLING THE HANDLE AGAIN.

Coins dropped into the front right slot will be released whenever a prize is won. The coins inserted in the bank can be released any time by pushing the manual release lever inside the coin drop opening.

If handle is pulled without betting, one credit will be betted automatically.

When "Progressive Jackpot" is hit, the bell rings (if sound is turned on) and the machine locks up. Press the "Reset" button to initialize the game.

When all credits are lost, a one minute animation sequence will be shown on the "Progressive Jackpot." Credit counter returns to 100 after sequence.

FEATURES

ON / OFF - Located in the back, this button turns the unit on or off.

Candle Lamp - Flashes when a progressive jackpot is hit or a win from a three credit hit.

Progressive Jackpot - Displays the accumulated progressive jackpot.

Handle - Pull the handle gently to spin the reels.

Reels - Displays the payline.

Credits - Shows the number of credits in hand.

Winner Paid - Shows the number of credit won and to be paid in the last pull.

Credits Played - Shows the number of credit betted.

Game Over - Turns on when prize credits have been given or when there is no prize.

Play 3 Credits - Press this button to place a three credit bet.

Play 1 Credit - Press this button once to place a one credit bet. Press this button twice to place a two credit bet.


Sound - Press this button to turn the sound on or off.

Coin Slot - Insert the coins here.

Power Cord - Plug this cord into the power outlet to turn the unit on.

Fuse Tray - Storage for replaceable fuses.

Reset - Press this button to restore the game to its original state. The progressive jackpot will be reset to \$1,000,000.

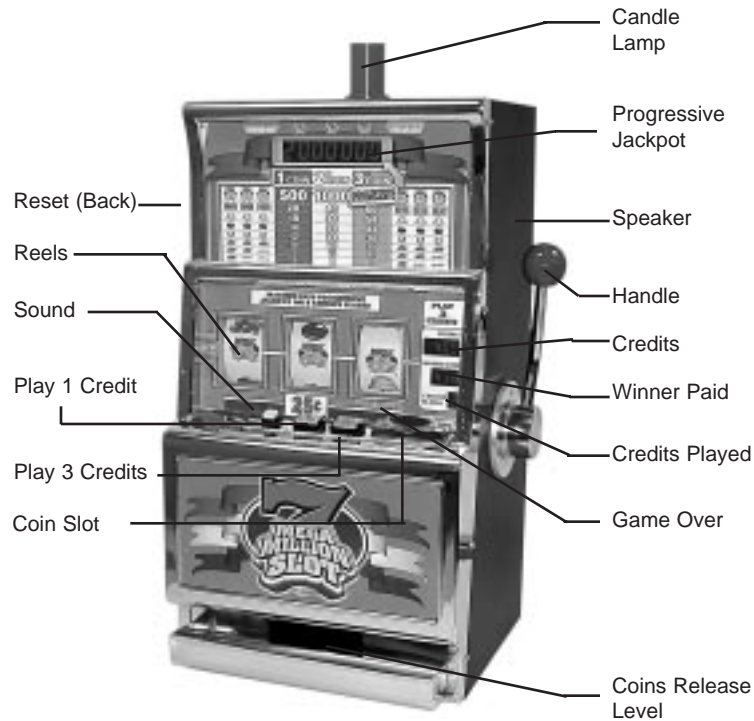

Fluorescent tubes, starters, candle lamp cover and light bulb are not installed when the product is shipped to protect them from damage. They should be installed before the product is used.

INSTALLING/REPLACING THE FLUORESCENT TUBES AND STARTERS

Fluorescent tubes and starters may need to be replaced after the product is used for certain period of time. There are two pieces of fluorescent tubes and starters, one each behind the top panel and bottom panel respectively. Please follow the steps below to install/replace:



1. Make sure that the power is turned off.
2. Make sure that the power cord is disconnected from the unit.
3. Press the top corners of the panels to remove the panels.
4. Insert starter into the starter socket and turn it clockwise to lock (turn counter-clockwise to remove).
5. Insert fluorescent tube into the fluorescent tube socket and turn it up or down by 90 degrees to lock (or remove).
6. Replace the panels and press the top corners to lock.

INSTALLING/REPLACING THE LIGHT BULB

The light bulb of the candle lamp may need to be replaced after the product is used for a certain period of time. Please follow the steps below to install/replace:



1. Make sure that the power is turned off.
2. Turn the candle lamp cover clockwise to remove.
3. Turn the light bulb counter-clockwise to remove.
4. Insert a new light bulb and turn the light bulb clockwise to lock.
5. Replace the candle lamp cover and turn counter-clockwise to lock.

NOTE: Replace only with a DC6V 1.5W (screw end, 10mm diameter) light bulb. Otherwise, it may result in damage or malfunction.

REPLACING THE FUSE

The fuse is installed to the product for protection reasons. The fuse tray can be found at the power cord receptacle located at the back of the product. Please follow the steps below to replace:

1. Make sure that the power is off.
2. Make sure that the power cord is disconnected from the unit.
3. Unplug the power cord from the power cord receptacle.
4. Pull the fuse tray out.
5. Replace the blown fuse. The one held by the clamp is the fuse in use while the one in the cavity is a spare. One spare fuse is supplied and is located in the cavity.

TROUBLESHOOTING

1. The Power is not working.
 - Check and make sure the cord is plugged in properly.
 - Check and make sure the power is turned on.
 - Check and make sure the fuses are not blown.
2. Candle lamp does not light up when prize is won.
 - Replace the bulb of the candle lamp.
3. Top or bottom panel are not illuminated.
 - Replace and install fluorescent tubes.
 - Replace and install starters.
4. Abnormal display or improper function.
 - Press "Reset" button to initialize the product.
5. No sound when reels spin or when credits are awarded.
 - Press the "sound" button to turn the sound on or off.

NOTE: If you experience other problems, unplug the power cord and call our player help line at 1.800.803.9611.

RATINGS AND SPECIFICATIONS

Model	: 2700 Mega Million Slot™
Power supply	: AC 120V 60Hz 0.8A
Wattage	: 80W (max.)
Light Bulb	: E10 Size 6V 1.5W (Screw)
Starter	: 120V AC 6W
Fluorescent Tube	: T5 Size 6W
Protection	: 250V 1A FUSE (20mm x 5mm)
External dimensions	: Approximately 13" X 11" X 23" (W x D x H)
Weight	: Approximately 26 lbs.
Usage environment	: Temperature 41 to 95° F Humidity 20-90% RH (no condensation)

- Computer controlled
- 3 reels, 1 line play
- 1 to 3 credits of bet
- 8 kinds of fruit/symbols
- 10 prizes
- Progressive jackpot
- 3 keys for operation and 1 key for reset
- Bell and speaker
- "Game Over" lamp, candle light, 7-digit progressive jackpot display, 4 digit credit counter, 3 digit prize counter, 1 digit bet counter
- Reel position and reel stop detectors
- Fluorescent lamp front panel lighting
- Motorized coin door
- Metal cabinet with chrome metal door/coin tray

FCC COMPLIANCE AND ADVISORY STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.




QUICK START

Before you use the 2700 Mega Million Slot™, locate the package containing materials for installation.

- The package includes:
- (2) fluorescent tubes
 - (2) starters
 - (1) top light bulb
 - (1) lamp cover (red)
 - (1) power cord

INSTALLING THE FLUORESCENT TUBES AND STARTERS

1. Make sure that the power is off.
2. Make sure that the power cord is disconnected from the unit.
3. Press the top corners of the panels to remove the panels.
4. Insert starter into the starter socket and turn it clockwise to lock (turn counter-clock wise to remove).
5. Insert fluorescent tube into the fluoresecent tube socket and turn it up or down by 90 degrees to lock (or remove).
6. Replace the panels and press the top corners to lock.

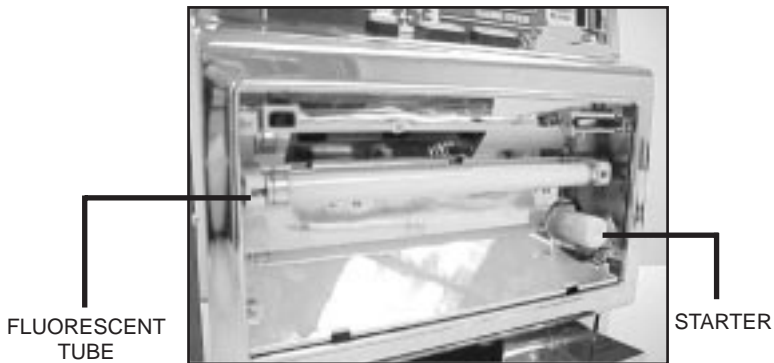

INSTALLING THE LIGHT BULB ON TOP

1. Make sure that the power is turned off.
2. Insert a new light bulb and turn the light bulb clockwise to lock.
3. Replace the candle lamp cover and turn counter-clockwise to lock.

