

CAUTION

- As with all small batteries, the batteries included with this game should be kept away from small children who still put things in their mouths. If the battery is swallowed, promptly see a doctor.
- Be sure you insert the battery correctly and always follow the game and battery manufacturers' instructions.
- Battery may leak if improperly installed, or explode if recharged, disassembled or heated.

MAINTENANCE

- Handle the game carefully.
- Store the game away from dusty or dirty areas.
- Keep the game away from moisture or temperature extremes.
- Do not disassemble the game. If a problem occurs, press the reset button. If problems continue, remove and replace the battery – or try new battery. If problems still continue, consult your warranty card for replacement instructions.
- Only battery of the same or equivalent type as recommended are to be used.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable battery.
- Do not attempt to recharge non-rechargeable battery.
- Remove any exhausted battery from the game.
- The supply terminals are not to be short-circuited.
- Batteries are to be inserted with the correct polarity.

Keep this manual because it contains important information.

JACKPOT SLOT™

MODEL 8024

PLAYING THE GAME

Place a bet by pressing either the BET or MAX BET buttons. The BET button will place a 10 point bet on only 1 line at a time. The MAX BET button places a 30 point bet which covers all 3 lines.

Next, press the SPIN button. Pressing the SPIN button will automatically bet "line 1" and spin for you. If you press and hold the SPIN button, "Line 2" and "Line 3" will be added to your bets before it spins. You will see the reels spin on the LCD screen. Eventually each reel will stop. If you have one of the winning matchups shown in the table on the lid of the game, you win!

At any time, you can press the HIGH SCORE button to see the highest score achieved on this unit.

NOTE: If your point total gets down to zero, 400 points is automatically added to your total. Maximum displayable score: 9,990

BUTTON FUNCTIONS

SPIN

After placing your bet, press this button to spin the reels.

BET

Press this button once to place a 10 point bet. With 10 points bet, you can only win if you get a jackpot across the middle line. Press BET twice to bet 20 points (2 lines).

MAX BET

Press to quickly bet 30 points. With 30 points bet, you can win with a jackpot on any of the 3 lines.

SOUND

Press to turn the sound ON or OFF.

HIGH SCORE

Press at any time to see the highest score achieved on this unit since the last time the computer was reset or the last time the batteries were re-inserted.

RESET

Press to reset the game's internal computer. This will erase the high score achieved on this unit.

BATTERY INSTALLATION

This game is powered by two (2) AA batteries. For extra long battery life, use alkaline batteries. **DO NOT USE RECHARGEABLE BATTERIES.**

1. To remove cover, loosen the screw on the battery cover and slide outward.
2. Insert two fresh alkaline batteries with the negative (-) ends against the springs.
3. Replace the battery compartment cover.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.



RADICA:®

© 1999 RADICA CHINA LTD.
PRODUCT SHAPE™
ALL RIGHTS RESERVED