

remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid.

Products returned after the 90-day period has expired will be repaired or replaced (at our option) for a service charge of US \$10.00. Payment must be made by check or money order. This extended service will only be available for one year from the date of purchase.

**IMPORTANT:** Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

**RADICA:®  
GIRL TECH®**

KEEPSAFE BOX IS A TRADEMARK OF RADICA GAMES LTD.


© 1998 RADICA GAMES LTD.

PRODUCT SHAPE™

PATENTS PENDING

ALL RIGHTS RESERVED

CUSTOMER SUPPORT LINE: 1-800-803-9611

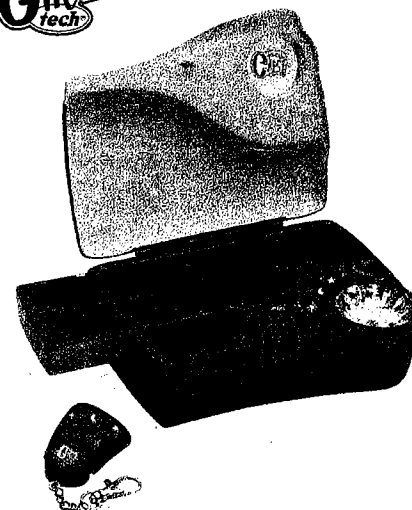

**KEEPSAFE BOX™**

Model G9919


**Instructions**

P/N 82344300 Rev.A

## ABOUT KEEPSAFE BOX™

Keepsafe Box is a high-tech storage container that opens by remote control. You can put jewelry, money, notes and other personal things inside to protect them from intruders!

The three-button remote control can be attached to a keychain, backpack or purse. When you press the correct combination, the Keepsafe Box will open!

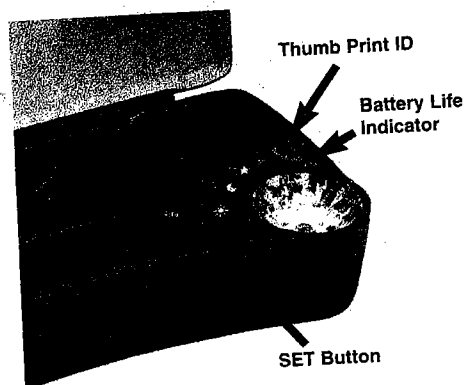

## SETTING UP KEEPSAFE BOX™

Unscrew the battery compartment on the box and insert three (3) AA batteries into the unit. Replace the cover.

## SETTING YOUR CODE

1) To open Keepsafe Box, press the **THUMB PRINT ID** button on the box once. The yellow light will flash to let you know the unit is awake.

2) The Keepsafe Box comes with a preset code which opens the box (default code). On the remote control, press the **SUN** button, then the **MOON** and then the **STAR**. The lights will flash and the lid will pop up.

**NOTE:** If the unit will not open, remove and then re-insert the batteries (see "**Replacing the Batteries**"). This will reset the computer to the default code: Sun, Moon, Star. Next, repeat Step 1.

3) Inside the box is a **SET** button. Hold the **SET** button down for three seconds. The yellow light next to the **THUMB PRINT ID** button will turn on.

4) Create your own three-button code and enter it on the remote control. You can use any combination, and any of the three buttons can be used more than once. For example, your new code could be Star, Moon, Star, or maybe Sun, Moon, Moon.

As you enter your new code, the green lights which correspond to the buttons you are pressing will turn on. After you have entered all three buttons, there will be a three-second pause, and then you will see the green lights flash in the order of the code you entered. This means that your code was entered successfully.

You can change your code anytime by pressing the **SET** button and holding it down for three seconds.

## REMEMBER YOUR CODE

If you forget your code, remove and re-insert the batteries to make the unit return to the default code: **Sun, Moon, Star**. Open the unit again with this code and enter a new three-button code.

## OPENING KEEPSAFE BOX™ WITH YOUR NEW CODE

Close the lid on the Keepsafe Box. If the yellow light is not flashing, press the **THUMB PRINT ID** button to wake the unit. Now enter your three-button code. Each time you press a button, you will have 10 seconds to press the next button. If you wait more than 10 seconds, the computer inside Keepsafe Box will detect an error and you must start over.

## PLAY MODE

On the side of the Keepsafe Box, there's a switch which can be set for either "Long Play" or "Short Play".

Short Play mode saves batteries, but the Keepsafe Box will go into sleep mode after one minute of non-play. In Long Play mode, the unit goes into sleep mode after 30 minutes of non-play. You can tell the unit is awake when the yellow light is flashing.

## SECRET COMPARTMENTS

There are two secret compartments inside Keepsafe Box. One can be found inside the box lid, behind the printed label. Press on the tab to open the compartment.

The other compartment can be found in the top-left corner, inside the box. Slide the drawer to the left, and below you will find more secret storage!

## COIN SLOT

Use the coin slot on top of the box to deposit coins without opening the lid.

## BATTERY LIFE INDICATOR

Next to the **THUMB PRINT ID** button is a small, red LED light. This light will turn on when the battery is getting low. If you see this light turn on, replace the batteries as soon as possible.

## TO MANUALLY OPEN THE LID:

- Remove the outermost battery.
- Insert a small screwdriver into the rectangular opening at the breakaway tab at the back of the battery compartment.
- Carefully pry the breakaway tab away from the unit - being careful not to drop the tab inside the unit.
- Remove the breakaway tab with your fingers and discard it.
- Insert a small object into the circular opening on the mechanical lever.
- Slide the mechanical lever sideways to unlock the lid.
- While the lid is open, insert new batteries (if needed) and replace the battery door.
- Follow the instructions under "Setting Your Code" to reset your combination code.

## TAMPER EVIDENT SEALS

Two Tamper Evident Seals are shipped with the product and used to reseal the breakaway tab area. Simply remove the paper backing from the seal and place over the breakaway tab opening.