




# Suds & Surprise™ Dora

## INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.

### Suds & Surprise™ Dora can be played with in or out of the tub or shower.

- Attach the base to the inside of your tub or shower using the 3 suction cups as shown.
- Insert Dora into the base, making sure to line up the notch on the back of Dora to the hole in the base, as shown.
- Remove Dora from the base for play outside of your tub or shower.
- You can remove the base from your tub or shower at any time using the tabs on the sides of the suction cups.

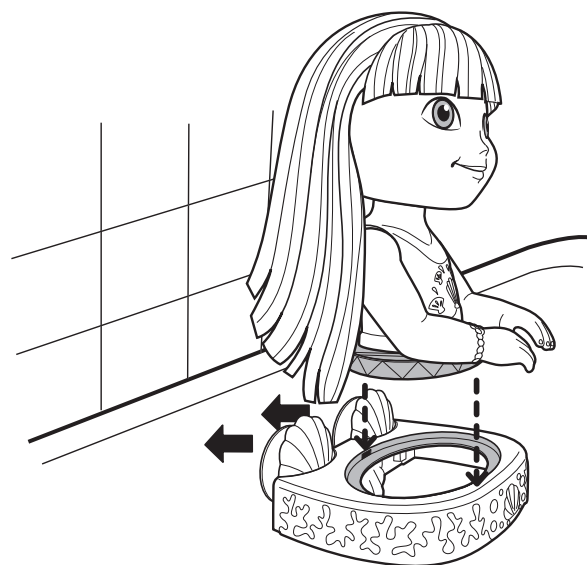

Front

### To activate Dora's color changing features:

#### Dip the applicator in WARM water and apply to:

- Dora's face to reveal undersea face paint around her eyes
- Dora's hair to reveal blue highlights
- Dora's bathing suit to reveal pink & blue shells

**NOTE: DO NOT use water that is too hot (above 43°C/110°F) to avoid burns.**

 
#### Dip the applicator in COLD water and apply to:

- Dora's face to reveal butterfly and flower face paint on her cheeks
- Dora's hair to reveal purple and blue highlights
- Dora's bathing suit to reveal purple shells

**NOTE: For best results, dip the applicator into the seashell bowl (included) using icy cold water.**

**PARENTS NOTE:** Children should not be left unattended when in or near water. Drain, rinse, clean and dry all items thoroughly before storing. Water toys sometimes get messy. Protect play surfaces before use.

Color change will last longer if you do not expose this toy to intense heat or direct sunlight for prolonged periods of time.



©2007 Viacom International Inc.  
All Rights Reserved. Nickelodeon, Nick Jr., Dora the Explorer and all related titles, logos and characters are trademarks of Viacom International Inc.

Fisher-Price, Inc., a subsidiary of Mattel, Inc.,  
East Aurora, NY 14052 U.S.A.  
**PRINTED IN CHINA.**  
Manufactured for Fisher-Price. ©2007 Mattel, Inc. All Rights Reserved.  
® and ™ designate U.S. trademarks of Mattel, Inc., unless otherwise indicated.

For countries outside the United States:  
Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2;  
[www.service.mattel.com](http://www.service.mattel.com).  
Great Britain: Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB,  
Helpline 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk)  
Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870,  
Richmond, Victoria, 3121 Australia.  
Consumer Advisory Service - 1300 135 312.  
New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.  
Asia: Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre,  
Harbour City, Tsimshatsui, HK, China.



L7297

**Fisher-Price**  
[www.fisher-price.com](http://www.fisher-price.com)

Back

L7297 Suds & Surprise™ Dora I/S  
Paper : Woodfree paper 80 gsm  
Color : Black  
Size : A5  
Date : 09/24/07