




Talking Animal Rescue Center

INSTRUCTION SHEET

Please keep these instructions for future reference as they contain important information.

HOW TO ASSEMBLE



ASSEMBLY PIECES

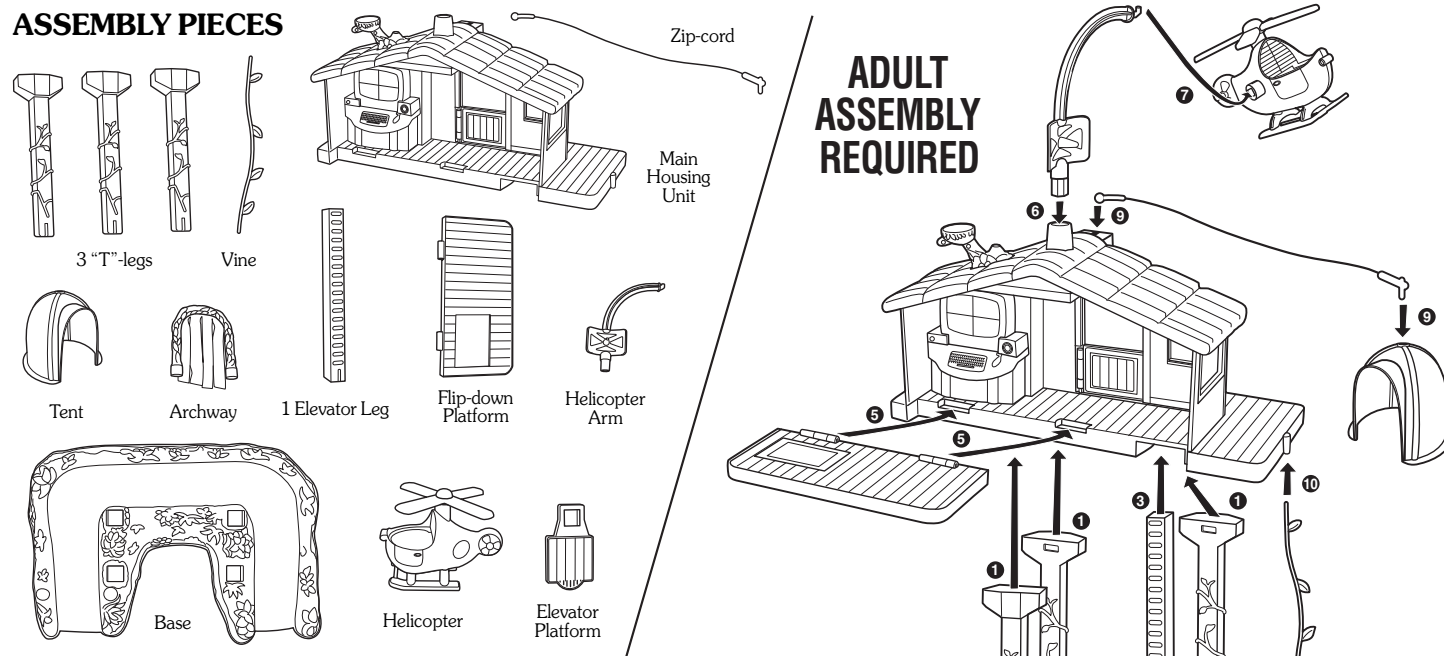


1. Insert the 3 "T"-legs into the bottom of the main housing unit as shown.
2. Slide the elevator platform onto the elevator leg as shown.
3. Insert the elevator leg into the bottom of the main housing unit as shown.
4. Insert the 4 legs into the base as shown.
5. Attach the flip-down platform as shown.
6. Insert the helicopter arm into the roof of the main housing unit as shown.
7. Attach the helicopter onto the helicopter arm as shown, holding the helicopter at an angle.
8. Insert the archway into the base.
9. Connect the zip-cord to the main housing unit and the tent. Do not bend the zip cord - creases can affect the function of the toy.
10. Insert the vine into the main housing unit as shown.

HOW TO PLAY

1. Press the tree branch on the roof of the main housing unit to swing the helicopter around.
2. Press the keyboard on the computer to hear sounds and phrases. Make sure the **ON/OFF** switch located on the side of the computer is in the **ON** position.
3. Assemble Diego's harness around the Diego figure and slide him down the zip-cord!

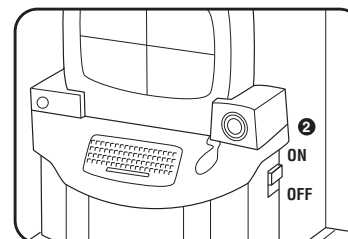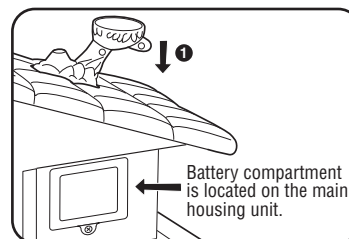

BATTERY INSTALLATION

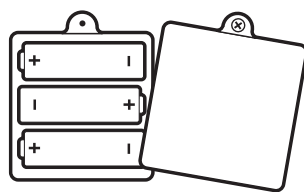

Unscrew and lift cover away from back of product. Replace batteries as shown.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.

- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

Batteries included are for demonstration purposes only. For longer life use only alkaline batteries. Requires 3 "AA" (LR6) batteries.

©2006 Viacom International Inc.
All Rights Reserved. Nickelodeon, Nick Jr., Go, Diego, Go! and all related titles, logos and characters are trademarks of Viacom International Inc.
Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
PRINTED IN CHINA.
Manufactured for Fisher-Price. ©2006 Mattel, Inc. All Rights Reserved.
Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc.
Packaging and address should be retained for future reference.

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-432-5437.
Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628500303.
Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312.
Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.
Dilimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 135, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.
Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-Toys.

Questions?
service.fisher-price.com
In US and Canada
1-800-432-5437

Fisher-Price
ITEM NO. J0339

Item No : J0339
Version : English
Size : 8.5 x 11"
Paper : Woodfree paper 80 gsm
Color : Black
Date : March 16, 2006 (EN)