

Ready Steady Rider™


Please keep this instruction sheet for future reference, as it contains important information.

Age: 12-36 months.

Maximum weight: 42 lbs. (19 kg).

Adult assembly is required. No tools are needed for assembly.

Please wipe each part with a clean, dry cloth before assembling this product.

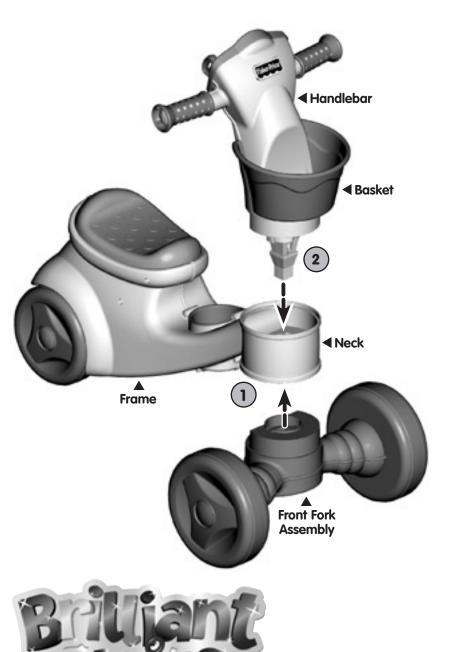

Assembly



• Insert the front fork assembly up into the neck of the frame.



- With the basket facing forward, insert the handlebar through the neck of the frame and "snap" it into the front fork assembly.
- Pull up on the handlebar to be sure it is secure.

One-time assembly is now complete.

Visit us on-line at www.service.fisher-price.com.

Call Fisher-Price® Consumer Relations, toll-free at 1-800-432-5437, 8 AM- 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or write to: Fisher-Price® Consumer Relations,636 Girard Avenue East Aurora, New York 14052.

For countries outside the United States:

CANADA

Questions? 1-800-432-5437, Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario, L5R 3W2; www.service.mattel.com.

GREAT BRITAIN

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303; www.service.mattel.com/uk.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, New York 14052, U.S.A. ©2005 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

www.fisher-price.com