 


IMPORTANT! Calibrate the stylus to the screen!

Pixter[®] will not function properly until you align the stylus and screen image.



- Install four "AA" **alkaline** batteries. Turn Pixter power on. Wait until you see the Home Screen.
- Turn Pixter over and locate calibration hole. Insert, push and hold stylus in calibration hole. Turn Pixter upright.
- When you see two ⊕, remove stylus from calibration hole.
- First touch upper left corner ⊕ with tip of stylus.
- Then, touch lower right corner ⊕ with tip of stylus.



Now, refer to the enclosed Owner's Manual for important information and tips!