




10+

INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.

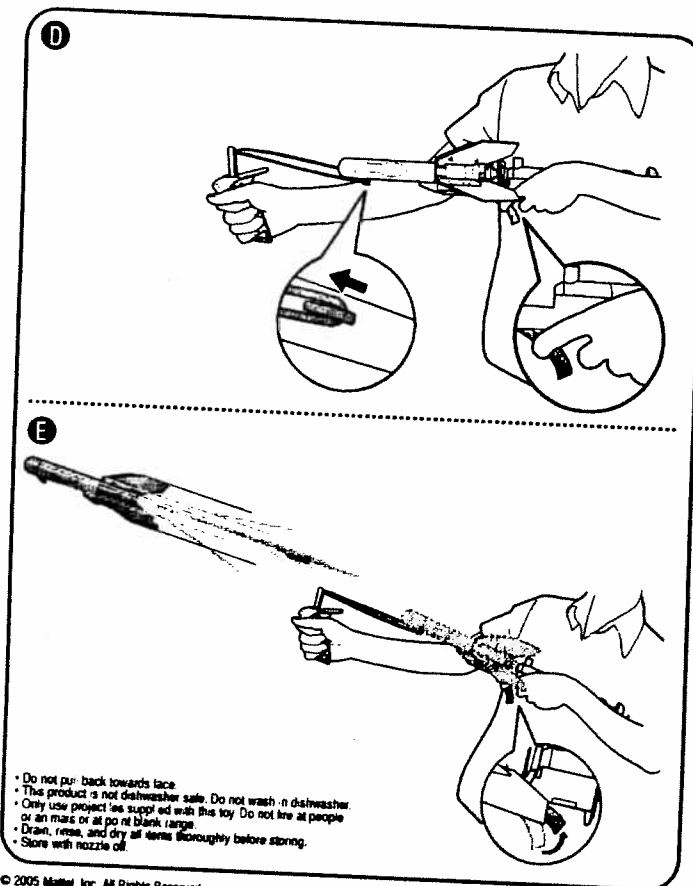


- Do not put back towards face.
- This product is not dishwasher safe. Do not wash in dishwasher.
- Only use project as supplied with this toy. Do not fire at people or an animal or at people or animals.
- Drain, rinse, and dry all items thoroughly before storing.
- Store with nozzle off.




© 2005 Mattel, Inc. All Rights Reserved.
Mattel, Inc. 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Relations 1-800-524-8687.
service.mattel.com Mattel U.K. Ltd., Vauxhall Business Park, Maidenhead SL6 4JH, Herts. EN20 9JH
Mattel Australia Pty Ltd., Richmond, Victoria 3121. Consumer Advisory Service - 1300 125 312.
Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Dandenong
& Dandenong Dist. Mattel SEA Ptd Ltd. (933533-7) Lot 13.5, Monara Lion Hill, Persimmon Golf Country
Resort, 47410 P.J. Tel:03-78003817, Fax:03-78003867.





CONTENTS

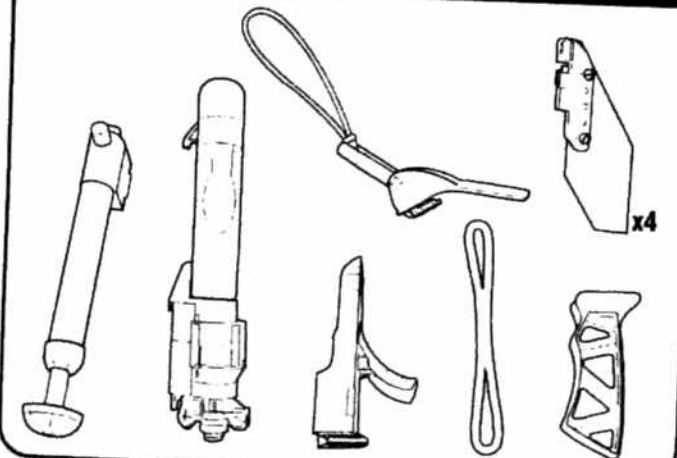

TO ASSEMBLE

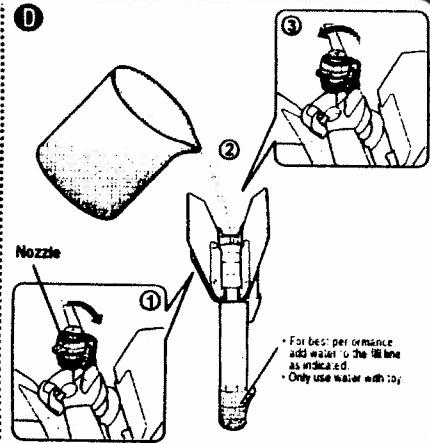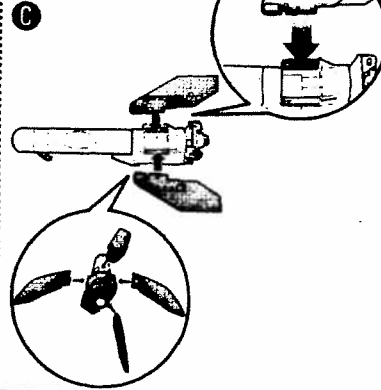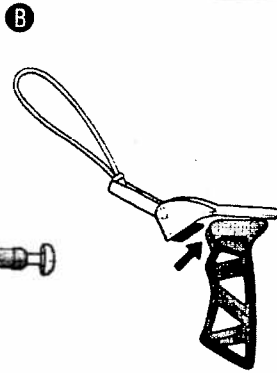

TO PLAY

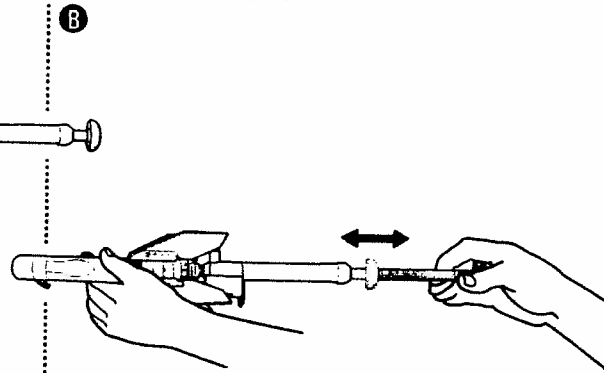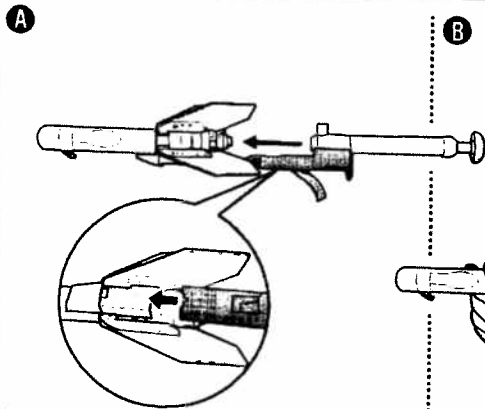

C For best performance, gently shake rocket to ensure all water is at back of rocket.

