

Fisher-Price®

www.fisher-price.com

J8999



Please keep this instruction sheet for future reference,
as it contains important information.

Requires three "AA" (LR6) **alkaline** batteries (not included).

Adult assembly is required.

Tool required for assembly:
Phillips screwdriver (not included).



Ramps Around Garage™

Parts

⚠ CAUTION

This product contains small parts in its unassembled state. Adult assembly is required.



 
#6 x 1/2" (1,3 cm) Screw - 4




#6 x 1" (2,54 cm) Screw - 4

Note: Tighten and loosen all screws with a Phillips screwdriver. Do not over-tighten the screws.


Both Shown Actual Size

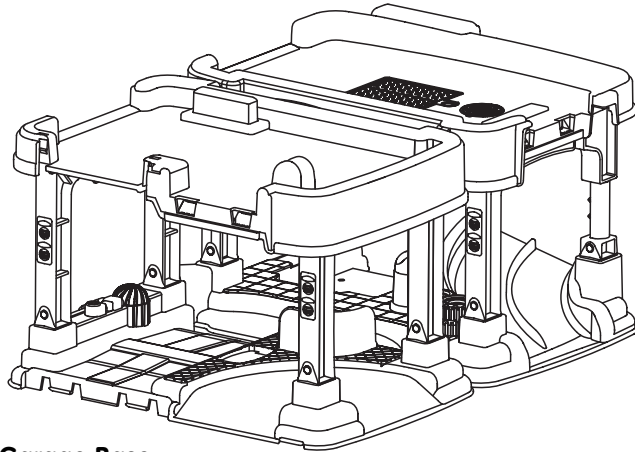


Garage Base

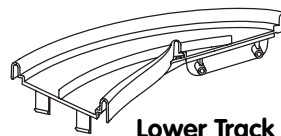 

Lower Track

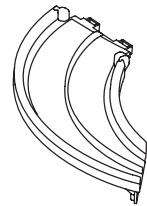 


Upper Track

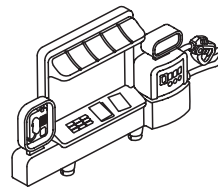 


News Stand



 2 Fences

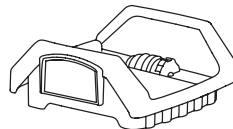


Elevator Roof

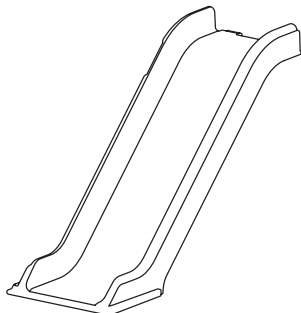 


Ramp



 Elevator Handle

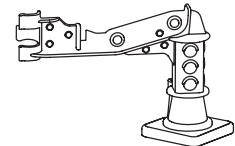

Track Support

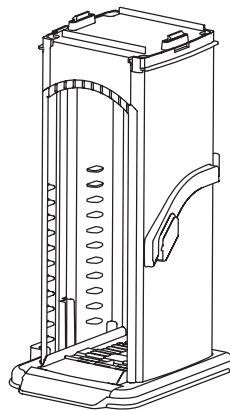 

Elevator



 
Vacuum



Tool Chest



Post




Gate

Parts Not Shown:


Label Sheet
Car
Tow Truck
2 Figures

 Assembly

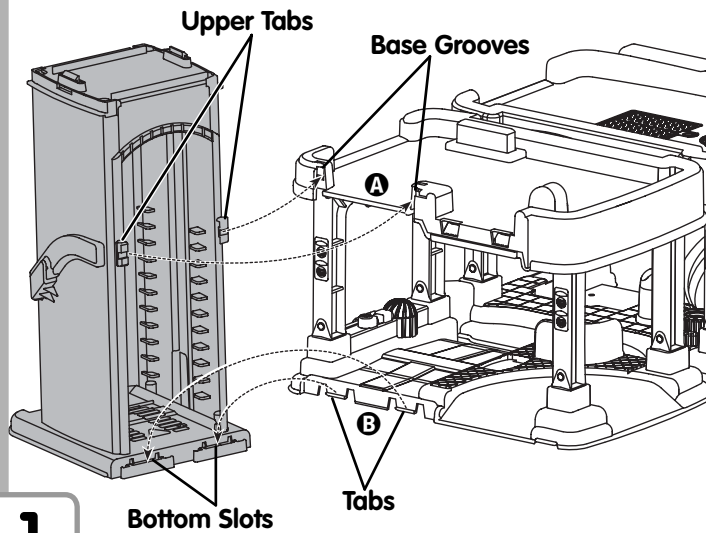


1

 - Position the elevator on a flat surface. Note the locations of the bottom slots and the upper tabs on the elevator.
- Hold the base at an angle. While making sure the upper tabs on the elevator fit into the grooves in the base **A**, insert the tabs on the base into the bottom slots on the elevator **B**.
- Press down on the base to **"snap"** the lift in place.

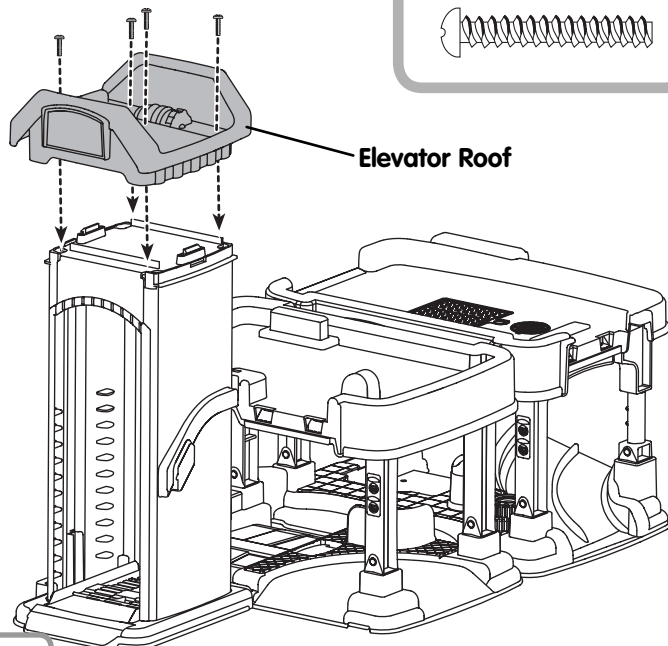


2

- Fit the elevator roof on the elevator.
- Insert four #6 x 1" (2,54 cm) screws into the elevator roof and tighten.

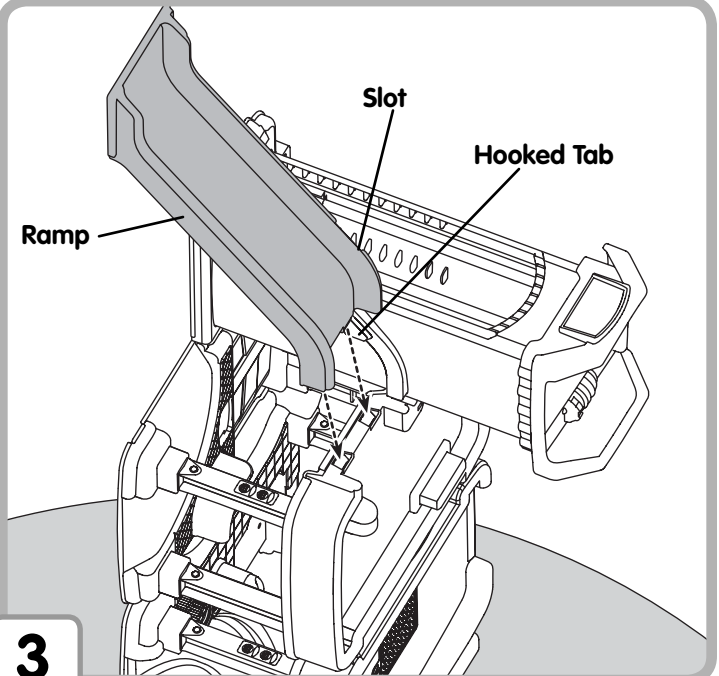

3


- Turn the garage on its side on a flat surface, as shown.
- Fit the connectors on the end of the ramp into the holes on the top of the base. Be sure to fit the hooked tab on the side of the elevator into the slot on the ramp. Press the ramp until it **"snaps"** in place.
- Turn the garage upright again.

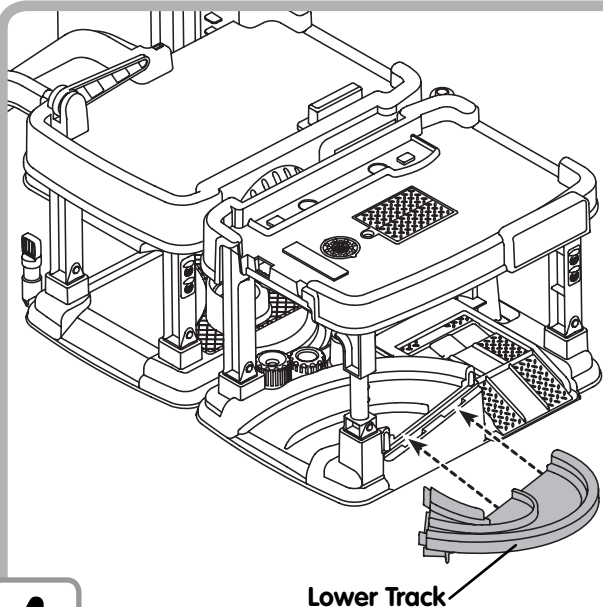

4


- **"Snap"** the tabs on the lower track into the slots in the base.

Assembly

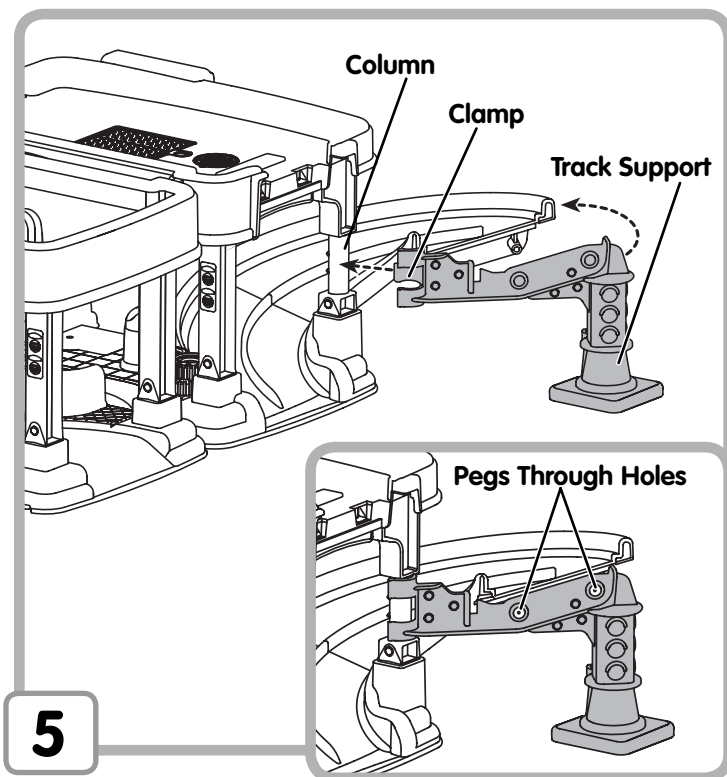

5


- Press the clamp on the track support onto the base column.
- Rotate the track support so that the holes in the support fit over the pegs on the lower track.

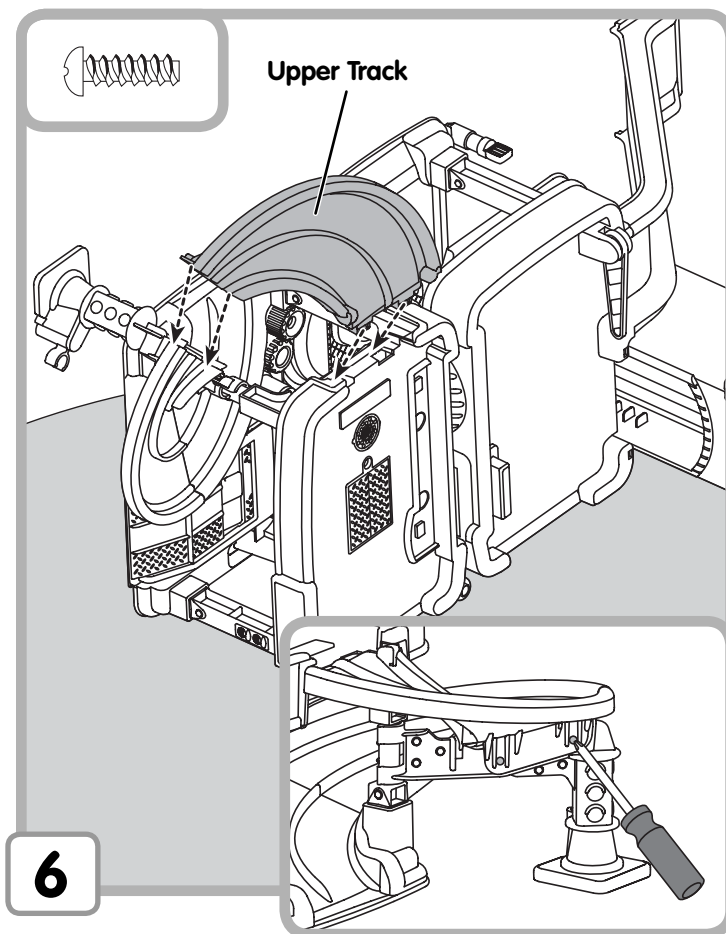

6


- Turn the garage on its side on a flat surface, as shown.
- **"Snap"** the rectangular connectors on the upper track into the holes at the top of the base.
- Fit the other end of the upper track over the end of the lower track.
- Turn the garage upright again.
- Insert two 1/2" (1,3 cm) screws into the holes on the underside of the upper track, as shown. Tighten the screws.

Assembly

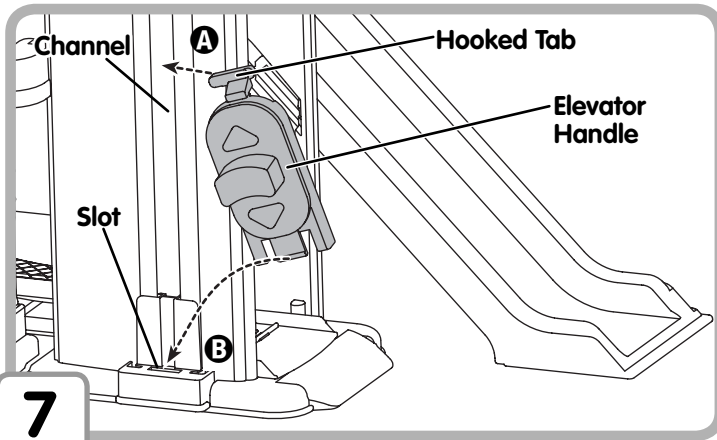


7

- Tip the elevator handle and fit the hooked tab through the channel in the side of the elevator **A**.
- Slide the elevator handle down and "snap" the tab on the handle into the slot in the elevator **B**.

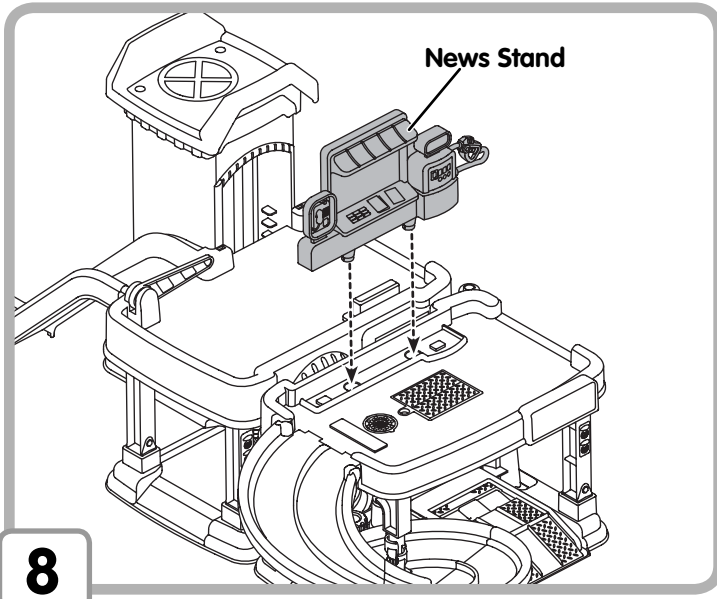

8


- "Snap" the news stand into the top side of the base.

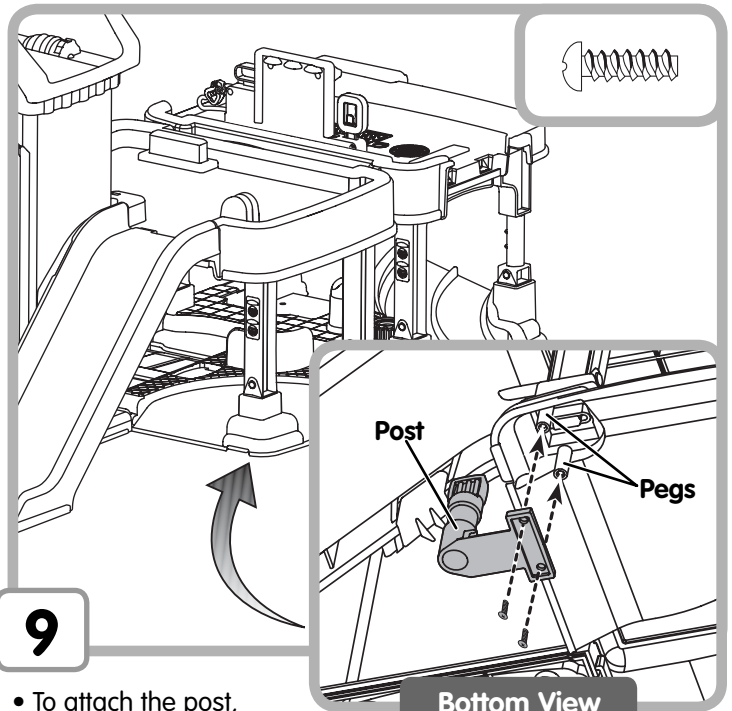

9

- To attach the post, turn the garage over so the bottom is facing you.
- Align the holes in the post with the pegs, as shown.
- Insert two ½" (1,3 cm) screws into the post and tighten.
- Turn the garage upright.


Bottom View

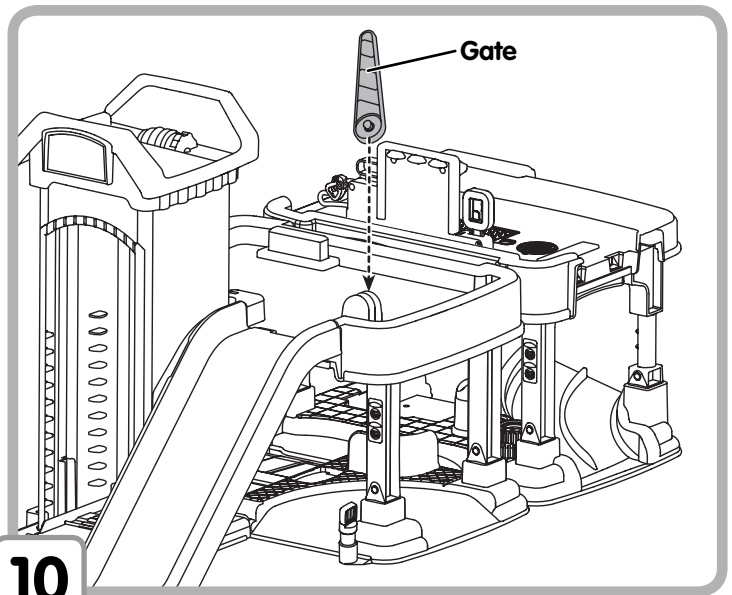


10

- "Snap" the gate into the slots on the top of the garage.

Assembly

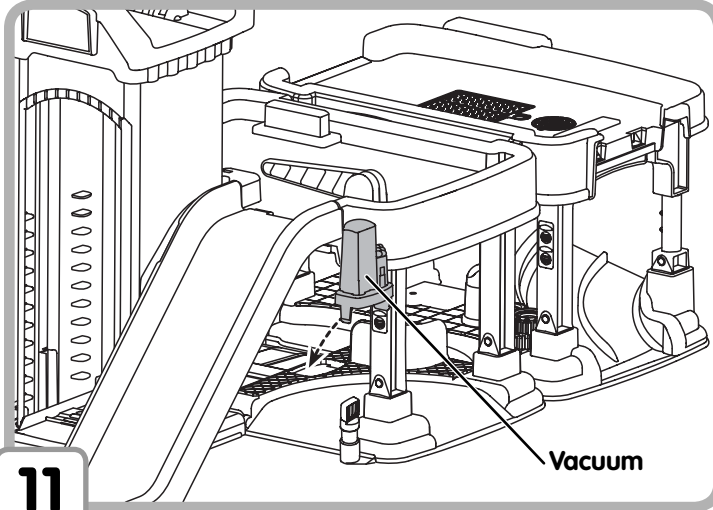


- "Snap" the vacuum into the base.

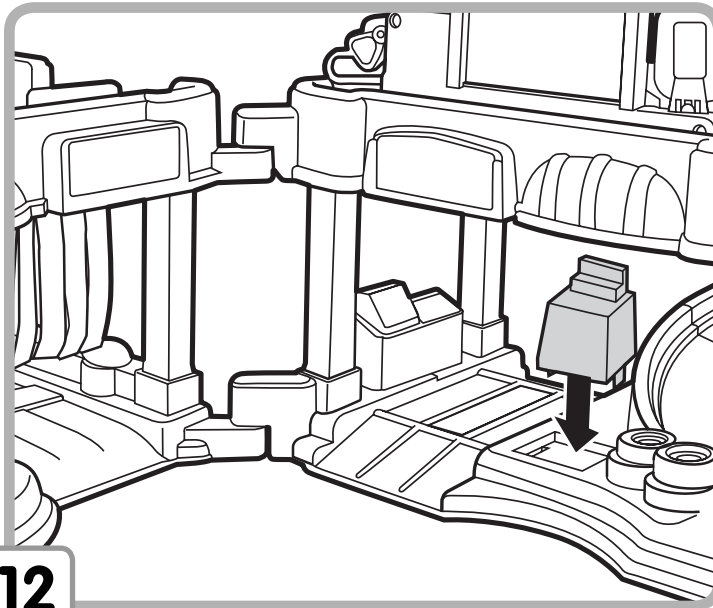

- "Snap" the tool chest into the base.



Before Use

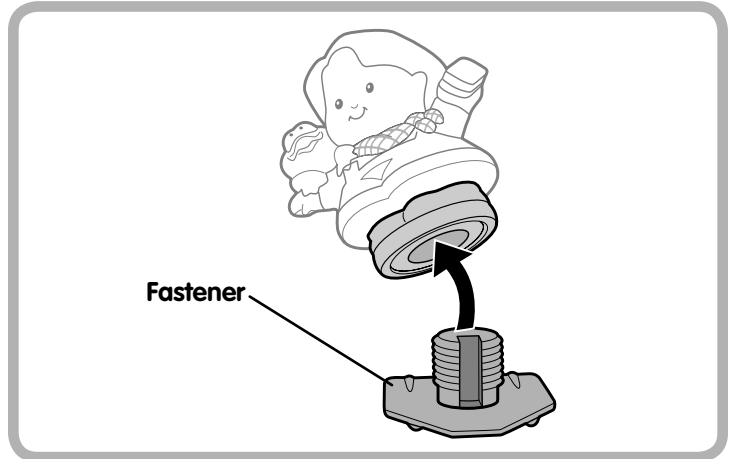

- Fasteners have been added to secure the figures to the package. The fasteners are not a toy. Wiggle and pull the fasteners to remove them. Throw them away immediately.



Decoration

- Before applying labels, wipe the surface of the toy with a clean, dry cloth to remove dust or oils.
- For best results, avoid repositioning a label once it has been applied.
- Apply labels as shown in the illustration.

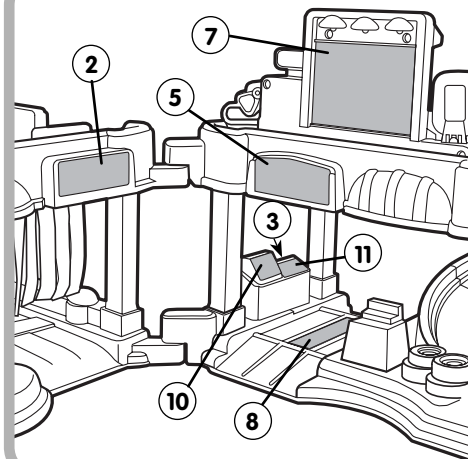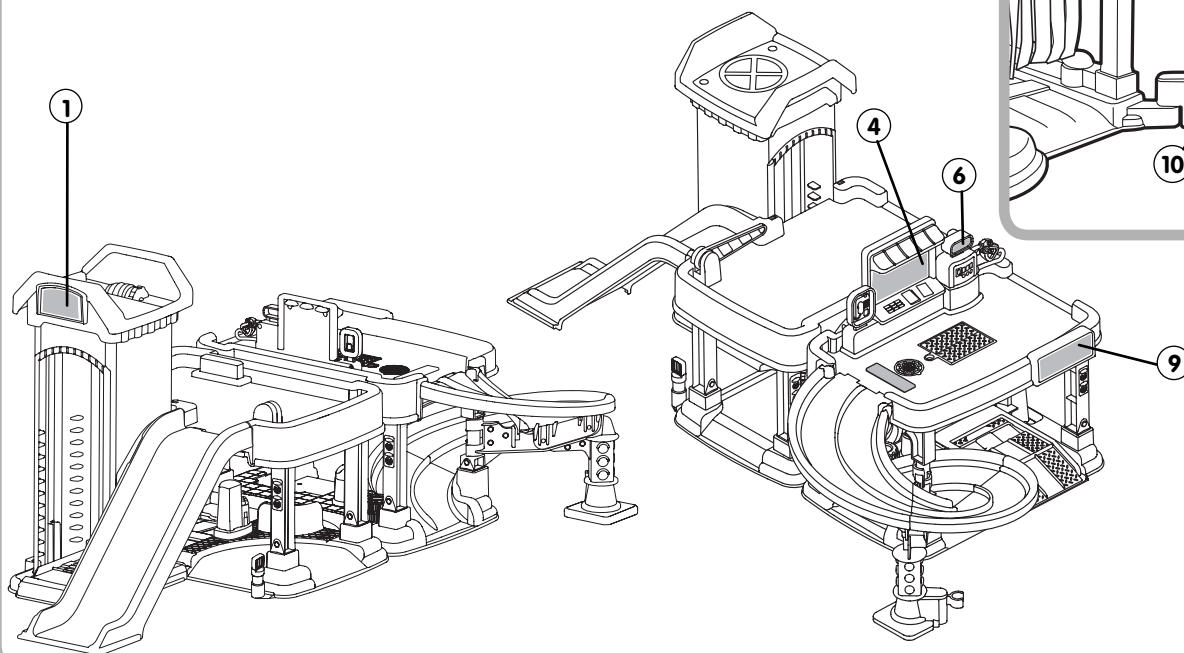

Fun sounds all around the garage!


Press these buttons around the garage to hear many fun sound effects.

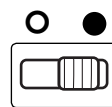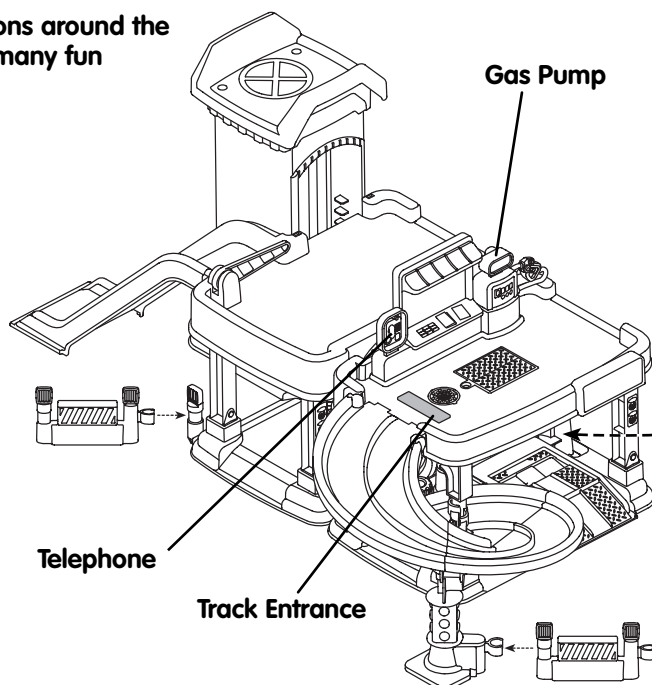


On/Off Switch

- Locate the On/Off switch under the battery compartment.
- Slide the switch to ● to turn the toy on and to the ○ to turn it off.

Battery Installation

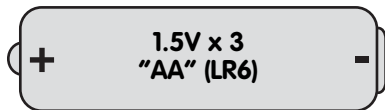

Shown Actual Size

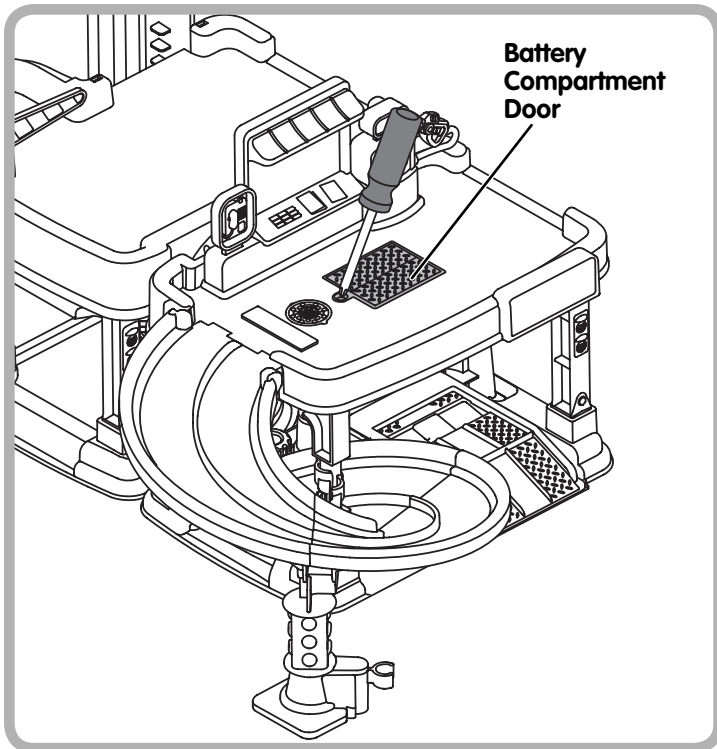

- Locate the battery compartment on the top level of the garage.
- Loosen the screw in the battery compartment door. Remove the battery compartment door.
- Insert three "AA" (LR6) **alkaline** batteries.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screw.
- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Care

- Wipe the toy with a clean cloth dampened with a mild soap and water solution.
- Do not immerse the toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

FCC Statement

United States Only

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Consumer Information

For countries outside the United States:

CANADA: Questions? 1-800-432-5437. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303; www.service.mattel.com/uk

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.