



4+

TROUBLESHOOTING • SOLUCIÓN DE PROBLEMAS DÉPANNAGE • SOLUÇÃO DE PROBLEMAS

Please keep these instructions for future reference as they contain important information.

Guarda estas instrucciones para futura referencia, ya que contienen información importante.

Conserver ce mode d'emploi pour s'y référer en cas de besoin, car il contient des renseignements importants.


Guarde estas instruções para futura referência, pois contém informações importantes.

If the right arm gets stuck during play, pull the arm all the way back to reset.

Si el brazo derecho se atasca durante el juego, títalo completamente hacia atrás.

Si le bras droit reste coincé pendant le jeu, tirer le bras complètement vers l'arrière pour le remettre en place.

Se o braço direito ficar preso durante a brincadeira, puxe o braço totalmente para trás para reiniciar.

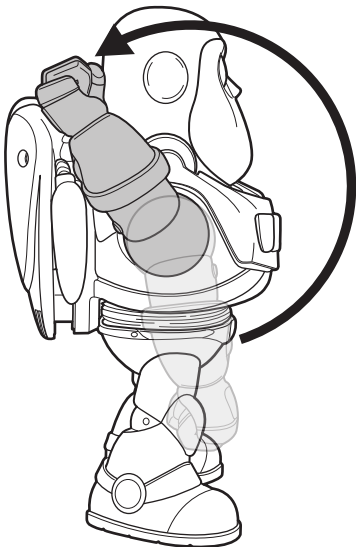

©2024 Mattel. ® and ™ designate U.S. trademarks of Mattel, except as noted. ® et ™ désignent des marques de Mattel aux États-Unis, sauf indication contraire.

JCV90G1-4B70



RECYCLED
Packaging made from
recycled material
FSC® C162170

www.Disney.com

© Disney/Pixar

? service.mattel.com

