

fisher-price®

COLOR INSTRUCTIONS ONLINE



JDL65

4-in-1 Activity Table & Easel

# Before You Begin



Keep these instructions for future reference as they contain important information.

Clean with a damp cloth. Do not immerse.



Adult assembly is required.




20

Plan on about 20 minutes for assembly.



You'll need a Phillips screwdriver (not included) for assembly and battery installation. Do not over-tighten the screws.

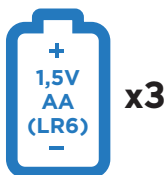

Three AA (LR6) **alkaline** batteries are required (not included).

**Alkaline** batteries make this toy work longer before you need to change them. When sound or lights become faint or stop, it's time for an adult to change the batteries.

# Install Batteries



Locate the battery door on the side of the toy.

Loosen the screw in the battery door and remove the door.

Insert three, new AA (LR6) **alkaline** batteries. Make sure you insert the batteries correctly!

Replace the battery door and tighten the screw.



When sounds or lights from this toy become faint, slow or stop, or if the light slowly blinks red three times, it's time for an adult to change the batteries.

## Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment (+ and -).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

# Assembled Parts

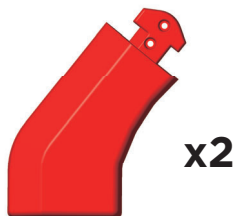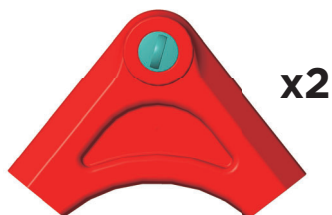

x8  
M4,5 x 16 mm


 **CAUTION:**

This package contains small parts. For adult assembly only.

# Assembly

1

 x2

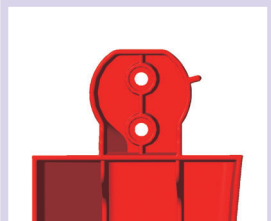


Match the shape of the leg to the shape of the socket.




2

 x2

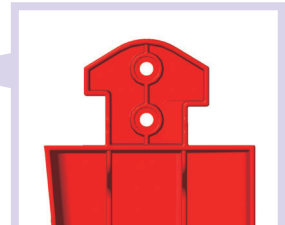

Match the shape of the leg to the shape of the socket.

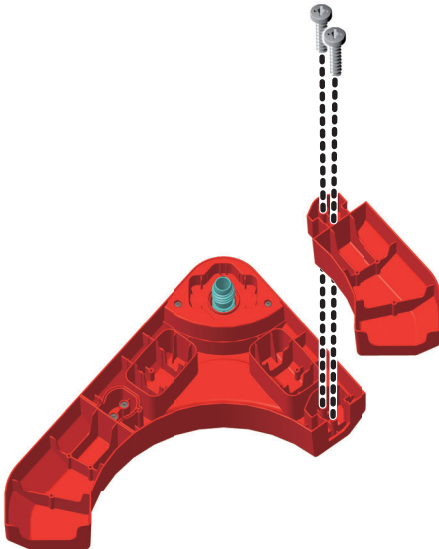


Repeat steps 1 and 2 to assemble the other legs.

# Assembly

3

Push until the part  
"snaps" into place.

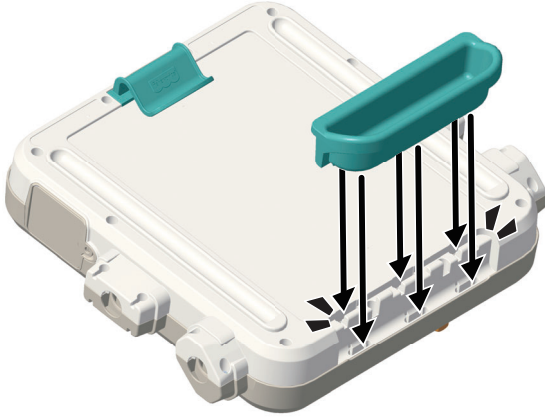

4

Push until the part  
"snaps" into place.

The part is designed to fit one way. If it doesn't seem to fit, turn it around and try again.



# From sitting to standing, all the activities they need!



Tighten to attach



Loosen to remove

Convert into 4 modes of play by removing and attaching the legs in different positions.

Turn the knob clockwise to tighten and attach each leg.

Turn the knob counterclockwise to loosen and remove each leg.

## Activity Side



1 Busy Board



2 Play Table

## Drawing Side



3 Drawing Table



4 Standing Easel

1

## Busy Board




2


## Play Table



### 3 Drawing Table

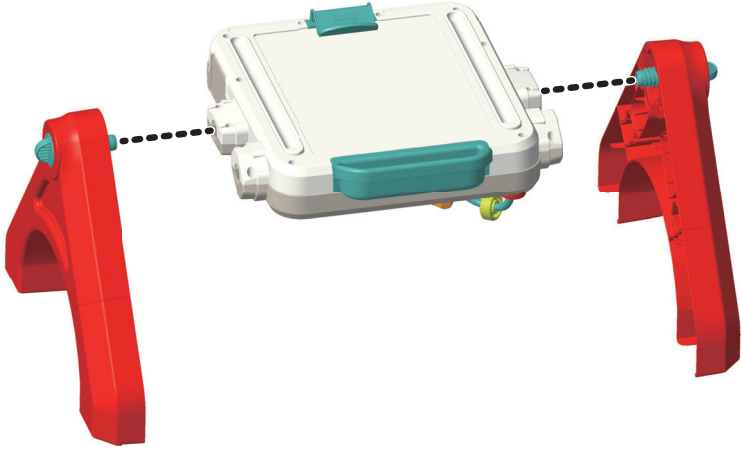

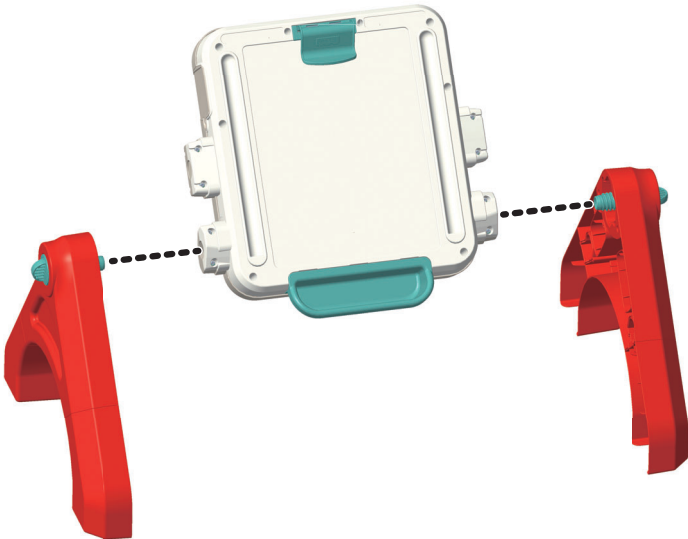


### 4 Standing Easel



# Power-Volume and Mode Switches



Locate the power-volume and mode switches on the activity side.

Slide to turn power ON with low volume , ON with high volume ) or OFF .

You may need to reset the electronics if this toy begins to operate erratically. Slide the power-volume switch off and back on.

- 1 Discover** – Songs & phrases about colors, numbers, letters & shapes encourage sitting babies to play & explore.
- 2 Encourage** – Little artists will hear more about colors and art and be prompted to look for different colors, shapes and letters.
- 3 Imagine** – As kids play, they'll hear silly phrases to enhance their imaginative play and artistic exploration.

## **FCC STATEMENT (UNITED STATES ONLY)**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

---

## **CAN ICES-3 (B)/NMB-3 (B)**

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

---



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.



Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697 and 1-800-432-5437 for Fisher Price products. Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK. Mattel Australia Pty. Ltd., 658 Church St., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312.

16-18 William Pickering Drive, Albany 1331, Auckland. Mattel Barbie (Shanghai). Trading Co., Ltd. Room 2005, 20th Floor, 899 Ruining Road, Xuhui District, Shanghai, 200232, PRC. Customer Care Line: 400-819-8658. Kids Kingdom Limited, Room 1908-9, Gala Place, 56 Dundas Street, Mongkok, Kowloon, Hong Kong, P.R.C. Customer Care Line: (852)2782-0766. CHICKABIDDY CO., LTD, F5, No. 186, Sec. 4, Nanjing E. Rd., Taipei 10595, Taiwan region. Customer Care Line: 0800 001 256. Diimport & Diedarkan Oleh: Mattel Continental Asia Sdn Bhd. Level 19, Tower 3, Avenue 7, No. 8 Jalan Kerinchi, Bangsar South, 59200 Kuala Lumpur, Malaysia. Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.



JDL65-0970  
1103555824-DOM

©2025 Mattel.  
PRINTED IN MEXICO