

fisher-price®

COLOR INSTRUCTIONS ONLINE




Keep this instruction sheet for future reference, as it contains important information.

Requires four AA batteries (included). Batteries included are for demonstration purposes only.

Required tool for battery replacement: Phillips screwdriver (not included). Only adults should replace batteries.

JJX14

 Parts

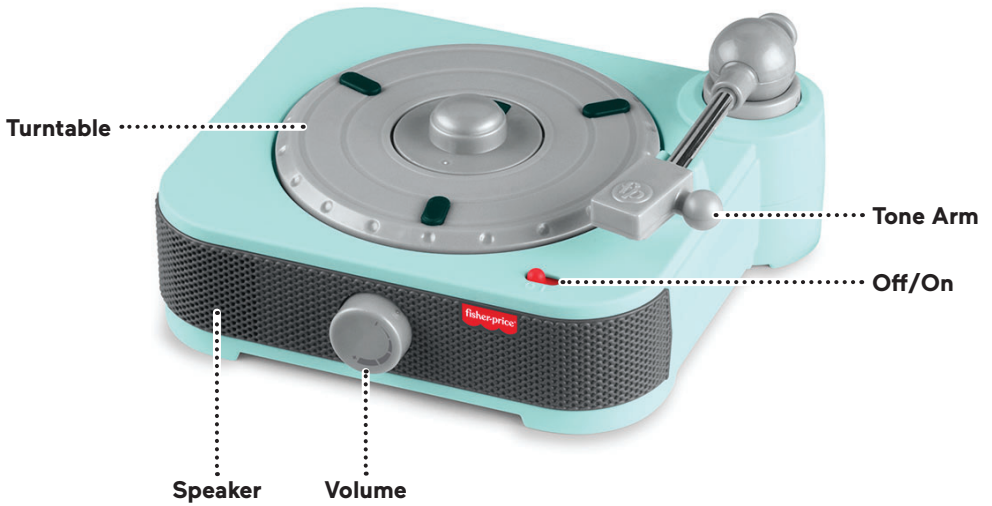



Select a record and remove it from its sleeve.



Place the record on the turntable.

Each record has two tracks per side, as indicated by ① and ② in the image above. Lift the tone arm and place it down onto one of the tracks to begin playing music!



Turn the knob to adjust the volume. There are 6 volume levels.

 
Note: The volume can be turned all the way down to zero. If music should be playing but you don't hear anything, check the volume and turn it up if necessary.




Dance to the beat!

If left unattended, the record player will continue to play music for approximately 3-4 minutes. Then, it will stop, and the record player will enter "sleep" mode. To "wake" the record player, lift the tone arm and place it back down onto the record again.

Batteries and Power



 For longer life, use **alkaline** batteries.

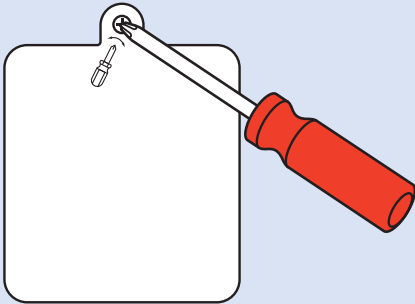

- Locate the battery compartment on the bottom of the record player.
- Loosen the screw in the battery compartment door and remove the door. Remove the exhausted batteries and properly dispose.
- Insert four, new AA (LR6) **alkaline** batteries into the battery compartment.
- Replace the battery compartment door and tighten the screw.
- Slide the power switch to **I** ON or **O** OFF.
- When sounds or motion become faint, slow or stop, it's time for an adult to change the batteries.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power switch off and back on again.

Care

The record player may be wiped with a clean, damp cloth.

Records and sleeves may be wiped with a clean, dry cloth. Do not use water to clean the records as it may damage the label.

Lens

It is important to keep the lens clean. Wipe with a clean, damp cloth.



Records

Take special care to ensure the labels on your records do not become wet or damaged. If damage occurs, the records may no longer function as intended.



Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697 and 1-800-432-5437 for Fisher Price products. Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK. Mattel Australia Pty. Ltd., 658 Church St., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312. 16-18 William Pickering Drive, Albany 1331, Auckland. Mattel Barbie (Shanghai). Trading Co., Ltd. Room 2005,

20th Floor, 899 Ruining Road, Xuhui District, Shanghai, 200232, PRC. Customer Care Line: 400-819-8658. Kids Kingdom Limited, Room 1908-9, Gala Place, 56 Dundas Street, Mongkok, Kowloon, Hong Kong, P.R.C. Customer Care Line: (852)2782-0766. CHICKABIDDY CO., LTD, F5, No. 186, Sec. 4, Nanjing E. Rd., Taipei 10595, Taiwan region. Customer Care Line: 0800 001 256. Diimport & Diedarkan Oleh: Mattel Continental Asia Sdn Bhd. Level 19, Tower 3, Avenue 7, No. 8 Jalan Kerinchi, Bangsar South, 59200 Kuala Lumpur, Malaysia. Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.



©2025 Mattel. ® and ™ designate U.S. trademarks of Mattel, except as noted.

JJX14-0971-1103532926-DOM