

fisher-price®



Stand & Cruise



Sit & Play

Keep this instruction sheet for future reference, as it contains important information.

Adult assembly is required. No tools needed for assembly.

Requires three AA batteries (included) for operation.

Batteries included are for demonstration purposes only.

Tool required for battery replacement: Phillips screwdriver (not included).

To clean, wipe with a damp cloth. Do not Immerse.

HLM43
JMC59
JMF14



 
Where great minds think like kids™

Since 1961, early childhood development experts at the Fisher-Price™ Play Lab have watched and learned from real-life fun experts (aka kids) to help us design toys that help babies learn and grow in the most natural way. From engaging activities to get them sitting up and crawling, to supportive pals that help with first steps and introduce first words, Fisher-Price® infant toys help make reaching those important milestones (and everything in between) so much fun.

Parts




Battery Replacement

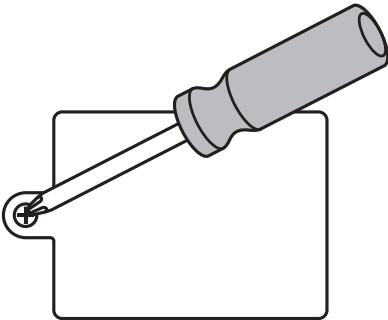

- For longer life, use **alkaline** batteries.
- Locate the battery compartment on the bottom of the toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Remove the exhausted batteries and properly dispose.
- Insert three, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If this toy begins to operate erratically you may need to reset the electronics. Slide the power-volume switch off and back on.
- When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries.

Assembly for Stand & Cruise

 ① Place the table top face down on a flat surface.

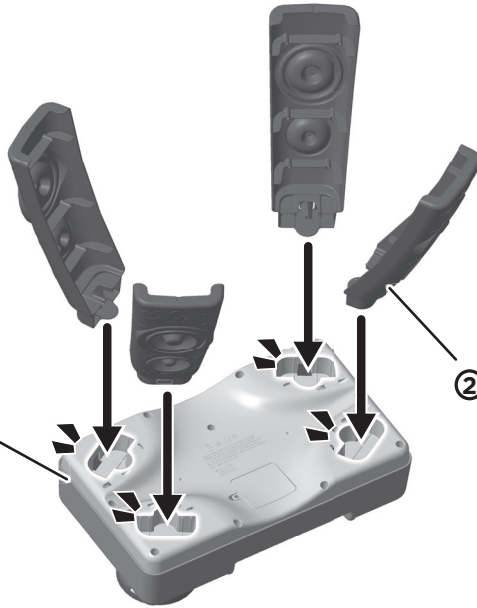

② Insert the legs into the sockets in the table top. Push to "snap" each leg in place.

1



2



 
 
3

Disassembly for Sit & Play






Pull each leg release tab and remove the legs from the table top. Store the legs in a safe place for future use (Stand & Cruise).

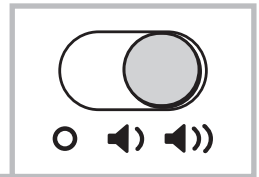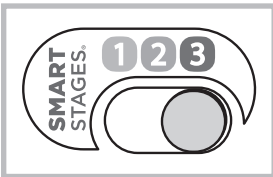Use



- Slide the Smart Stages® mode switch to:
 - 1 Explore** – Fun sounds, songs and music introduce colors, numbers, shapes and the alphabet!
 - 2 Encourage** – Baby enjoys bilingual fun with each press of a key or spin of the record.
 - 3 Pretend** – Realistic sounds and music encourage pretend DJ play.


- Slide the power-volume switch to ON with low volume , ON with high volume  or OFF .




- Slide the slider to choose a music model!

 **Piano Mode** – Press the piano keys for realistic sounds.

 **Party Mode** – Press the piano keys for fun phrases.

 **Synth Mode** – Press the piano keys for synthesizer sounds.

 Get ready! Press the Record & Remix button. When the light turns red, say a phrase up to 3 seconds. Then listen to the phrase in a song remix!



Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.
Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A.
Consumer Services 1-800-524-8697 and 1-800-432-5437 for
Fisher Price products. Mattel U.K. Limited, The Porter Building,
1 Brunel Way, Slough SL1 1FQ, UK. Mattel Australia Pty. Ltd.,
658 Church St., Richmond, Victoria, 3121. Consumer Advisory
Service - 1300 135 312. 16-18 William Pickering Drive, Albany 1331,

Auckland. Mattel Barbie (Shanghai) Trading Co., Ltd. Room 2005, 20th Floor,
899 Ruining Road, Xuhui District, Shanghai, 200232, PRC. Customer Care Line:
400-819-8658. Kids Kingdom Limited, Room 1908-9, Gala Place, 56 Dundas Street,
Mongkok, Kowloon, Hong Kong, P.R.C. Customer Care Line: (852)2782-0766.
CHICKABIDDY CO., LTD, F5, No. 186, Sec. 4, Nanjing E. Rd., Taipei 10595,
Taiwan region. Customer Care Line: 0800 001 256. Diimport & Diedarkan Oleh:
Mattel Continental Asia Sdn Bhd. Level 19, Tower 3, Avenue 7, No. 8 Jalan Kerinchi,
Bangsar South, 59200 Kuala Lumpur, Malaysia. Mattel South Africa (PTY) LTD,
Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

