

## Bounce & Spin Zebra™

Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AAA" batteries (included).

Adult assembly is required.

Tool required for assembly:  
Phillips screwdriver (not included).

This product is intended for use indoors on carpeted surfaces.

For children ages 12-36 months who are able to get on and off unassisted.


Weight limit: 43 lbs. (19.05 kg).





## Parts

### CAUTION

This product contains small parts in its unassembled state. Adult assembly is required. Take extra care during unpacking and assembly.

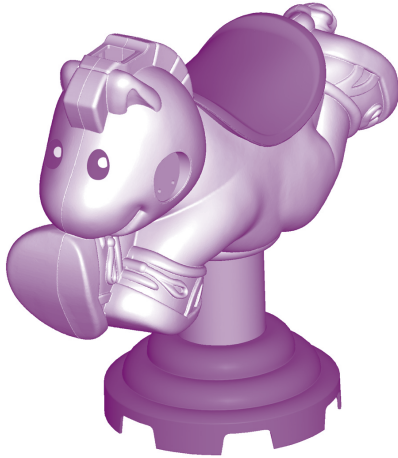


Zebra

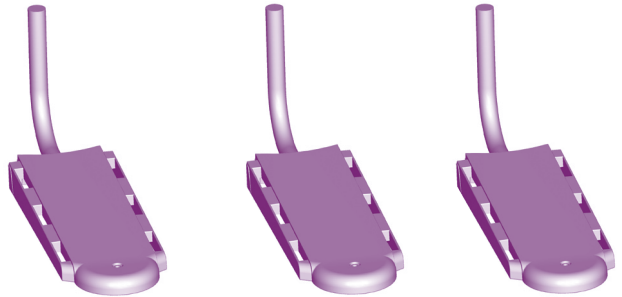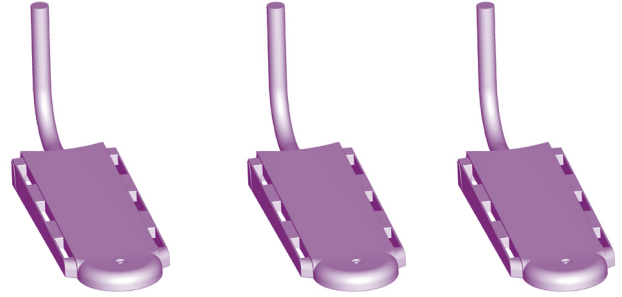

6 Feet



6 Base Pieces

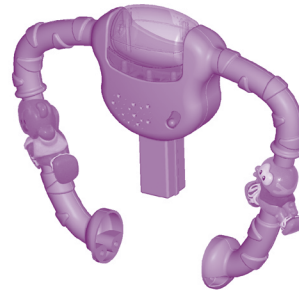

Handlebar



Cap

Shown Actual Size




#8 x 7/8" (2.2 cm) Screw - 8

**Note:** Tighten or loosen all screws with a Phillips screwdriver. Do not over-tighten the screws.


# Assembly

1

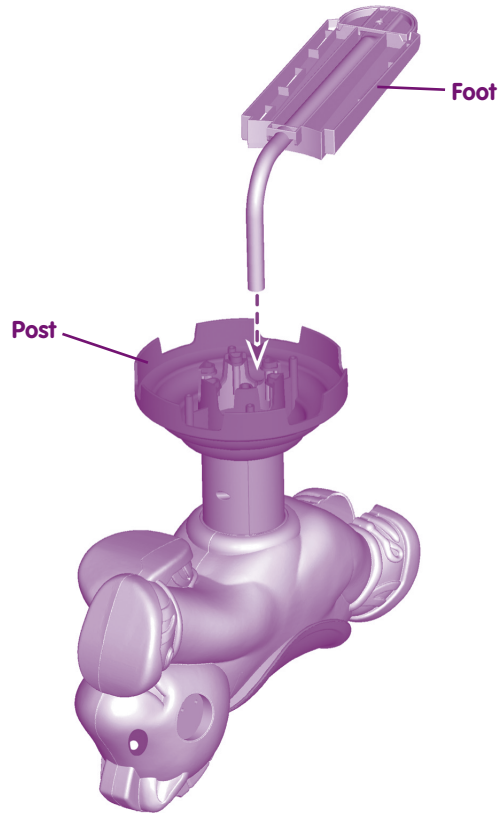


- Position the zebra upside-down.
- Fit the tube end of a foot into one of the holes inside the post.
- Assemble the other five feet into the post.

2

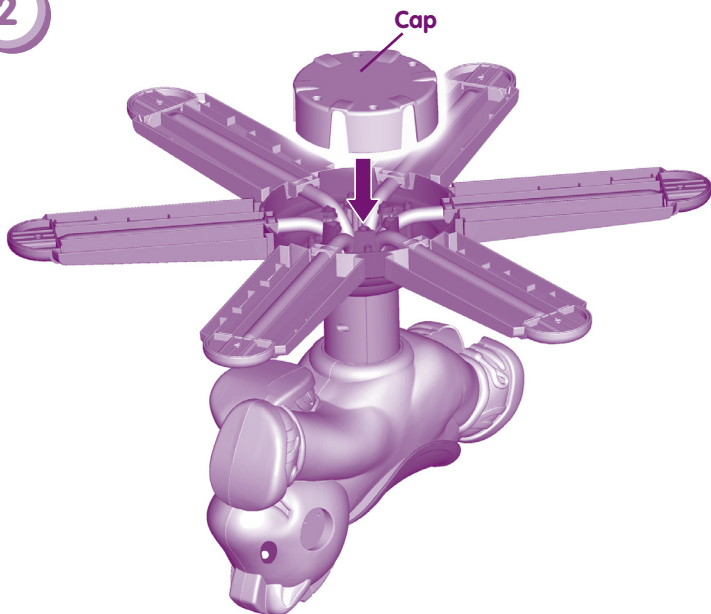


- Fit the cap into the center of the post.

3

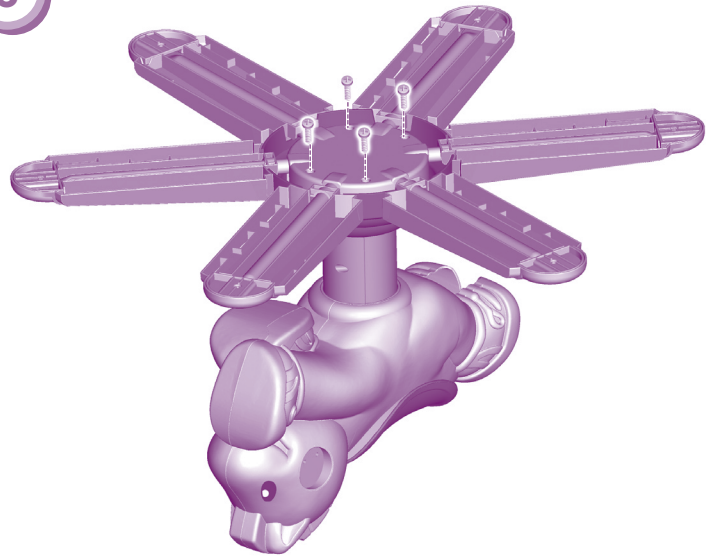

- Insert four screws into the cap and tighten.
- Turn the assembly upright.


4

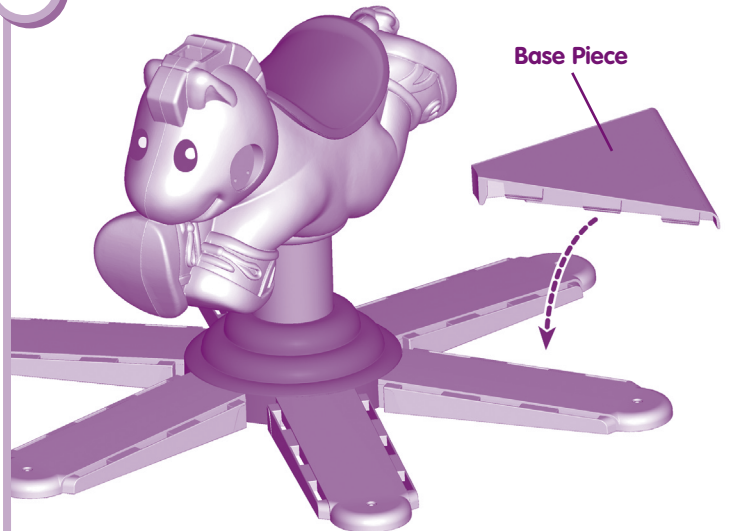

- Fit and **"snap"** each base piece between the spaces in the feet.
- Hint:** The base pieces are designed to be assembled to any of the openings between the feet, and is a one-time assembly.


## Assembly

5

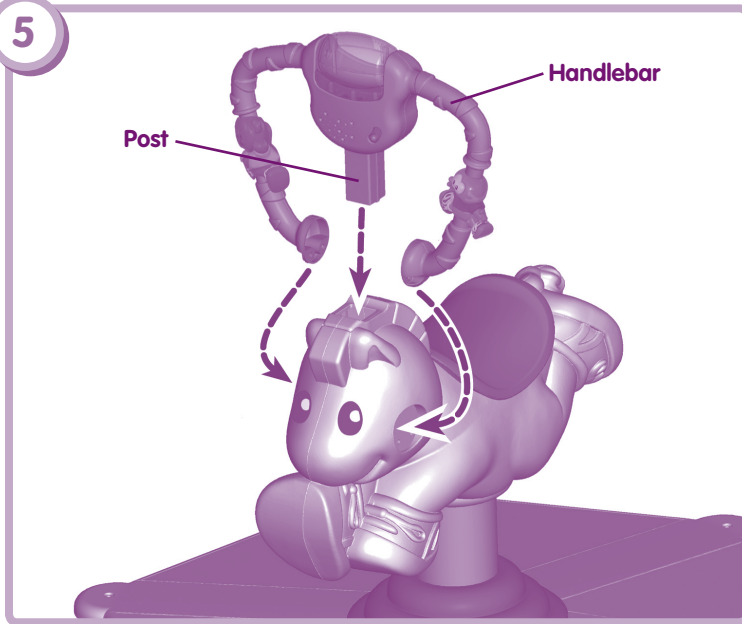

- While sliding the ends of the handlebar into the indents on each side of the zebra's head, fit the post into the slot in the top of the zebra's head.

6

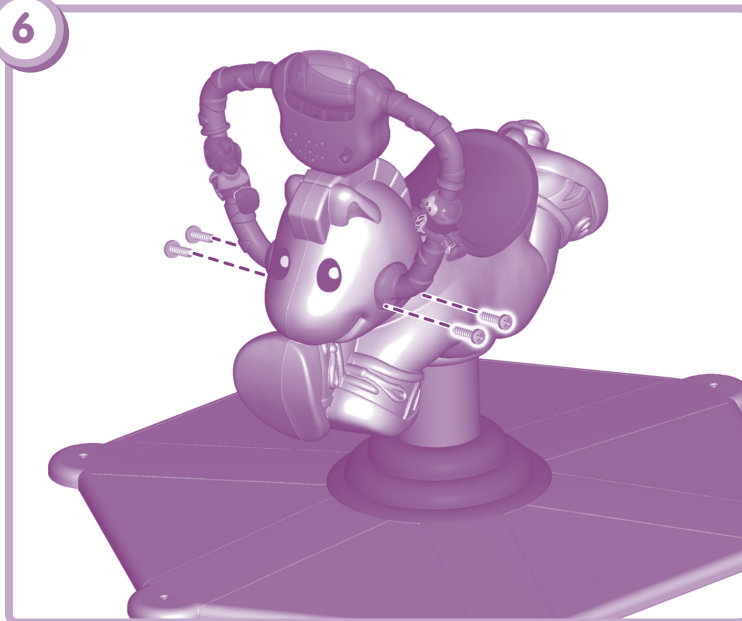

- Insert four screws into the handlebar and tighten.

## Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.
- Check the plastic parts regularly and if broken or cracked, dispose of them properly.

## Consumer Information

Visit us on line at [www.service.fisher-price.com](http://www.service.fisher-price.com).

Call our Consumer Relations Department, toll-free at **1-800-432-5437**, 9 AM - 7 PM EST Monday through Friday and 11 AM - 5 PM EST Saturday.

Hearing-impaired consumers using TTY/TD equipment, please call 1-800-382-7470.

Write to us at: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

For countries outside the United States:

### CANADA

Questions? **1-800-432-5437**. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

### GREAT BRITAIN

[Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB](http://MattelUKLtd.VanwallBusinessPark.MaidenheadSL64UB). Helpline: 01628 500303; [www.service.mattel.com/uk](http://www.service.mattel.com/uk).

### AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

### NEW ZEALAND

 
16-18 William Pickering Drive, Albany 1331, Auckland.

### ASIA


Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

## Battery Replacement

*Hint: For best performance, we recommend replacing the batteries that came with this toy with three, new, alkaline "AAA" (LR03) batteries.*



Shown Actual Size

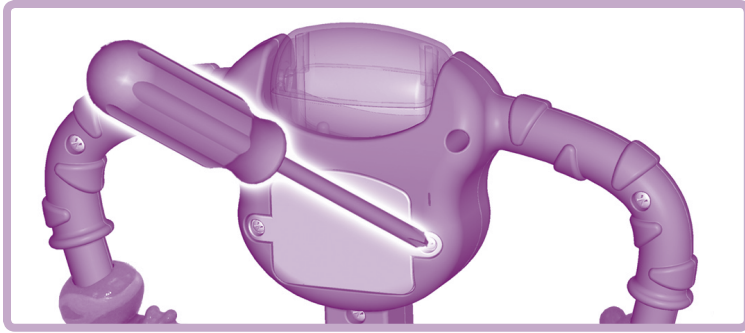

- Locate the battery compartment on the back of the handlebar.
- Loosen the screws in the battery compartment door. Remove the battery compartment door. Remove the batteries and throw them away.
- Insert three "AAA" (LR03) **alkaline** batteries, as indicated inside the battery compartment.

*Hint: We recommend using **alkaline** batteries for longer battery life.*

- Replace the battery compartment door and tighten the screws.
- When lights or sounds from this toy become faint or stop, it's time for an adult to change the batteries!



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

## Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

## FCC Statement

### United States Only

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

# Lively Music, Sounds, Lights and Activities Too!



- Place this toy on a flat surface.
- Slide the power/volume switch to either on with low volume 🔊 or on with high volume 🔊 .
- Bounce and spin while sitting on the seat. Spin the roller on the handlebar for lights and music!
- When you are finished playing, slide the power/volume switch off 🔌 .

