

Fisher-Price®

K4562



Please keep this instruction sheet for future reference,  
as it contains important information.

Adult assembly is required.

Requires three AA (LR6) **alkaline** batteries (not included).

Tool required for battery installation:

Phillips screwdriver (not included).

**fisher-price.com**



## CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)  
1300 135 312 (Australia)

[service.fisher-price.com](http://service.fisher-price.com)

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.  
Hearing-impaired consumers: 1-800-382-7470.

### Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

Great Britain: Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk)

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.

## Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.


## FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**Note:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Battery Installation

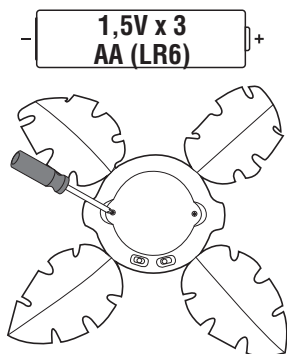


- Locate the battery compartment door on the hub.
- Loosen the screws in the battery compartment door with a Phillips screwdriver and remove the door.
- Insert three AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and back on.
- When sounds or lights become faint or stop, it's time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

## Assembled Parts

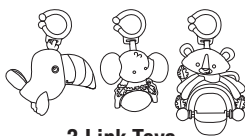


3 Link Toys




Monkey Toy




Mirror Toy

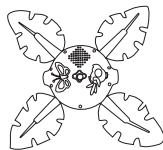


Hub

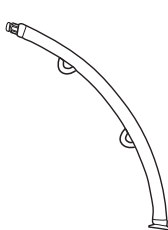


Small Tube

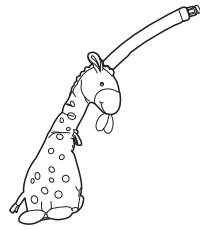

Giraffe Tube

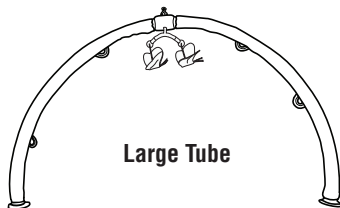


Large Tube

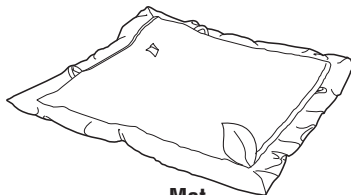


Mat

# Assembly

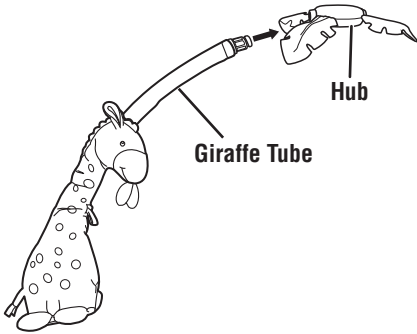


1

- “Snap” the giraffe tube into the hub.

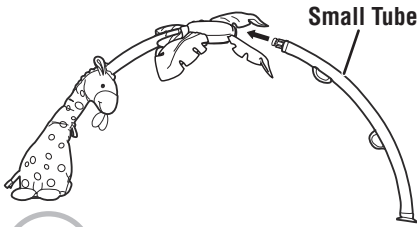


2

- “Snap” the small tube into the giraffe tube assembly.

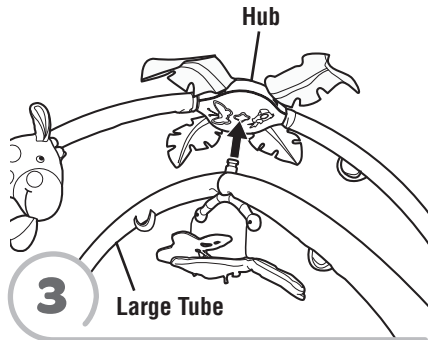

3


- “Snap” the large tube into the hub.

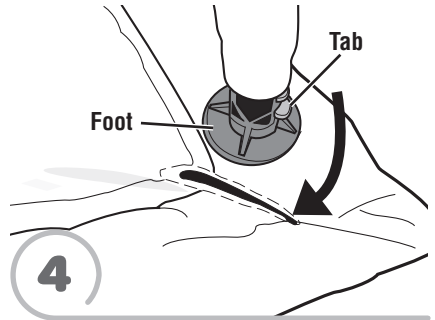

4

- Insert the foot at the bottom of each tube into the slot in each corner of the mat.
- Make sure the mat is fitted below the tab on each tube.

# Music, Lights and Nature Sounds!

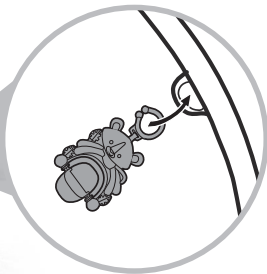


## WARNING

To prevent entanglement injury, never place the gym in a crib or playpen. Never add strings, ties or other products to the gym.



 
Power/Volume Switch

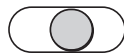


Mode Select Switch

- Hang the link toys from loops or links around the gym.
- Wrap the monkey tail around a loop on the gym.
- Slide the power/volume switch on the hub to ON with low volume (🔊), ON with high volume (🔊), or OFF (🔇).
- Slide the mode select switch on the hub to:
  - 🎵 for music, lights and nature sounds.
  - 🌳 for nature sounds and lights.
  - 👶 for baby-activated music. Lights and music respond to baby's movement.

# Storage and Care

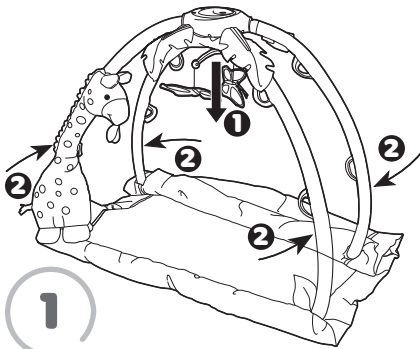

- Pull the butterfly arch down ① and then push the tubes together ②.

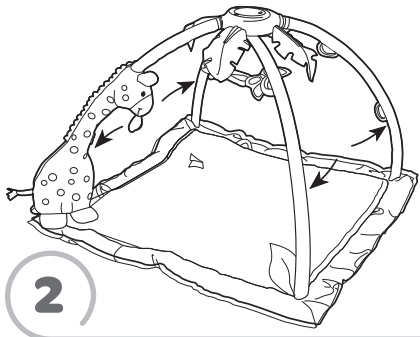

- To set up again, pull the tubes apart.

## Mat

- Remove the tubes and activity toys from the mat.
- Machine wash cold on the gentle cycle. Do not use bleach. Tumble dry on low heat.

## Tubes and Activity Toys

- Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.

## ICES-003

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## NMB-003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.