




## **Assembly Tip**

Please follow these instructions carefully to properly assemble the pedals to the Smart Cycle™.



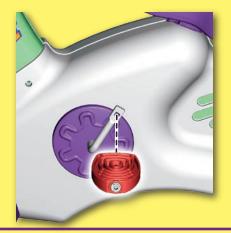





- Locate the left pedal marked with an **L** on the outside end.
- Now, find the left pedal axle marked with an L.
- Fit the threaded end of the left pedal into the hole in the left pedal axle.
- Hand-tighten the left pedal by turning it counter-clockwise.



*Hint:* You will not be able to tighten the pedal if you have tried to attach the right pedal to the left pedal axle. Remove the pedal and be sure you are attaching the left pedal to the left pedal axle. Be sure to match the letter **L** on each part.

· Fit the assembly tool to the end of the left pedal. Turn it








 
- Fit the threaded end of the right pedal (marked with an **R**) into the hole in the right pedal axle (also marked with an **R**).
- Hand-tighten the right pedal by turning it clockwise.
- Fit the assembly tool to the end of the right pedal. Turn it clockwise to fully tighten.


## **Assembly Tip**

Please follow these instructions carefully to properly assemble the handlebar to the Smart Cycle™.


**IMPORTANT!** For proper function, you must connect the connector on the handlebar into the socket in the console!

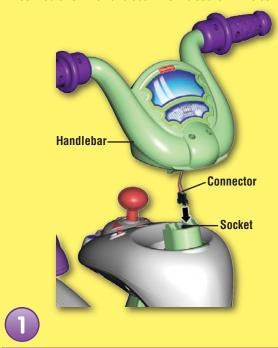




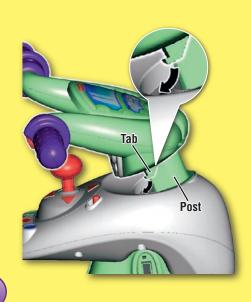

- Place the handlebar, at an angle, onto the top of the post.
- Push to insert the tab on the back of the handlebar into the slot in the console.

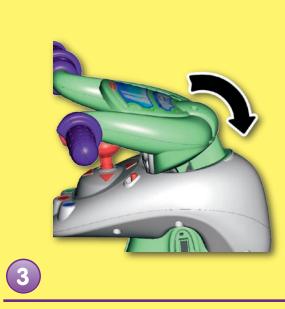

Next, push the handlebar forward and down in place.

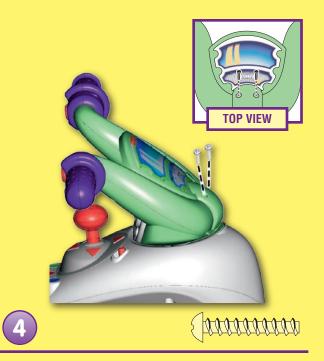

• Insert two #8 x 1" screws into the handlebar and tighten. **Hint:** If the screws cannot be tightened, you have not assembled the handlebar properly. Remove the handlebar and refer back to Assembly steps 2 and 3.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A. ©2008 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

PRINTED IN CHINA K5054a-0921