







## **Assembly Tip**

 Please follow these instructions carefully to properly assemble the pedals to the Smart Cycle™.

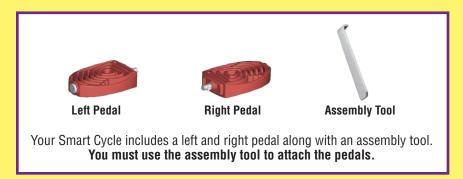


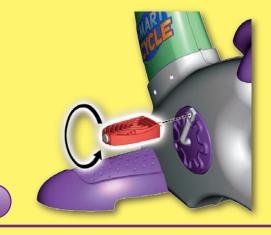

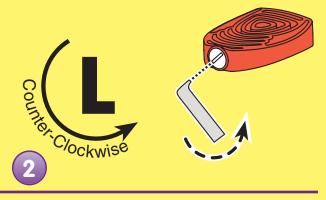



- Fit the threaded end of the left pedal into the hole in the left pedal axle marked with an **L**.
- Hand-tighten the pedal by turning it COUNTER-CLOCKWISE.
- Fit the end of the assembly tool to the groove in the end of the pedal.
- Turn the assembly tool **COUNTER-CLOCKWISE** to **fully** tighten the pedal.

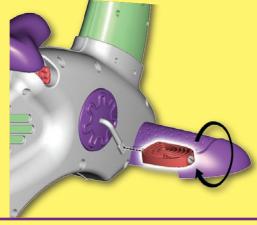

4




- Fit the threaded end of the right pedal (marked with an **R**) into the hole in the right pedal axle (also marked with an **R**).
- Hand-tighten the pedal by turning it CLOCKWISE.

- Fit the end of the assembly tool to the groove in the end of the pedal.
- Turn the assembly tool CLOCKWISE to fully tighten the pedal.

## **Assembly Tip**

Please follow these instructions carefully to properly assemble the handlebar to the Smart Cycle™.

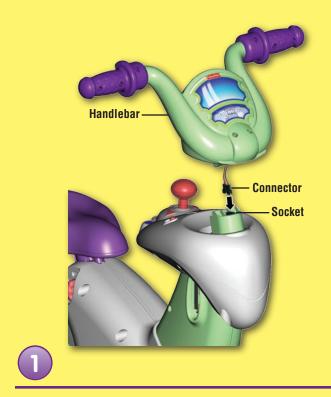




- Plug the handlebar connector into the socket in the console.
- **Hint:** The connector will only fit one way into the socket. If it does not seem to fit, turn it around and try again!
- Place the handlebar, at an angle, onto the top of the post.
- Push to insert the tab on the back of the handlebar into the slot in the console.



 Next, push the handlebar forward and down to "snap" it in place. Make sure you hear a "snap". This may take a lot of force.

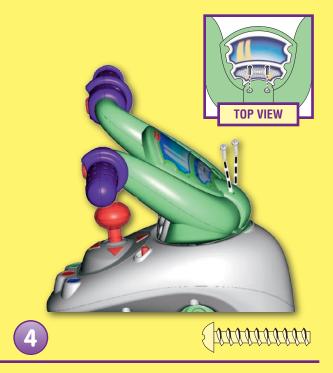

• Insert two #8 x 1" screws into the handlebar and tighten. **Hint:** If the screws cannot be tightened, you have not assembled the handlebar properly. Remove the handlebar and refer back to Assembly steps 2 and 3.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A. ©2007 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

PRINTED IN CHINA K5054pr-0921