

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
Mattel Inc. 333 Continental Blvd. El Segundo, CA (310) 252-2400
NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Fisher-Price, Inc., a subsidiary of Mattel, Inc.,
East Aurora, NY 14052 U.S.A.
PRINTED IN CHINA.
Manufactured for Fisher-Price.
©2007 Mattel, Inc. All Rights Reserved.
Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc.
Packaging and address should be retained for future reference:
Mattel Canada Inc., Mississauga, Ontario L5R 3W2.
You may call us free at 1-888-892-6123.
Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB.
Helpline 01628500303.
Mattel Australia Pty., Ltd., Richmond, Victoria. 3121.
Consumer Advisory Service - 1300 135 312.
Mattel East Asia Ltd., Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.
Dimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P)
Lot 13.5, 13th Floor, Menara Lien Hoe,
Persiaran Tropicana Golf Country Resort, 47410 PJ.
Tel:03-78803817, Fax:03-78803867.
Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A.



K8751 / M1754

IMPORTANT!
If you continue to experience trouble programming your Knows Your Name doll, **DO NOT RETURN THE PRODUCT TO THE STORE.** We're just a phone call away. Call our consumer affairs hotline toll free at 1-888-892-6123.

CONSUMER ASSISTANCE
Call toll free: 1-888-892-6123 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Grand Avenue, East Aurora, New York 14052.
Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.


Baby's First Knows Your Name™

INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.

BEFORE YOU BEGIN

Remove and discard the "Try Me" pull-tab found on the back of the teddy, next to the battery compartment and USB port. Once the "Try Me" pull-tab is removed, the toy will perform its full play pattern as described below.

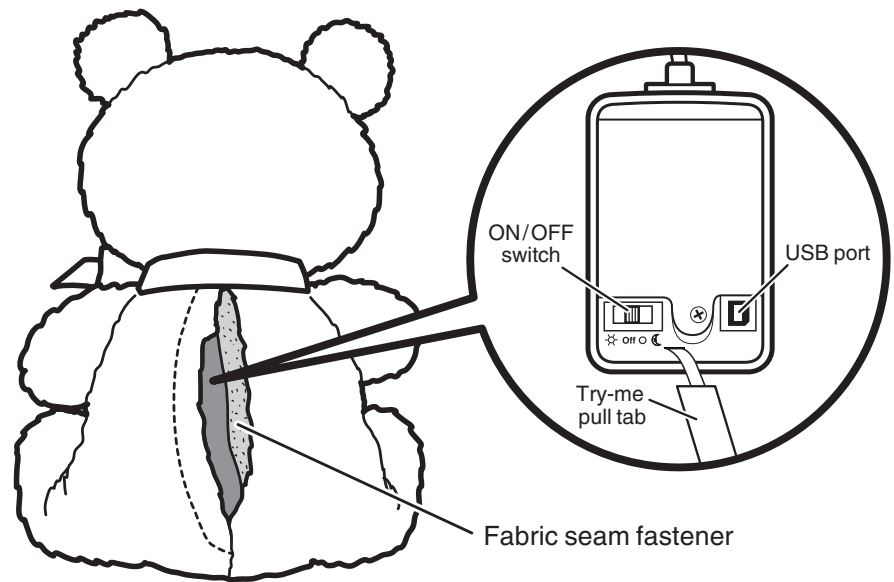

NOTES TO CONSUMER

Under certain conditions, the toy can malfunction and lose memory due to static electricity. If this occurs, reprogram the toy by re-attaching your USB cable and performing another download.

ID: K8751-0920 / M1754-0920

REAR

FRONT

HOW TO PERSONALIZE YOUR TEDDY

1. Connect the teddy to your computer using a standard USB A to USB B cable, such as those used with most printers (not included).

2. Go to www.fisher-price.com/us/knowsyourname and follow the instructions.

3. Click "PERSONALIZE" to download your child's name to the teddy.



You can change your names and settings at any time by reconnecting the toy to your computer, going back to the website, and performing another download.

Now you are ready to play!

MINIMUM SYSTEM REQUIREMENTS:

USB – Version 1.1 or higher / Hard drive space – 50 MB available
Memory – 128 MB, 256 MB recommended
CPU – 350 Mhz, 800 Mhz recommended
Video Resolution – 800x600, 1024x768 recommended
Video Color Depth – 256 colors or higher
Operating System – Windows 2000, XP or higher
Browsers:
• Microsoft Internet Explorer 6.0 or higher
• Netscape 8 or higher
• Mozilla Firefox 1.0 or higher
• Opera 9.0 or higher
Adobe Flash Player 8 or above / User input – keyboard & mouse
Internet – High speed connection recommended

NOTE: Installation time will vary depending on the computer used, but may require up to 15 minutes.

HOW TO PLAY

Slide the DAY / OFF / NIGHT switch found next to the battery compartment and USB port to the desired position.

Day Mode ☀

- Slide the switch to the DAY position.
- Press teddy's tummy to activate the personalized phrases, rhymes, and songs.


Night Mode ☾

- Slide the switch to the NIGHT position.
- Press teddy's tummy to activate 10 minutes of uninterrupted music.
- Press teddy's tummy again if you want to stop the music.
- After 10 minutes of uninterrupted music, the music stops. Press teddy's tummy to start again.

At any time you can slide the switch to the OFF position to de-activate the tummy switch entirely.

BATTERY INSTALLATION:

Open up fabric fastener seam in back of body to expose battery compartment. Unscrew and lift cover away. Replace batteries as shown. Batteries included are for demonstration purposes only. For longer life use only alkaline batteries. Requires 3 "AA" (LR6) batteries.

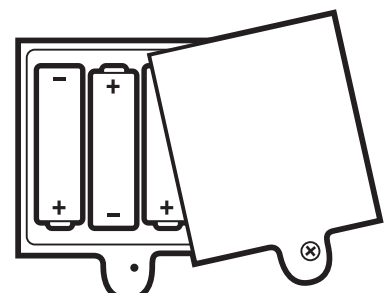

BATTERY SAFETY INFORMATION

- In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:
- Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are to be removed from the toy before being charged (if designed to be removable).
 - Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Do not mix old and new batteries.
 - Only batteries of the same or equivalent type as recommended are to be used.
 - Batteries are to be inserted with the correct polarity.
 - Exhausted batteries are to be removed from the toy.
 - The supply terminals are not to be short-circuited.
 - Dispose of battery(ies) safely.
 - Do not dispose of this toy in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

INSIDE (LEFT)

FRONT (RIGHT)

Item : K8751-0920 / M1754-0920
Version : English
Size : 297 x 210 mm
Paper : Woodfree Paper 80 gsm
Color : Black