



Figures sold separately and subject to availability.

Model Number: K9700

Please keep this instruction sheet for future reference,
as it contains important information.

Adult assembly is required.


Tool required for battery installation:

Phillips screwdriver (not included).


Requires three "AA" (LR6) **alkaline** batteries (not included).



PARTS

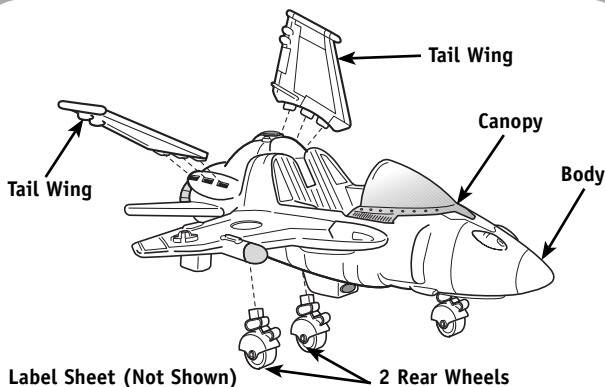


ASSEMBLY

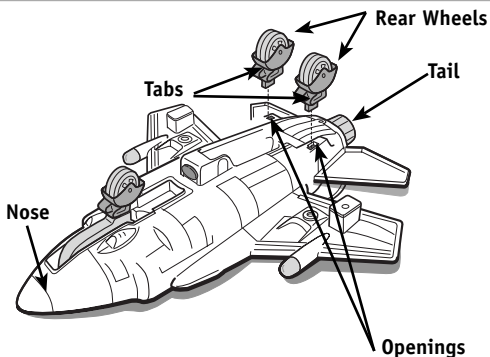


- Turn the jet upside-down, and place it on a flat surface.
- Position the rear wheels so that the tabs are toward the nose of the jet.
- Insert and **"snap"** the plug on the rear wheels into the openings near the tail of the jet.

ASSEMBLY

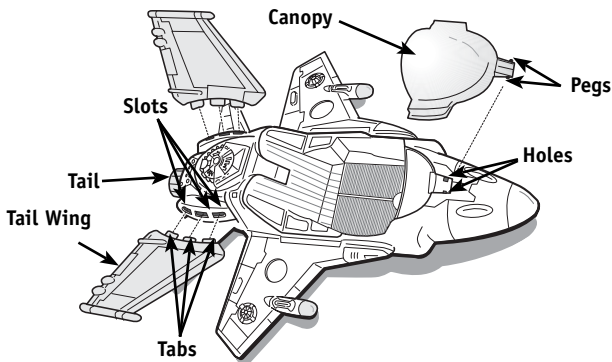

- Position the jet upright.
- Insert and "**snap**" the tail wing tabs into the slots in the tail of the jet.
- Insert and "**snap**" the pegs on the canopy into the holes in the cockpit.

DECORATION

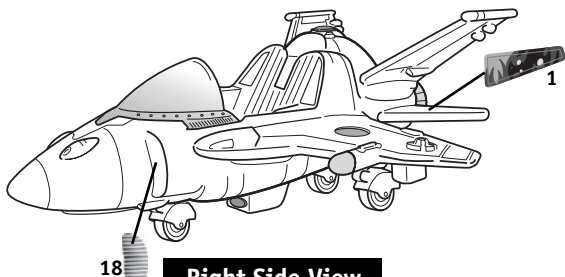


Right Side View


Proper label application will help keep labels looking their best!
When applying labels, keep the following guidelines in mind:

- Wash hands before applying labels.
- Before applying labels, wipe the surface of the toy with a clean, dry cloth to remove dust or oils.
- For best results, avoid repositioning a label once it has been applied.


DECORATION

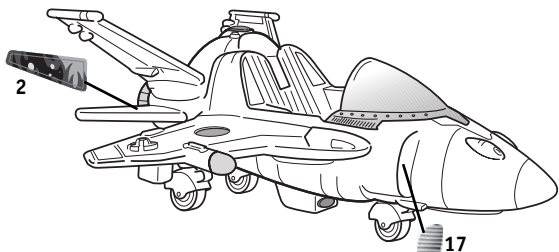

Left Side View

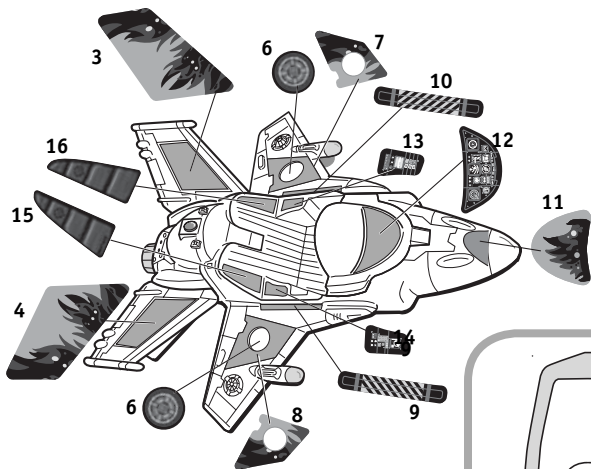


Top View

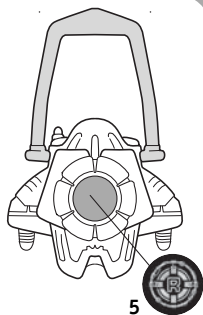

Rescue Pack

BATTERY INSTALLATION

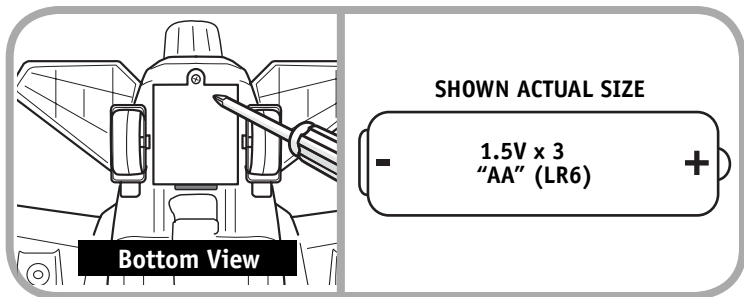

- Locate the battery compartment door with a Phillips screwdriver and remove the battery compartment door.
- Insert three "AA" (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When lights or sounds from this toy become faint or stop, it's time for an adult to change the batteries!

Hint: We recommend using **alkaline** batteries for longer battery life.




- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:


- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated on the backpack.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy (product). Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy (product) before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

TO THE RESCUE

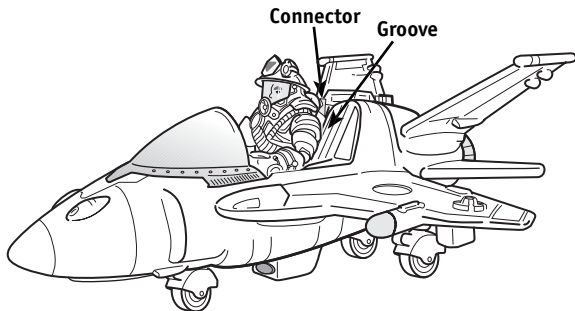

Rescue Heroes® figures sold separately.



- Remove the backpack from your figure (sold separately).
- Slide the connector on the back of the figure into the groove in the seat back in the jet cockpit.

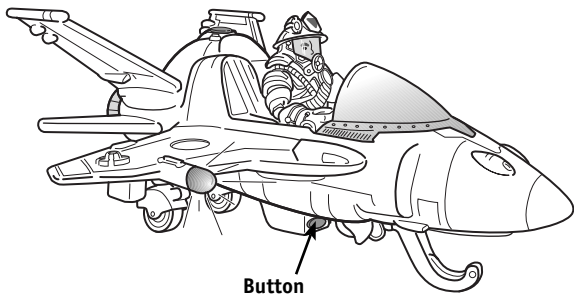

- Press the button near the handle for jet engine sounds and lights!

TO THE RESCUE


Rescue Heroes® figures sold separately.

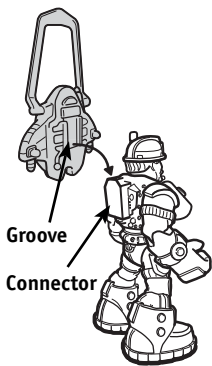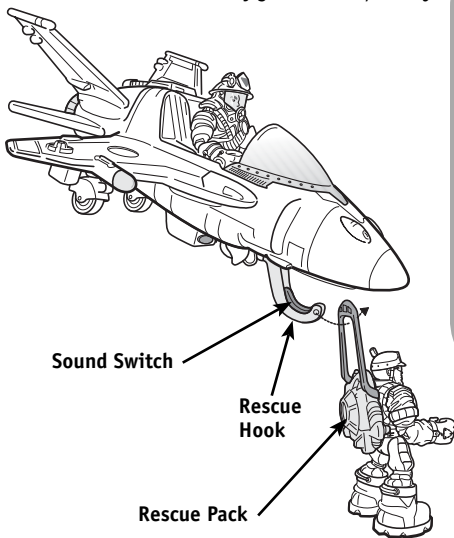

- Fit the rescue pack onto the back of the figure.
- Lower the rescue hook to start sounds and lights.
- Lift the figure using the rescue hook for sound and lights!

Hint: There is a sound switch on the rescue hook!

STORAGE

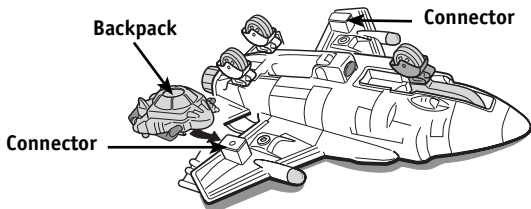

- Fit the back pack to the connector on the underside of either wing.

CARE

- Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.

CONSUMER INFORMATION

Visit us on line at www.service.fisher-price.com

Call our Consumer Relations Department, toll-free at **1-800-432-5437**, 9 AM - 7 PM EST Monday through Friday and 11 AM - 5 PM EST Saturday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Write to us at: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

FCC STATEMENT

(United States Only) This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

For countries outside the United States:

CANADA: Questions? 1-800-432-5437. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.

Helpline: 01628 500303; www.service.mattel.com/uk

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2006 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.