

Fisher-Price

L1774
L5504

SMART CYCLE™

PHYSICAL LEARNING ARCADE SYSTEM

 
Hot Wheels



CYCLE CONTROLS

Handlebar

Use for steering on the road or in games.

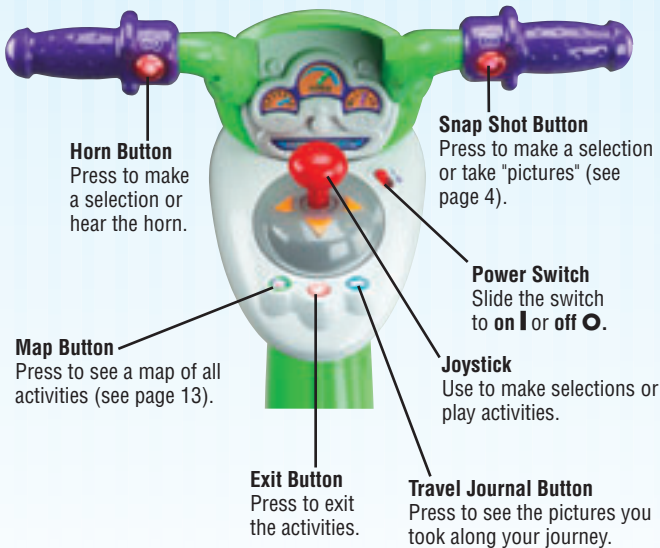

GETTING STARTED



- Please keep these instructions for future reference, as they contain important information.
- Insert the game cartridge into the socket in the side of the cycle. Push to be sure it's fully inserted.
- Turn your TV or VCR power **on**.
- Slide the power switch on the cycle to **on I**.
- To find the picture on your TV screen, set your TV's or VCR's mode selector to INPUT or VIDEO IN.



GARAGE



- Use the joystick to choose the type of car you'd like to drive.
- Press either handlebar button to make your selection.
- Repeat this process to choose the color, look and sound of your car.



BACK TO THE ROAD



Find the objects!

- Pedal the cycle to move down the road.
The faster you pedal the faster you go!
- Use the handlebar to steer.
- Collect all the objects shown in the upper left of the screen. Simply drive into them. Don't bump into the other objects.



Taking Snap Shots

- Press the right handlebar button to take snap shots in any activity.

MATH SMASH DERBY



Off Ramps

- Keep traveling down the road and go all the way around the road or head onto an off-ramp for other fun games and activities. Simply bear to the side of the road as you see one approaching.


Hint: If you miss your ramp, you can pedal in reverse to back up.



Time

 
Score

Ram into other cars to collect points.

- Use the joystick to drive your car.
- Crash into other cars to collect points.
- Collect enough points before time runs out to move to the next round.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



FOUR ON THE FLOOR

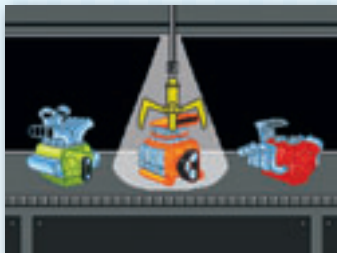


Pedal to match the right speed to test out your engine.

- Use the joystick and handlebar buttons to choose the engine you'd like to test out.



 
Tach

Target Number

- Pedal to “rev” the engine. As you pedal faster or slower, the needle on the tach moves up and down.
- Try to match the target number. For example, “rev” the engine to 80!
- Be careful so that you don’t “rev” the engine to the red zone or you’ll overheat.
- When you’re finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



FREEWAY FRENZY

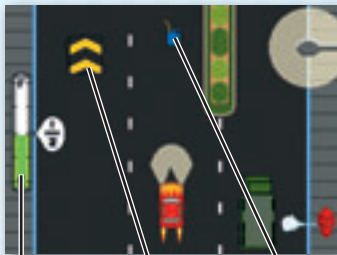

Gas Gauge

Turbo Arrow


Gas Can

Drive down the road without crashing or running out of gas.

- Pedal to drive down the road. Use the joystick to move your car to the left or right.
- Drive down the road as fast as you can without running into other cars or obstacles. Running into other cars or obstacles slows you down.
- Drive over ramps or turbo arrows for extra fun.
- Your gas gauge is on the left side of the screen. When you are running low on gas, be sure to drive over the gas cans to refill your tank.

- If you run out of gas you'll come to a stop and the game ends.



- Cross the finish line and your time is displayed on screen.
- Move to the next level where there are more obstacles and more traffic to drive through.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



DISASTER ALLEY




Number of Moves

Fix the mixed-up road using the fewest moves.

- Use your joystick to move the crane. Press a handlebar button to pick up and drop road pieces.
- Move wrong pieces or fill in the missing road pieces to complete the road. The fewer the moves the better!
- Choose extra road pieces from the bottom of the screen.

Hint: Sometimes you'll need to build the road around obstacles like rubble or a fire.



- Complete the road so that traffic can resume. Move on to the next round where the road is tougher to rebuild.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



NUMBER JUMP




Cars

How many vehicles can you jump?

- Move the joystick to choose the number of cars to jump. Then, press a handlebar button to make your selection.



- Pedal as fast as you can. The faster you pedal, the farther you jump.
- If you don't pedal fast enough, you'll crash.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



THE BIG RACE



***Pedal as fast as you can
to the finish line!***

- Use the joystick to choose 1 Player or 2 Player game. Press either handlebar button to select the game.



1 Player


- Pedal down the road as fast as you can to the finish line. Try to speed past the other cars. Get to the finish line first and you win!




BONUS ACTIVITY



2 Player

- Each player takes a turn. Pedal down the road as fast as you can to the finish line. Look at your time.
- Now it's time for Player 2 to beat your time.
- The player with the fastest time *wins*.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



- To visit here, you need to visit all of the activities around the road first.
- Watch the cars parade through victory lane.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.




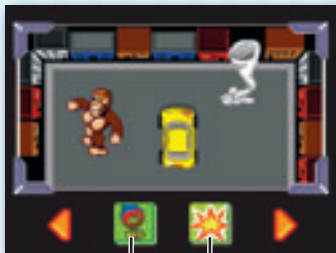 
TRAVEL JOURNAL





See previous
snap shot

See next
snap shot

- Press the travel journal button . Then use the joystick and handlebar buttons to review and select a snap shot.

 



Stamp Tool Erase

- Next, use the joystick and handlebar buttons to select the stamp tool to decorate your picture.
- Choose a stamp with the joystick and handlebar buttons and place it on the snap shot .
- Select the erase button  to clear the screen and decorate another picture.



THE MAP

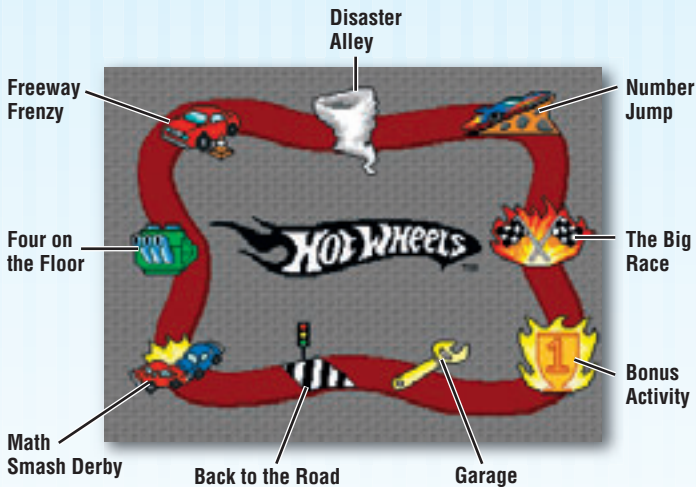

- You can travel down the road and head onto an off-ramp to access activities or simply press the map button  to visit any of the activities around the course.

CARE

- Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.
- This product has no consumer serviceable parts. Do not take this product apart.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

CONSUMER INFORMATION

VISIT US ON LINE AT
WWW.SERVICE.FISHER-PRICE.COM

Call our Consumer Relations Department, toll-free at **1-800-432-5437**, 9 AM - 7 PM EST Monday through Friday and 11 AM - 5 PM EST Saturday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Write to us at: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.
Helpline: 01628 500303. www.service.mattel.com/uk

For countries outside the United States:

CANADA: Questions? 1-800-432-5437. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2007 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

Stretch your mind with other software titles for your Smart Cycle™!

Each sold separately and subject to availability.



©2007 Viacom International, Inc. All Rights Reserved. Dora the Explorer, Go Diego Go, SpongeBob SquarePants and all related titles, logos and characters are trademarks of Viacom International, Inc. SpongeBob SquarePants created by Stephen Hillenburg.

www.fisher-price.com

PRINTED IN CHINA

L1774pr-0920