



LITTLE CHEF REMY INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.


CONTENTS:



Requires 4 "AA" (LR6) alkaline batteries (not included). Batteries included are for demonstration purposes only.

BATTERY INSTALLATION

BOTTOM VIEW

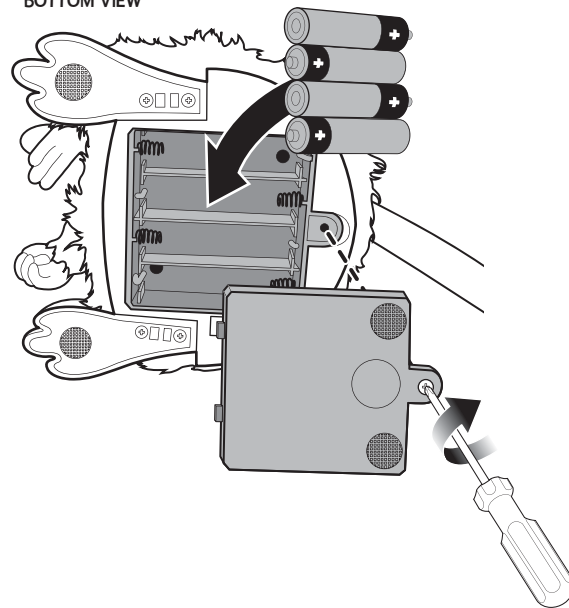

- Unscrew the battery cover with a Phillips-head screwdriver (not included).
- Remove batteries included for demonstration purposes only and dispose of them safely.
- Insert 4 new "AA" (LR6) alkaline batteries (not included) in the orientation shown.
- Replace the battery cover and tighten screw.
- For best performance, use only alkaline batteries.
- Replace batteries if sound is distorted, movement slows, or product does not function properly.

BATTERY SAFETY INFORMATION

- In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:
- Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
 - Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Do not mix old and new batteries.
 - Only batteries of the same or equivalent type as recommended are to be used.
 - Batteries are to be inserted with the correct polarity.
 - Exhausted batteries are to be removed from the product.
 - The supply terminals are not to be short-circuited.
 - Dispose of battery(ies) safely.
 - Do not dispose of this product in a fire. The batteries inside may explode or leak.




Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

TO PLAY:

Move the switch to (I) ON to hear Remy speak.
Press the top of his nose to begin your cooking session.



Wave items underneath Remy's nose as shown to hear his cooking tips and start your recipe. (Cheese not included, shown for demonstration purposes only.)

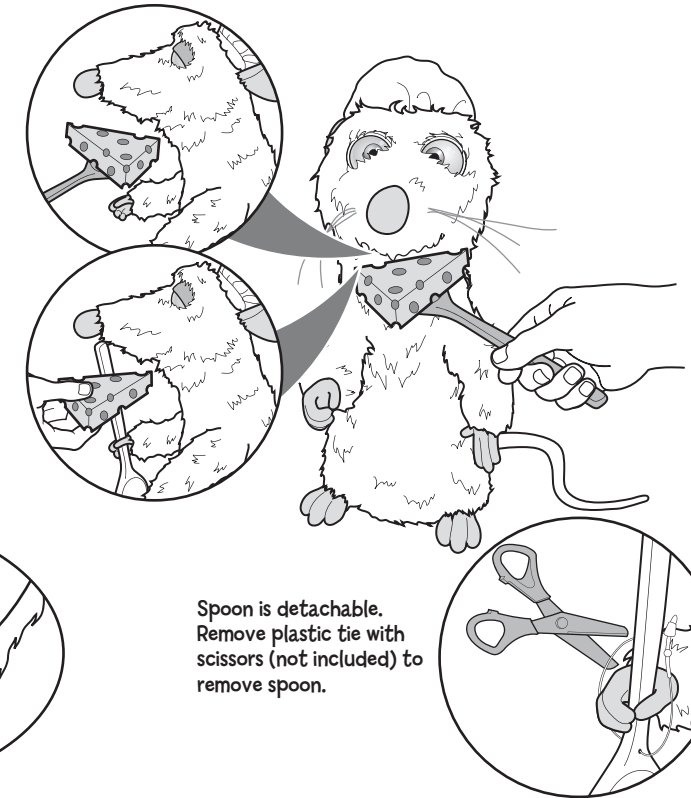

Spoon is detachable. Remove plastic tie with scissors (not included) to remove spoon.



When Remy is done with his recipe he will take a short break. Press the top of his nose again to start another cooking session. Bon appétit!



If Remy is not in use for more than 1 minute he will go into sleep mode. Press the top of his nose to restart play. When not in use, move the switch to OFF (O).

Please note: Not all objects will activate sensor. Product will not function outdoors. For best performance use only indoors. Remy is surface washable only. Do not immerse in water. Spoon is not microwave-safe.

© Disney/Pixar.

Mattel, Inc. All Rights Reserved. Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Relations 1 (800) 524-8697. service.mattel.com Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at/ Composez sans frais le 1-800-524-8697. Mattel.U.K.Ltd.Vanwall.Business.Park.Maidenhead.SL6.4UB. Helpline 01628500303 Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 P.J. Tel:03-78803817, Fax:03-78803867.

INSTRUCTION SHEET SPECIFICATIONS

Toy: RATATOUILLE LITTLE CHEF REMY
Toy No.: L2399
Part No.: 0920G1
Trim Size: 11"W x 8.5" H
Folded Size: 5.5" W x 8.5" H
Type of Fold: accordion
colors: One
Colors: Black
Paper Stock: White Offset
Paper Weight: 70 lb.
EDM No.: 001

This is a battery-operated product. 1 flyer (00007-1849G6) is required to be placed inside the packaging.