Water toys sometimes get messy. Protect play surfaces before use. Drain, rinse, clean and dry all items thoroughly before storing.

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com or call 1-800-524-8697 (US and Canada only). M-F 9AM - 7PM & SAT 11AM - 5PM. Eastern.

SERVICE.MATTEL.COM

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at/ Composez sans frais le 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB.

Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312.

Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.

Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Relations 1 (800) 524-8697.

myscene Growing Up Glam Instructions

Contents









L2730-0920 L2731 L2732 L2733

Each sold separately, subject to availability.

Please remove everything from the package and compare to the contents shown here. If any items are missing, please call 1-800-524-8697.

Keep these instructions for future reference as they contain important information.

Your doll grows up! She gets curvy!

Method 1

- Turn the knob on the doll's back clockwise. The doll goes from tween to teen!
- 2 Turning the knob counterclockwise to shorten the doll again.



Method 2
Pulling or pushing on the doll's legs will also grow or shorten the doll.

Doll cannot stand alone

Use icy cold water to change your doll's eye shadow. Warm water changes it back.

To avoid burns do not use water that is too hot, above 120°F.

Color change will last longer if you do not expose this toy to intense heat or direct sunlight for prolonged periods of time.

