



Helpful Hint

If Easy Link™ stops working or functions erratically, first unplug the USB cord from your computer. Then, plug the USB cord back into your computer.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2007 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

PRINTED IN CHINA

L6367pr-0922